

MeesMeek 6236

MeesMeek Traffic Light Visual Audio Digital Timer User Manual

This manual provides detailed instructions for the setup, operation, and maintenance of your MeesMeek Traffic Light Visual Audio Digital Timer.

INTRODUCTION

The MeesMeek Traffic Light Visual Audio Digital Timer is an innovative time management tool designed to provide clear visual and auditory cues for various activities. Its unique traffic light system helps users, especially children, understand time progression intuitively. This timer is suitable for a wide range of environments, including classrooms, home kitchens, and game settings, promoting independence and productivity.





Figure 1: MeesMeek Traffic Light Visual Audio Digital Timer

PRODUCT FEATURES

- **Visual Traffic Light System:** Counts down from 199 minutes 59 seconds to 0 or counts up like a stopwatch. The light transitions from green (most of the task time) to yellow (last 30 seconds) and then to red (countdown complete), providing a clear visual representation of time remaining. This feature aids in time comprehension without requiring numerical reading skills.
- **Visual and Audible Alerts:** Equipped with a one-touch start/stop button, an LCD display, and dedicated settings for time, alerts, and reset. Offers adjustable volume with four distinct alert options: gentle beep, chime, buzzer, and melody. Ideal for various settings, including quiet spaces, classrooms, and kitchens.
- **Safe Charging & Long-Lasting Use:** Features a USB-C rechargeable design, providing up to 36 hours of runtime on a single 4.5-hour charge. Designed without removable batteries to eliminate choking hazards, making it safe for children. A red charging indicator shows the charging status.
- **Child Safety Mode & Memory Function:** Includes a Child Lock feature that disables buttons to prevent accidental adjustments (recommended for ages 3+). The timer automatically saves previous settings, such as countdown duration and alert tone, for convenient reuse without re-programming.

- **Effective Time Management Tool:** Replaces abstract numbers with intuitive traffic light color blocks, helping users establish time rules through a "Sprint on Green, Slow Down on Yellow, Brake on Red" mechanism. Serves as a valuable teaching aid for both home and school environments, fostering independence and productivity for all users.

PACKAGE CONTENTS

Please check the package contents upon opening to ensure all items are present and undamaged.

- 1 x MeesMeek Traffic Light Visual Audio Digital Timer (Model: 6236)
- 1 x USB-C Charging Cable
- 1 x Power Adapter
- 1 x User Manual

SETUP

1. **Initial Charge:** Before first use, fully charge the timer. Connect the provided USB-C charging cable to the timer's USB-C input port (located at the bottom rear) and the other end to the power adapter. Plug the adapter into a standard wall outlet. The red charging indicator will illuminate during charging. A full charge takes approximately 4.5 hours.
2. **Power On:** Locate the ON/OFF switch on the side of the timer. Slide the switch to the "ON" position to power on the device. The LCD display will activate.

Time Visual Audio Display



Figure 2: Charging the MeesMeek Timer

OPERATING INSTRUCTIONS

Basic Operation (Start/Stop)

The large orange button on top of the timer serves as the primary Start/Stop control.

- To **Start** a countdown or count-up, press the large orange "STOP / START" button once.
- To **Stop** a running timer, press the large orange "STOP / START" button again.

Volume and Child Lock Adjustment



Figure 3: Using the Start/Stop Button

Setting the Timer

The timer can be set for countdowns up to 199 minutes and 59 seconds. Use the buttons below the LCD display to set the desired time.

- **10M Button:** Press to add 10 minutes to the timer.
- **1M Button:** Press to add 1 minute to the timer.
- **1S Button:** Press to add 1 second to the timer.
- **CUSTOM Button:** Long press this button to quickly set a custom countdown time. Refer to the LCD display for current time setting.
- **RESET Button:** Press to clear the current time setting and reset the timer to 00:00.

Press to Stop/Start Button



Figure 4: Timer Control Buttons

Adjusting Volume and Alert Tones

The timer features adjustable volume and multiple alert tone options.

- **Volume Adjustment:** Use the volume slider located on the side of the timer to increase or decrease the alert volume.
- **Alert Tone Selection:** Press the Music button (♪) next to the 10M button to cycle through the four available alert tones: gentle beep, chime, buzzer, and melody.

Child Lock Function

To prevent unintended adjustments, activate the Child Lock feature.

- Locate the ON/OFF / Lock switch on the side of the timer.
- Slide the switch to the "Lock" position (indicated by a padlock icon). This will disable all buttons except the ON/OFF switch itself.
- To deactivate Child Lock, slide the switch back to the "ON" position.



Figure 5: Volume and Child Lock Controls

Memory Function

The timer is equipped with a memory function that automatically saves the last set countdown duration and alert tone. This allows for quick reuse of frequently used settings without the need for reprogramming.

MAINTENANCE

- Cleaning:** Wipe the timer with a soft, dry cloth. Do not use abrasive cleaners, solvents, or immerse the device in water.
- Storage:** Store the timer in a cool, dry place away from direct sunlight and extreme temperatures when not in use for extended periods.
- Battery Care:** To prolong battery life, avoid fully discharging the timer frequently. Recharge it when the low battery indicator appears on the LCD display.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Timer does not turn on.	Battery is depleted.	Charge the timer using the provided USB-C cable and power adapter.
Buttons are unresponsive.	Child Lock is activated.	Slide the ON/OFF / Lock switch to the "ON" position to deactivate Child Lock.
Alarm is too quiet or too loud.	Volume setting is incorrect.	Adjust the volume using the volume slider on the side of the timer.
Timer display is blank or flickering.	Low battery or internal malfunction.	Ensure the timer is fully charged. If the problem persists, contact customer support.
Traffic lights do not change color.	Timer not running or malfunction.	Ensure the timer is started. If lights still do not change, contact customer support.

SPECIFICATIONS

Attribute	Detail
Brand	MeesMeek
Model Number	6236
Color	White
Material	Acrylonitrile Butadiene Styrene
Product Dimensions (D x W x H)	2.9" x 2.6" x 6.8" (7.37cm x 6.6cm x 17.27cm)
Item Weight	8.3 ounces (235 Grams)
Screen Size	6.8 Inches
Number of Alert Settings	4
Battery Type	Rechargeable (1 C battery included)
Charging Time	Approx. 4.5 hours
Runtime per Charge	Up to 36 hours

WARRANTY AND SUPPORT

MeesMeek stands behind the quality of its products. For information regarding warranty coverage, technical support, or any product-related inquiries, please contact our customer service team. Details can typically be found on the product packaging or the official MeesMeek website.

Please retain your proof of purchase for warranty claims.

