

[manuals.plus](#) /

› [Odoland](#) /

› [Odoland Portable Camping Fan with LED Lantern \(Model OD0730B\), 20000mAh Rechargeable User Manual](#)

Odoland OD0730B

Odoland Portable Camping Fan with LED Lantern (Model OD0730B) User Manual

Model: OD0730B | Brand: Odoland

1. INTRODUCTION

Thank you for choosing the Odoland Portable Camping Fan with LED Lantern. This device is designed to provide cooling and illumination for various outdoor and indoor activities, including camping, travel, and emergency power outages. It features a powerful fan with multiple speed settings, an integrated LED lantern with adjustable brightness and color temperatures, a 20000mAh rechargeable battery, automatic oscillation, a timer function, and a remote control for convenient operation.



Image 1.1: The Odoland Portable Camping Fan with LED Lantern, showcasing its fan and light features, remote control, and charging capability for a mobile phone.

2. SAFETY INSTRUCTIONS

- Read all instructions before use and retain for future reference.
- Do not insert fingers or any objects into the fan grille.
- Keep the device away from water or excessive moisture. This product is water-resistant, not waterproof.
- Do not disassemble, repair, or modify the device yourself. Contact customer support if service is required.
- Use only the provided charging cable or a certified equivalent.
- Keep out of reach of children.
- Do not expose the battery to extreme temperatures or direct sunlight for prolonged periods.
- Ensure proper ventilation when charging.

3. PACKAGE CONTENTS

Verify that all items are present in the package:

- Portable Camping Fan x 1
- Remote Control x 1
- Type-C Charging Cable x 1
- User Manual x 1



Image 3.1: Contents of the product package, including the fan, remote control, Type-C charging cable, and user manual.

4. PRODUCT OVERVIEW

Familiarize yourself with the components of your Odoland Portable Camping Fan:

- **Fan Head**: Contains the fan blades and LED light ring.
- **Control Panel**: Located on the base, with buttons for power, fan speed, light mode, oscillation, and timer.
- **LED Indicator Lights**: Display battery level and fan speed.
- **USB & Type-C Charging Port**: For charging the fan and for emergency power bank function.

- **360° Rotation Hanging Hook:** Integrated into the base for versatile placement.
- **Remote Control:** For convenient operation from a distance.



Image 4.1: The fan head can oscillate 90 degrees automatically and swivel 270 degrees manually, providing flexible airflow direction.

5. SETUP

5.1 Initial Charging

Before first use, fully charge the fan. Connect the Type-C charging cable to the fan's charging port and to a USB power adapter (not included). The LED indicators on the control panel will show the charging progress. A full charge typically takes 9-10 hours.

5.2 Placement Options

- **Table Mount:** Place the fan on a flat, stable surface.
- **Freestanding:** The fan's base provides stability for freestanding use.
- **Hanging Hook:** Utilize the integrated 360° rotation hook to hang the fan inside a tent, from a branch, or other suitable

locations.

6. OPERATING INSTRUCTIONS

6.1 Power On/Off

Press the power button on the control panel or the remote control to turn the fan on or off.

6.2 Fan Speed Adjustment

The fan has 4 speed settings. Press the fan speed button on the control panel or remote control repeatedly to cycle through speeds 1 (low) to 4 (high). The LED indicators will show the current speed.



Image 6.1: The fan offers 4 speed settings, providing approximately 30 hours of operation at Speed 1, 16 hours at Speed 2, 10 hours at Speed 3, and 8 hours at Speed 4.

6.3 LED Lantern Operation

Press the light button on the control panel or remote control to turn the LED lantern on/off and cycle through light modes:

- **3 Lighting Colors:** Warm, Cold, Warm & Cold combined.
- **3 Brightness Levels:** Low, Medium, Strong.

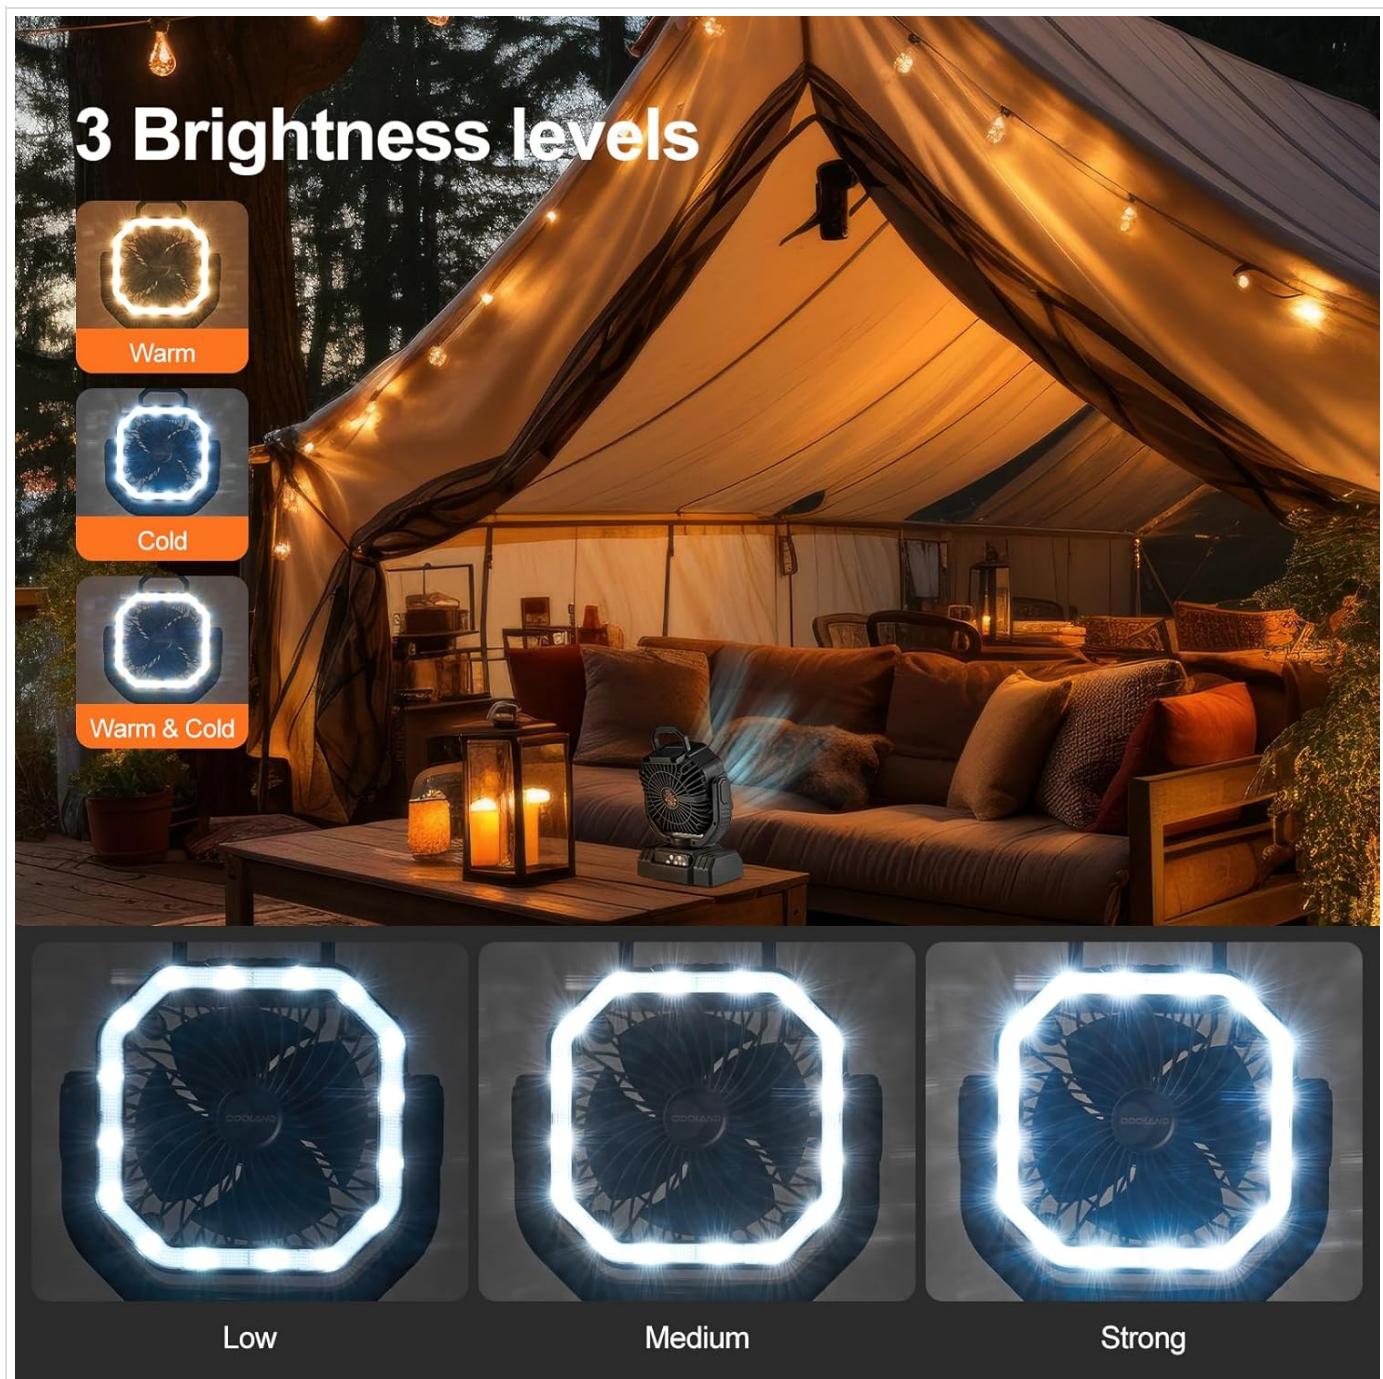


Image 6.2: The LED lantern features three brightness levels (Low, Medium, Strong) and three color temperatures (Warm, Cold, Warm & Cold).

6.4 Automatic Oscillation

Press the oscillation button on the control panel or remote control to activate the 90° automatic oscillation feature. Press again to stop oscillation. The fan head can also be manually swiveled 270° for precise directional airflow.

6.5 Timer Function

Press the timer button on the control panel or remote control to set the fan to turn off automatically after a specified duration. Available timer settings are 1 hour, 2 hours, 4 hours, and 6 hours.

6.6 Remote Control

The remote control allows operation of all fan and light functions from up to 15 feet away. Ensure the remote is pointed towards

the fan's control panel for optimal response.

6.7 Buzzer Control

To turn off the audible buzzer sound for button presses, long-press the "Rotate" button on the control panel or remote control.

7. CHARGING AND POWER BANK FUNCTION

7.1 Charging the Fan

Connect the Type-C charging cable to the fan's input port and a USB power source. The battery indicator lights on the control panel will illuminate to show the charging status. All lights will be solid when fully charged.

7.2 Emergency Power Bank

The fan's 20000mAh battery can be used as an emergency power bank. Connect your mobile phone, GPS, or other USB-powered devices to the fan's USB output port using your device's charging cable. This feature is intended for emergency use and may reduce the fan's operating time.



Image 7.1: The fan can serve as an emergency power bank to charge devices like smartphones, indicated by the charging icon on the phone screen.

8. MAINTENANCE

8.1 Cleaning

- Ensure the fan is turned off and unplugged before cleaning.
- Wipe the exterior of the fan with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- To clean the fan blades, carefully remove the front grille if possible (refer to product design for specific instructions, if applicable). Use a soft brush or cloth to remove dust.
- Do not immerse the fan in water.

8.2 Storage

When not in use for extended periods, store the fan in a cool, dry place. It is recommended to charge the battery to approximately 50% before storage to prolong battery life.

9. TROUBLESHOOTING

Problem	Possible Cause	Solution
Fan does not turn on.	Battery is depleted.	Charge the fan fully.
Fan does not turn on.	Power button not pressed correctly.	Ensure the power button is pressed firmly.
LED lantern does not work.	Battery is depleted.	Charge the fan fully.
Remote control not working.	Remote battery is low or depleted.	Replace the remote control battery (if applicable) or ensure line of sight to the fan.
Remote control not working.	Obstruction between remote and fan.	Remove any obstructions and ensure the remote is within 15ft.
Fan makes unusual noise.	Obstruction in fan blades.	Turn off and unplug the fan. Carefully check for and remove any obstructions.
Charging is slow or not working.	Faulty cable or power adapter.	Try a different Type-C cable and USB power adapter.

10. SPECIFICATIONS

- **Model:** OD0730B
- **Battery Capacity:** 20000mAh (rechargeable lithium-ion polymer)
- **Fan Speeds:** 4 levels
- **LED Lantern:** 3 lighting colors, 3 brightness levels
- **Oscillation:** 90° automatic
- **Swivel:** 270° manual
- **Timer Settings:** 1H, 2H, 4H, 6H
- **Remote Control Range:** Up to 15 ft

- **Charging Time:** Approximately 9-10 hours
- **Battery Life (Fan Only):** 8-30 hours (depending on speed)
- **Voltage:** 3.7 Volts (DC)
- **Material:** Plastic
- **Item Weight:** 2.35 pounds (1.07 Kilograms)
- **Dimensions:** 9.96 x 8.23 x 4.61 inches (Package Dimensions)
- **Water Resistance Level:** Water Resistant

11. WARRANTY AND SUPPORT

This Odoland product comes with a 30-day warranty from the date of purchase. This warranty covers manufacturing defects and issues arising from normal use. It does not cover damage caused by misuse, accidents, unauthorized modifications, or improper maintenance.

For warranty claims, technical support, or any questions regarding your product, please contact Odoland customer service through the retailer where the product was purchased or visit the official Odoland website for contact information.

Please retain your proof of purchase for warranty validation.