

iJoy 810146469544

iJoy Disney Stitch Disco Party Bluetooth Over-Ear Headphones User Manual

Model: 810146469544

1. INTRODUCTION

This manual provides instructions for the safe and effective use of your iJoy Disney Stitch Disco Party Bluetooth Over-Ear Headphones. Please read this manual thoroughly before operating the device and retain it for future reference.



Image 1.1: Front view of the iJoy Disney Stitch Disco Party Bluetooth Over-Ear Headphones.

2. PACKAGE CONTENTS

Verify that all items are present in the package:

- iJoy Disney Stitch Disco Party Bluetooth Over-Ear Headphones
- USB Charging Cable
- Auxiliary Audio Cable
- Protective Carrying Case
- User Manual

3. PRODUCT OVERVIEW

Familiarize yourself with the headphone components and controls.

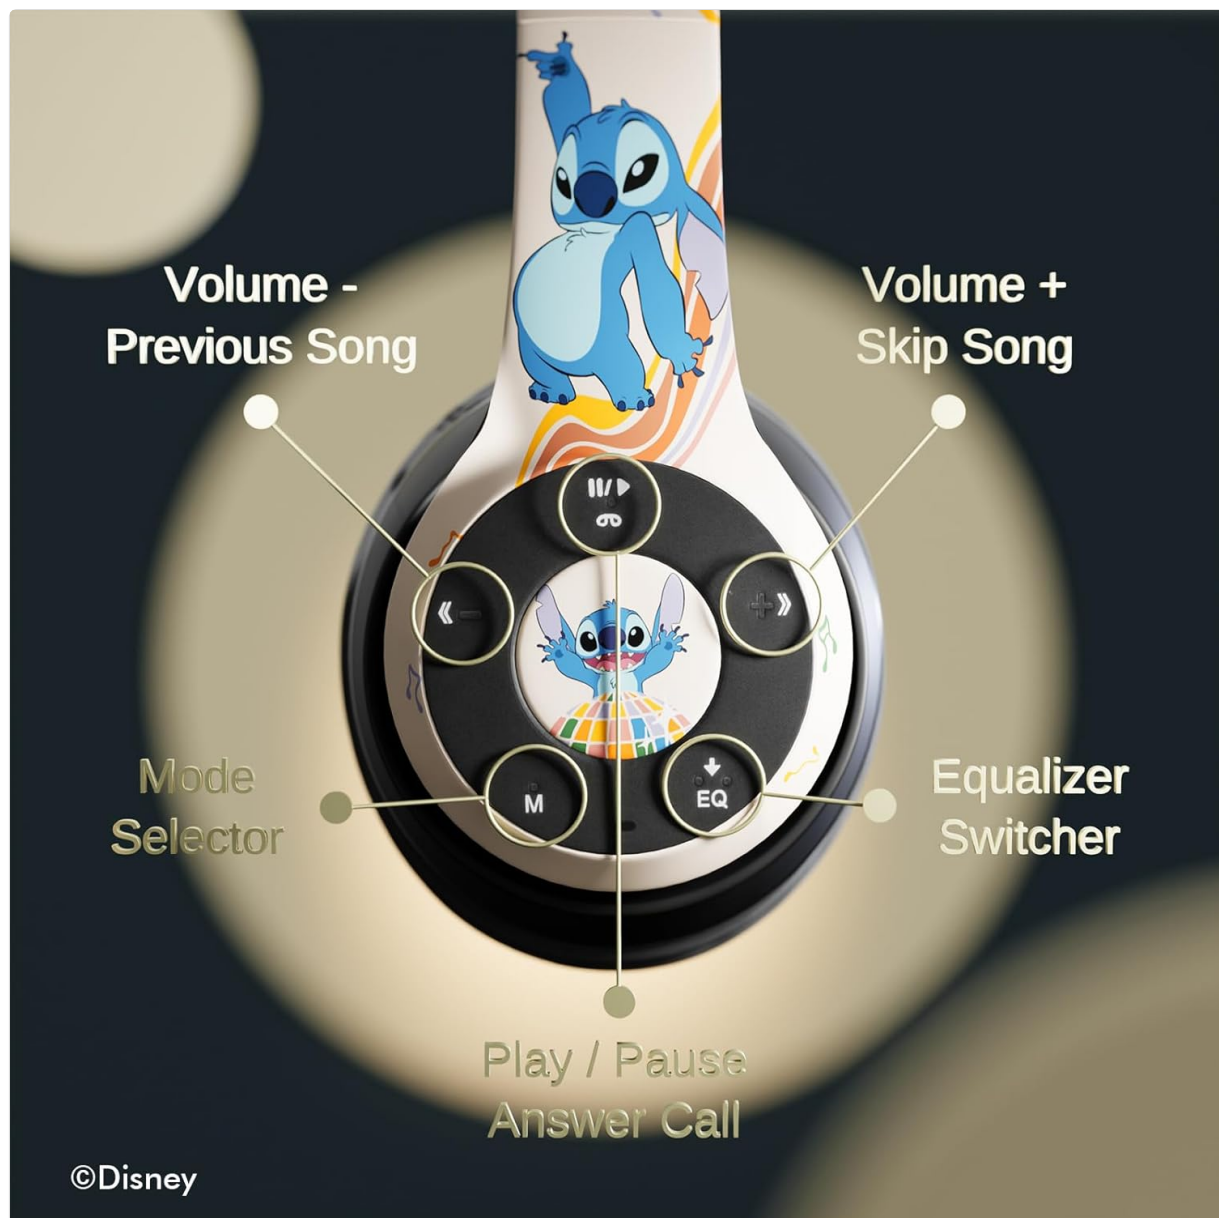


Image 3.1: Detailed view of the control buttons on the right earcup.

Control Functions:

- **Volume - / Previous Song:** Short press for volume down, long press for previous track.
- **Volume + / Skip Song:** Short press for volume up, long press for next track.
- **Play / Pause / Answer Call:** Short press to play/pause music or answer/end a call. Long press to reject a call.
- **Mode Selector (M):** Press to switch between Bluetooth, Micro SD, and FM Radio modes.
- **Equalizer Switcher (EQ):** Press to cycle through available equalizer presets.
- **LED Indicator:** Displays power, charging, and Bluetooth connection status.
- **Built-in Microphone:** For hands-free calling.
- **Micro SD Card Slot:** For direct audio playback from a Micro SD card.

4. SETUP

4.1. Charging the Headphones

Before initial use, fully charge the headphones. Connect the supplied USB charging cable to the charging port on the headphones and to a USB power source (e.g., computer USB port, wall adapter). The LED

indicator will illuminate during charging and change color or turn off when charging is complete. A full charge provides approximately 15 hours of playtime.



Image 4.1: The headphones offer up to 15 hours of audio playback on a single charge.

4.2. Bluetooth Pairing

1. Ensure the headphones are charged and powered off.
2. Press and hold the Power button until the LED indicator flashes, indicating pairing mode.
3. On your device (smartphone, tablet, etc.), enable Bluetooth and search for available devices.
4. Select "iJoy Stitch Headphones" from the list of found devices.
5. Once connected, the LED indicator will stop flashing and remain solid.



Image 4.2: The headphones are compatible with various Bluetooth-enabled devices.

4.3. Micro SD Card Usage

Insert a Micro SD card (not included) into the Micro SD card slot on the headphones. The headphones will automatically switch to Micro SD mode and begin playing audio files from the card. Use the Mode button to switch to this mode if already in another mode.

5. OPERATING INSTRUCTIONS

5.1. Power On/Off

- **Power On:** Press and hold the Power button until the LED indicator illuminates.
- **Power Off:** Press and hold the Power button until the LED indicator turns off.

5.2. Music Playback

- **Play/Pause:** Press the Play/Pause button.
- **Next Track:** Long press the Volume + button.
- **Previous Track:** Long press the Volume - button.
- **Volume Up:** Short press the Volume + button.

- **Volume Down:** Short press the Volume - button.

5.3. Call Management

- **Answer/End Call:** Press the Play/Pause button.
- **Reject Call:** Long press the Play/Pause button.

5.4. FM Radio Function

In FM Radio mode (selected via the Mode button), the headphones can scan and play FM radio stations. Use the Volume +/- buttons to change stations or adjust volume.

5.5. Equalizer Function

Press the EQ button to cycle through different audio equalizer presets, adjusting the sound profile to your preference.

6. MAINTENANCE

6.1. Cleaning

Wipe the headphones with a soft, dry cloth. Do not use abrasive cleaners or solvents. Avoid exposing the headphones to excessive moisture.

6.2. Storage

When not in use, store the headphones in the provided protective carrying case. The foldable design allows for compact storage, protecting them from damage.



Image 6.1: The headphones feature a foldable design for easy storage and portability.

7. TROUBLESHOOTING

If you encounter issues with your headphones, refer to the following common problems and solutions:

- **No Power:** Ensure the headphones are fully charged. Connect to a power source and check the LED indicator.
- **Cannot Pair via Bluetooth:**
 - Ensure the headphones are in pairing mode (LED flashing).
 - Verify Bluetooth is enabled on your device.
 - Move the headphones closer to your device.
 - Turn off and on both the headphones and your device, then attempt pairing again.
- **No Sound:**
 - Check the volume level on both the headphones and your connected device.
 - Ensure the headphones are correctly paired or the audio cable is fully inserted.
 - If using a Micro SD card, ensure it contains compatible audio files and is inserted correctly.
- **Poor Sound Quality:**

- Move closer to your Bluetooth device to reduce interference.
- Ensure there are no obstructions between the headphones and your device.
- Try a different audio source or file.

8. SPECIFICATIONS

Model Name	Disney Stitch Disco Party
Item Model Number	810146469544
Connectivity Technology	Wireless (Bluetooth)
Wireless Communication Technology	Bluetooth
Age Range (Description)	Adult, Kid
Control Type	Volume Control, Touch
Special Features	Built-in Radio Receiver, Foldable and Adjustable headband, Micro SD Card Plug-in, Microphone Included
Item Weight	0.26 Kilograms (9.1 ounces)
Batteries	1 Lithium Polymer battery (included)
Frequency Range	20 Hz - 20,000 Hz
Water Resistance Level	Not Water Resistant
Ear Placement	Over Ear
Noise Control	Sound Isolation

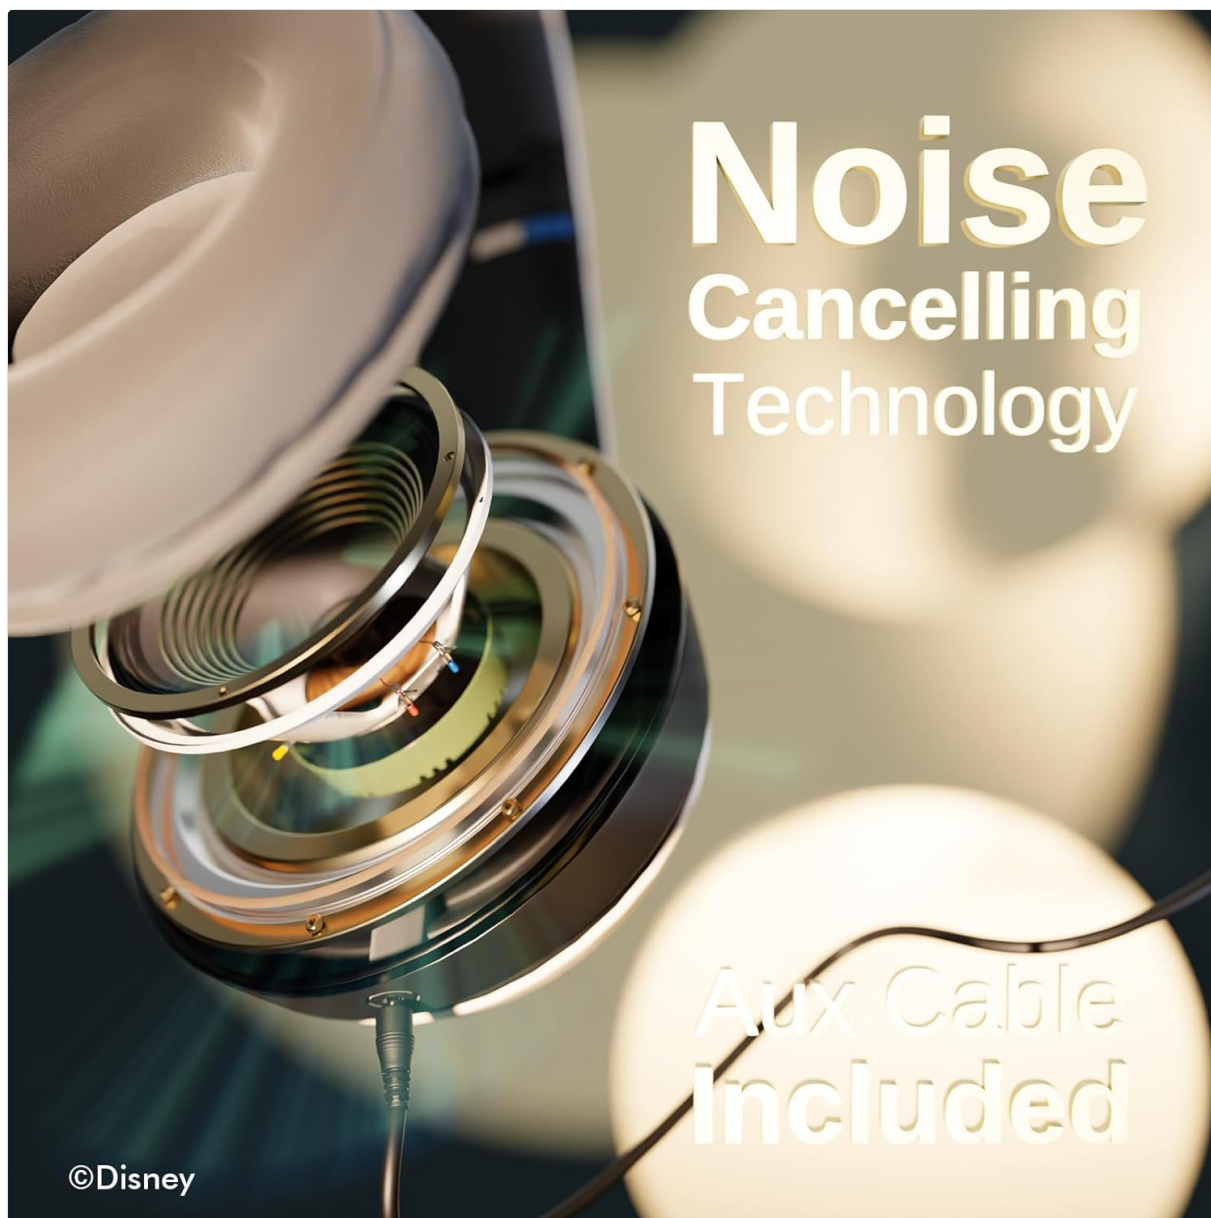


Image 8.1: The headphones feature sound isolation and include an auxiliary cable for wired connection.

9. SAFETY INFORMATION







Observe the following safety guidelines to prevent damage to the device or personal injury:

- Do not expose the headphones to extreme temperatures, direct sunlight, or excessive moisture.
- Avoid dropping or subjecting the headphones to strong impacts.
- Do not disassemble or attempt to repair the headphones yourself. This may void the warranty and cause damage.
- Adjust volume to a moderate level to prevent hearing damage. Prolonged exposure to loud sounds can cause permanent hearing loss.
- Do not use headphones while driving, cycling, or in situations where inability to hear ambient sounds could be dangerous.

10. WARRANTY AND SUPPORT

This product is covered by a manufacturer's warranty. For specific warranty details, please refer to the documentation included with your purchase or contact iJoy customer support. For technical assistance or inquiries, please visit the official iJoy website or contact their customer service department.

Related Documents - 810146469544

	<p>iJoy Muse Foldable Wireless Headset User Manual</p> <p>User manual for the iJoy Muse Foldable Wireless Headset, covering setup, operation, features, specifications, and warranty information.</p>
	<p>iJoy Open Mic Karaoke Microphone User Manual and Features</p> <p>Get detailed instructions, specifications, and safety information for the iJoy Open Mic Bluetooth karaoke microphone. Learn how to connect, record, and use its features. Includes warranty details.</p>
	<p>iJoy Mini+ Massage Chair: Use, Care, and Maintenance Manual</p> <p>Comprehensive user manual for the iJoy Mini+ robotic massage chair, covering setup, operation, safety guidelines, maintenance, and warranty information for optimal relaxation and well-being.</p>
	<p>IJOY OPEN MIC Bluetooth Karaoke Microphone User Manual</p> <p>Comprehensive user manual for the IJOY OPEN MIC Bluetooth Karaoke Microphone, detailing its functions, specifications, wireless and recording instructions, battery safety, and disposal guidelines.</p>
	<p>iJoy 550 Massage Chair: Use & Care Manual</p> <p>Comprehensive guide to operating, assembling, and maintaining your iJoy 550 massage chair by Interactive Health. Learn about safety features, massage modes, and warranty information.</p>
	<p>iJoy-250 Turbo2 Use & Care Manual: Interactive Health Massage Chair</p> <p>Comprehensive use and care manual for the Interactive Health iJoy-250 Turbo2 robotic massage chair. Learn about safety instructions, operation, features, maintenance, and warranty for your robotic massage experience.</p>