

[Manuals.plus](#) /

› [SatelliteSale](#) /

› SatelliteSale Remote Control User Manual for RC73, RC72, RC71 Replacements

SatelliteSale RC73/RC72/RC71 Replacement Remote Control

SatelliteSale Remote Control User Manual

Replacement for DirecTV RC73, RC72, RC71, and Compatible Receivers

1. INTRODUCTION

Thank you for choosing the SatelliteSale Remote Control. This remote is designed as a replacement for various DirecTV and AT&T receivers, offering wide compatibility and ease of use. This manual provides detailed instructions for setting up, operating, and troubleshooting your new remote control.

2. IMPORTANT SAFETY INFORMATION

- Do not expose the remote control to direct sunlight, heat sources, or extreme temperatures.
- Avoid dropping the remote control or subjecting it to strong impacts.
- Do not attempt to disassemble or modify the remote control. This will void the warranty.
- Keep batteries out of reach of children. If swallowed, seek immediate medical attention.
- Dispose of used batteries according to local regulations.

3. PACKAGE CONTENTS

Please verify that all items are present in your package:

- SatelliteSale Remote Control
- 2x AA Batteries



Image: The SatelliteSale Remote Control shown alongside two AA batteries, indicating the included accessories.

4. PRODUCT OVERVIEW

The SatelliteSale Remote Control is designed for comfortable handling and intuitive operation. It features a durable construction and an enhanced signal range for reliable performance.





Image: Front view of the SatelliteSale Remote Control, showcasing its ergonomic design and button layout.

5. COMPATIBILITY

This replacement remote control offers wide compatibility with various DirecTV and AT&T receivers. It is fully compatible with:

- **DirecTV Remote Models:** RC73, RC72, RC71
- **DirecTV and AT&T Receivers:** H20, H21, H23, H24, H25, H26, HR20, HR21, HR22, HR23, HR24, HR34, HR44, HR54, C41, C51, C61
- **Other Devices:** Genie DVRs, Mini Genies

6. SETUP INSTRUCTIONS

6.1. Battery Installation

To power your remote control, install the included AA batteries:

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards to open the compartment.
3. Insert the two AA batteries, ensuring the positive (+) and negative (-) terminals match the diagrams inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.

6.2. Pairing with Your Receiver

The SatelliteSale Remote Control is designed for simple pairing with your DirecTV or AT&T receiver. Follow these general steps:

1. Ensure your receiver is powered on.
2. Point the remote control at your receiver.
3. Press and hold the **MUTE** and **SELECT** buttons simultaneously until the green light at the top of the remote flashes twice.
4. Enter the 5-digit code for your DirecTV receiver. Common codes include **987** (for RF mode) or **981** (for IR mode). If these do not work, consult your receiver's manual or the DirecTV website for specific codes.
5. Once the code is entered, the green light should flash twice again, indicating successful pairing.
6. Test the remote's functionality by pressing various buttons. If it does not respond, repeat the pairing process or try a different code.

Note: For advanced programming (e.g., controlling your TV's volume), you may need to refer to your TV's manual or the DirecTV remote programming guide for specific instructions and codes.

7. OPERATING INSTRUCTIONS

This section outlines the primary functions of the buttons on your SatelliteSale Remote Control.



Image: Detailed diagram of the SateliteSale Remote Control with labels for each button and its corresponding function.

Button	Function
ON/OFF	Turns both the DirecTV Receiver and TV ON or OFF at the same time. (Remote must be programmed for TV/DVR Still Records when off.)
GUIDE	Press once for On-Screen Guide. Press twice for programming grouped into categories.
MENU	Displays the main menu.
LIST	Displays the list of your recorded programs.
ARROWS (Up, Down, Left, Right)	Navigate within menus. Up/Down to move within a menu. Left/Right to move within a menu. Left arrow also functions as 'back' to return to previous menu.
EXIT	Exits the menu and returns to previously viewed channel. Stops playback while viewing recorded content.

Button	Function
SELECT	Selects the item highlighted on screen.
INFO	Displays information about the program currently playing or highlighted in the On-Screen Guide.
VOL (Volume Up/Down)	Increases or decreases the volume level.
CH (Channel Up/Down)	Changes TV channels. Scrolls a full page while viewing the On-Screen Guide.
PREV	Returns to the previously viewed channel.
MUTE	Mutes the sound.
RECORD	Records programming now playing or highlighted in the On-Screen Guide. Press twice to record the entire series.
RED CIRCLE BUTTON (R)	Press to delete recorded shows from your playlist. Access ScoreGuide while viewing any sports channel.
REPLAY	Replays the previous six seconds.
REWIND	Rewinds at increasing speeds up to four times. Press and hold to jump to a previous tick mark.
PLAY/PAUSE	Plays or pauses current program.
FAST-FORWARD	Fast-forwards at increasing speeds up to four times.
DASH (-)	Press DASH twice to delete recorded shows from your list.
ENTER (Input)	Confirms selections or enters input.
Number Pad (0-9)	Direct channel entry and other numerical inputs.

8. TROUBLESHOOTING

If you encounter issues with your remote control, please refer to the following common problems and solutions:

- **Remote not responding:**
 - Ensure batteries are correctly installed with proper polarity.
 - Replace old batteries with new ones.
 - Ensure there are no obstructions between the remote and the receiver.
 - Re-pair the remote with your receiver following the instructions in Section 6.2.
- **Remote controls receiver but not TV (e.g., volume):**
 - The remote may need to be programmed specifically for your TV. Consult your TV's manual or DirecTV's remote programming guide for TV codes and setup instructions.
- **Buttons are sticky or unresponsive:**
 - Clean the remote's surface with a soft, dry cloth. Avoid liquids.

9. SPECIFICATIONS

Feature	Detail
Brand	SatelliteSale
Model	Replacement for RC73, RC72, RC71
Item Weight	4.2 ounces
Package Dimensions	6.5 x 2.32 x 2.17 inches
Power Source	2x AA Batteries (included)
Compatibility	DirectV Genie DVRs, Mini Genies, and various DirecTV/AT&T receivers (H20-H26, HR20-HR24, HR34, HR44, HR54, C41, C51, C61)

10. WARRANTY AND SUPPORT

SatelliteSale products are manufactured to high-quality standards. For specific warranty information, please refer to the product packaging or contact SatelliteSale customer support directly. If you require further assistance with setup, operation, or troubleshooting, please visit the official SatelliteSale website or contact their customer service department.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0DNNTQ4DY>

More documents and user manuals: <https://manuals.plus/>