

[Manuals.plus](#) /

› [ELIVED](#) /

› ELIVED Motorized Ceiling TV Mount Instruction Manual for 40-70 Inch TVs (Model: B0DNQ2BGDJ)

ELIVED B0DNQ2BGDJ

ELIVED Motorized Ceiling TV Mount Instruction Manual

Brand: ELIVED | **Model:** B0DNQ2BGDJ

1. INTRODUCTION

This manual provides comprehensive instructions for the installation, operation, and maintenance of your ELIVED Motorized Ceiling TV Mount. This electric drop-down TV mount is designed for 40-70 inch televisions weighing up to 88 lbs, supporting VESA mounting patterns from 200x100mm to 600x500mm. It features remote control operation, adjustable tilt, and a space-saving design suitable for various ceiling types.

2. SAFETY INFORMATION

- **Weight Capacity:** Do not exceed the maximum weight capacity of 88 lbs (40 kg). Overloading may result in serious injury or product damage.
- **TV Compatibility:** Ensure your TV's size (40-70 inches) and VESA mounting pattern (200x100mm to 600x500mm) are compatible with this mount.
- **Ceiling Type:** This mount is suitable for installation on wood ceilings or concrete ceilings. **It is NOT for ceilings with dual studs.**
- **Professional Installation:** If you are unsure about the installation process, consult a qualified professional.
- **Anti-Collision Feature:** The mount is equipped with anti-collision sensors that stop movement within 0.5 seconds if an obstacle is detected, preventing damage to the TV or injury.

3. PACKAGE CONTENTS

Verify that all components are present before beginning installation:

- Motorized Ceiling TV Mount Assembly
- Wireless Remote Control
- AC Adapter
- TV Mounting Brackets (2 pieces)
- Assorted Screws, Washers, Anchors, and Spacers for various TV models and ceiling types

- Installation Template
- Screwdriver and Allen Wrench
- Cable Ties



Figure 3.1: Main components of the ELIVED Motorized Ceiling TV Mount.

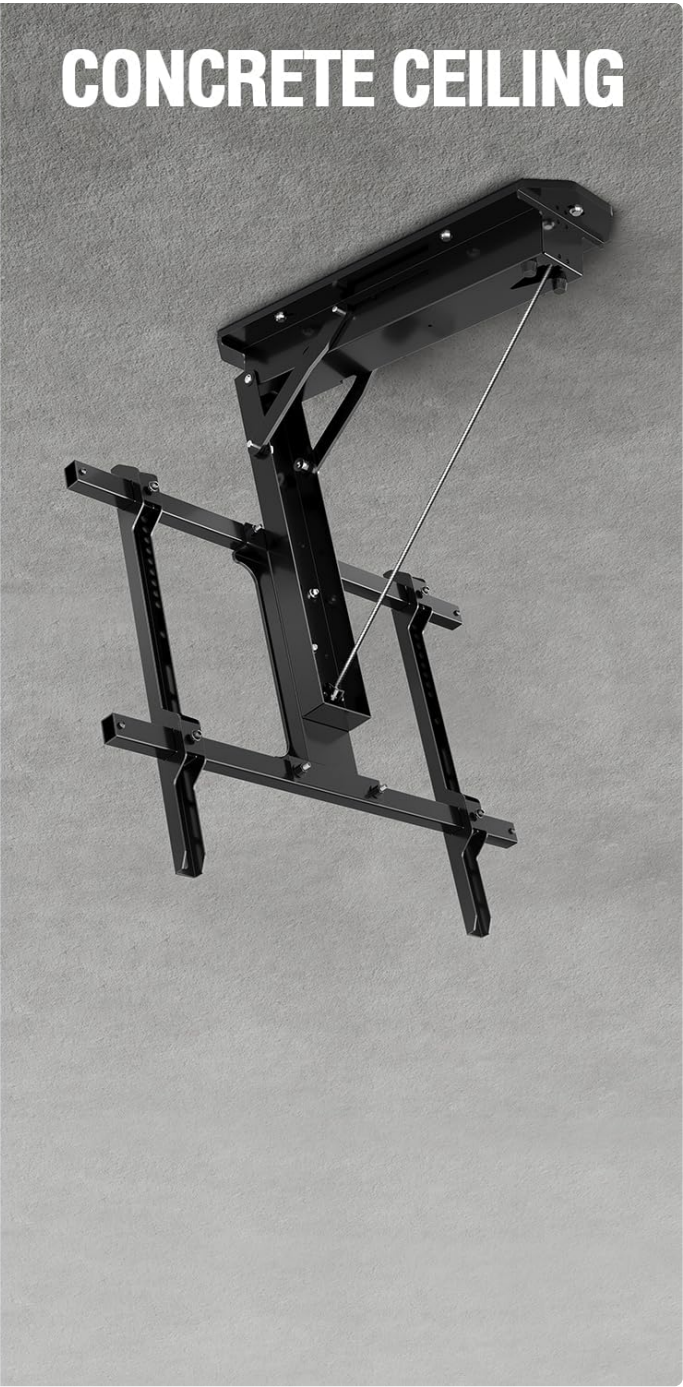


Figure 3.2: Unboxed components including the main mount, brackets, and hardware.

4. SPECIFICATIONS

Feature	Specification
Brand	ELIVED
Model	B0DNQ2BGDJ
Mounting Type	Ceiling Mount
Movement Type	Articulating
Material	Alloy Steel
Color	Black

Compatible TV Sizes	40-70 inches
Weight Capacity	Up to 88 lbs (40 kg)
VESA Patterns	200x100mm to 600x500mm
Maximum Tilt Angle	75 Degrees
Leveling Adjustment	±2 Degrees
Remote Control Range	Up to 98 ft (30 m)
Folded Height	5.9 inches (15 cm)
Motor Noise Level	48 dB

5. SETUP AND INSTALLATION

The installation process requires careful planning and adherence to instructions. A drilling template and labeled hardware are included to assist you. It is recommended to have two people for installation, especially for larger TVs.

5.1 Pre-Installation Checks

- **Verify TV Compatibility:** Confirm your TV's size, weight, and VESA pattern meet the mount's specifications.
- **Identify Ceiling Structure:** Locate wood studs or ensure the concrete ceiling is suitable for drilling and anchoring. Do not install on ceilings with dual studs.
- **Power Access:** Ensure a power outlet is accessible near the installation area for the mount's AC adapter.

5.2 Mounting the Ceiling Plate

1. Use the provided drilling template to mark the pilot holes on your ceiling.
2. Drill pilot holes according to the template.
3. Secure the main ceiling plate of the mount to the ceiling using the appropriate screws and anchors for your ceiling type. Ensure it is firmly attached.

5.3 Attaching TV Brackets

1. Attach the TV mounting brackets to the back of your television using the screws and spacers that match your TV's VESA pattern.
2. Ensure the brackets are securely fastened and evenly aligned.

5.4 Hanging the TV

1. Carefully lift the television and hook the attached brackets onto the main mount assembly on the ceiling.
2. Secure the TV to the mount using the safety screws or locking mechanisms provided.
3. Connect the AC adapter to the mount and plug it into a power outlet.



Motorized Design


Figure 5.1: The motorized mount in action, demonstrating its tilt capability.



Figure 5.2: VESA compatibility and maximum load capacity details.



Figure 5.3: The mount's versatility for installation on flat and pitched ceilings.

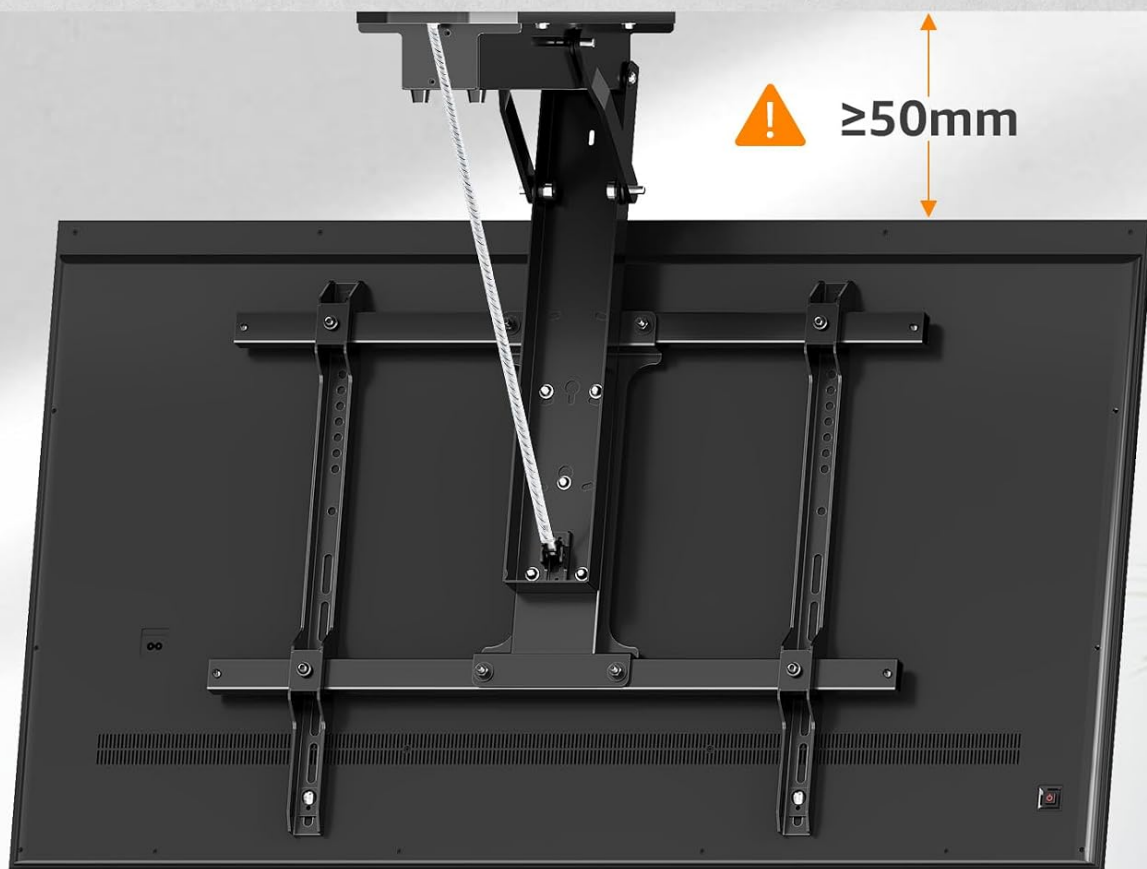

Note: Clearance between the ceiling and top edge of TV should be no less than **50mm** when TV is in the fully lowered position.

Figure 5.4: Important note on minimum clearance between the TV and ceiling.

5.5 Installation Video Overview

Video 5.1: A seller-provided overview of the Electric Ceiling TV Mount, including unboxing and installation steps.

6. OPERATING INSTRUCTIONS

Your ELIVED Motorized Ceiling TV Mount is operated via a wireless remote control, offering convenience and customizable viewing angles.

6.1 Remote Control Functions

- **Up/Down Buttons:** Press to raise or lower the TV mount.
- **Stop Button:** Press to halt the TV mount at any desired position.
- **Memory Presets (M1/M2):** Long press to save your preferred viewing angles. Short press to recall a saved position.
- **Tilt Adjustment:** The mount allows for an extension from 0° to 75° to optimize viewing and reduce glare.

- **Leveling:** Fine-tune the TV's horizontal position with $\pm 2^\circ$ leveling adjustment after installation.

Sensitive Remote Control



Figure 6.1: The wireless remote control for operating the TV mount.



Figure 6.2: Demonstrating remote control usage for adjusting the TV mount.

6.2 Anti-Collision Feature

The mount is equipped with an advanced anti-collision system. If the TV encounters an obstacle during movement, it will automatically stop within 0.5 seconds to prevent damage to the TV or potential injury.

6.3 Operation Video Overview

Video 6.1: A seller-provided video demonstrating the motorized operation and tilt functionality of the ceiling TV mount.

7. MAINTENANCE

- **Cleaning:** Regularly wipe the mount and TV with a soft, dry cloth to remove dust. Avoid using harsh chemicals or abrasive cleaners.
- **Inspection:** Periodically check all screws and connections to ensure they remain tight and secure.
- **Cable Management:** Ensure all cables are properly managed and not interfering with the mount's movement.

8. TROUBLESHOOTING

- **Mount Not Responding to Remote:**
 - Check if the AC adapter is securely plugged into both the mount and the power outlet.
 - Ensure the remote control has fresh AAA batteries (not included).
 - Verify there are no obstructions between the remote and the mount's receiver.
- **Mount Stops During Movement:**
 - This may indicate the anti-collision feature has been activated. Check for any obstacles in the path of the TV.
 - Remove any obstructions and try operating the mount again.
- **TV Not Level:**
 - Use the remote control's leveling adjustment feature ($\pm 2^\circ$) to fine-tune the TV's horizontal position.

9. WARRANTY AND SUPPORT

The ELIVED Motorized Ceiling TV Mount comes with a **5-year warranty**, ensuring peace of mind regarding product quality and performance.

For any questions regarding mount installation, product selection, or technical support, please feel free to contact our U.S.-based product support team. Contact information can be found on the product packaging or the ELIVED official website.

© 2024 ELIVED. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question