

[Manuals.plus](#) /

› [TOUCHBeauty](#) /

› TOUCHBeauty Portable Nail Dryer TB-2130WH Instruction Manual

TOUCHBeauty 2130WH

TOUCHBeauty Portable Nail Dryer TB-2130WH Instruction Manual

Model: TB-2130WH

1. SAFETY INFORMATION

Please read all instructions carefully before using the device. Keep this manual for future reference.

- This device is designed for drying regular nail polishes only. Do not use with gel polishes or other nail treatments requiring UV/LED curing.
- Do not insert objects into the air vents.
- Unplug or remove batteries from the unit when not in use for extended periods.
- Keep the device away from water or other liquids.
- Do not attempt to disassemble or repair the device yourself. Contact customer support if issues arise.
- Ensure proper battery polarity when installing.

2. PRODUCT OVERVIEW

The TOUCHBeauty Portable Nail Dryer TB-2130WH is a compact, battery-operated device designed to quickly air dry regular nail polishes using a fan and LED light combination.



Image 2.1: Front view of the TOUCHBeauty Portable Nail Dryer TB-2130WH.

Key Features:

- **Fast Air Drying:** Features a 3.0M/s fan speed and LED combination for efficient drying of regular nail polishes.
- **LED Lighting Design:** Allows observation of nail drying status.
- **Safe Operation:** No UV light design ensures safety for eyes and hands.
- **Easy to Use:** One-touch press design for simple operation.

- **Battery Operated:** Powered by 2 AAA batteries (not included), offering portability.
- **Compact Size:** Mini and lightweight design for easy carrying.



Image 2.2: Visual representation of key features including no UV lights, wider entrance, simple switch, and no bottom design.

3. PACKAGE CONTENTS

- 1 x TOUCHBeauty Portable Nail Dryer TB-2130WH

- 1 x User Manual

Note: 2 AAA batteries are required and not included in the package.

4. SETUP

Battery Installation:

1. Twist the top cover of the device anti-clockwise to open it.
2. Insert 2 AAA batteries into the battery compartment, ensuring correct polarity (+/-).
3. Place the top cover back onto the device and twist it clockwise to lock it securely.

Small Size

6.1*5.7*3.3 inch

4.55
ounce

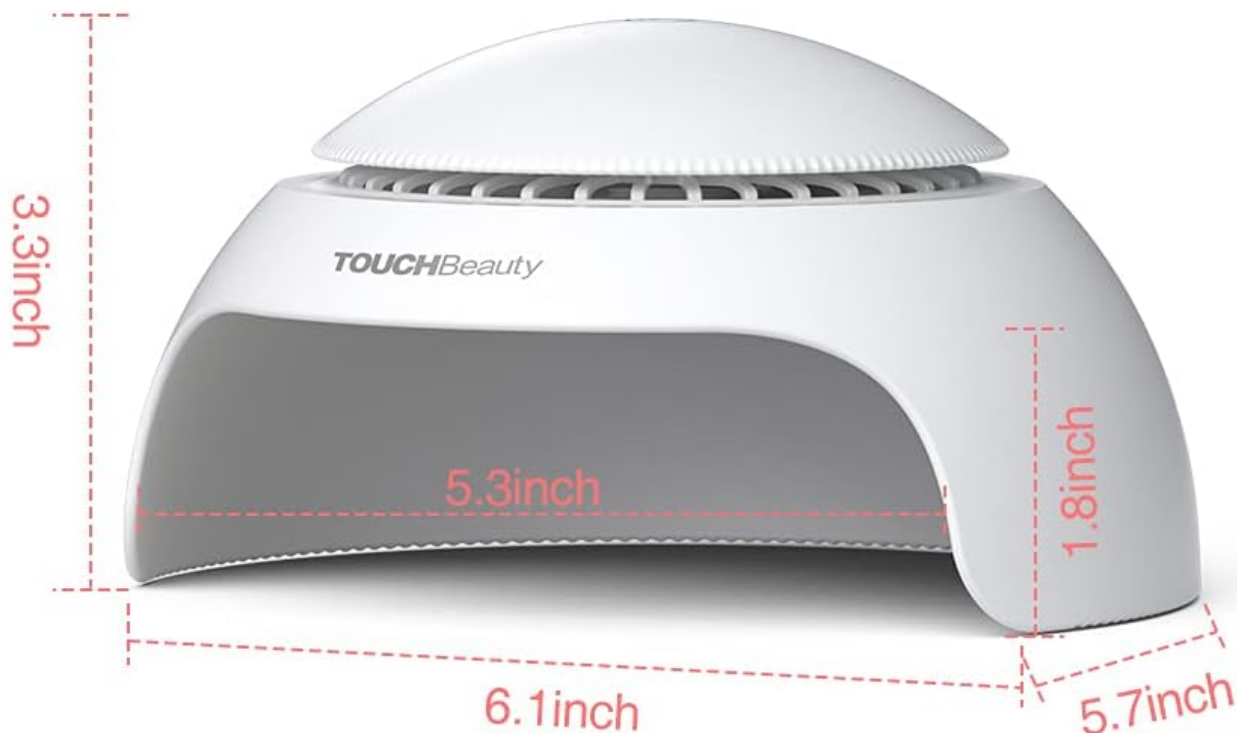
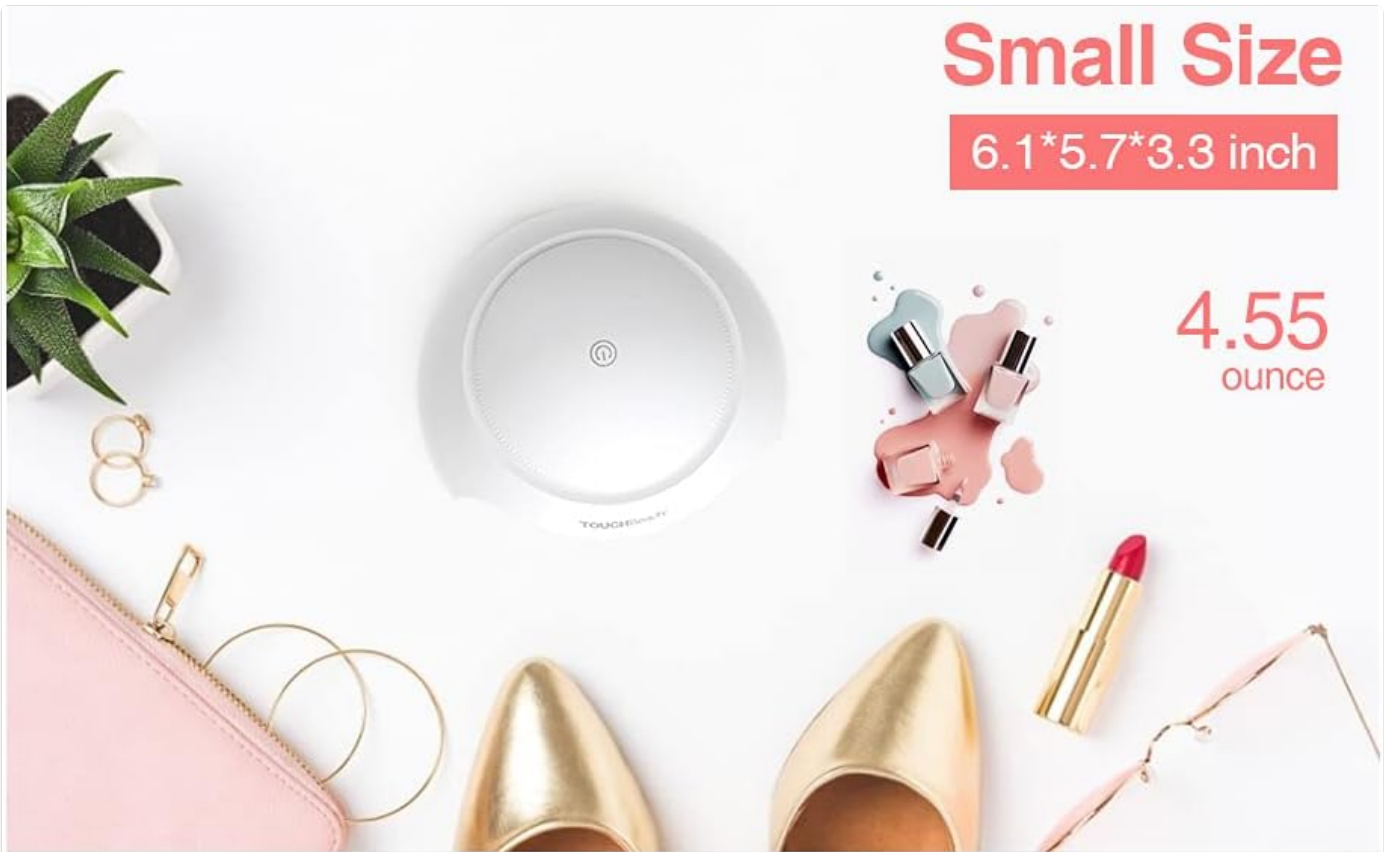


Image 4.1: View of the battery compartment showing where to insert 2 AAA batteries.

Your browser does not support the video tag.

Video 4.1: Demonstration of battery installation and initial setup of the TOUCHBeauty Portable Nail Dryer.

5. OPERATING INSTRUCTIONS

Drying Nails:

1. Apply your regular nail polish as desired.
2. Place your hand or foot under the nail dryer.
3. Gently press the top cover of the device once to activate the fan and LED light.
4. Allow your nails to dry. The recommended drying time is approximately 60-180 seconds per coat, depending on the polish thickness and type.
5. The device will automatically turn off after a set period, or you can press the cover again to stop it manually.



Image 5.1: A hand placed under the nail dryer for the drying process.



Image 5.2: An illustration indicating a drying time of 180 seconds.

Your browser does not support the video tag.

Video 5.1: Demonstration of applying nail polish and using the nail dryer for quick drying.

6. MAINTENANCE

Cleaning and Storage:

- Ensure the device is turned off and batteries are removed before cleaning.
- Wipe the exterior of the device with a soft, dry cloth. Do not use abrasive cleaners or immerse the device in water.
- Store the nail dryer in a cool, dry place, away from direct sunlight and moisture.
- If storing for an extended period, remove the batteries to prevent leakage.

7. TROUBLESHOOTING

Common Issues and Solutions:

Problem	Possible Cause	Solution
Device does not turn on.	Batteries are dead or incorrectly installed.	Replace with new AAA batteries or check polarity.
Nails are not drying quickly.	Too much polish applied, or device is not positioned correctly.	Apply thinner coats of polish. Ensure hand/foot is fully under the dryer. Allow sufficient drying time.
Fan is weak or noisy.	Low battery power.	Replace batteries.

8. SPECIFICATIONS

Feature	Detail
Model Number	TB-2130WH
Brand	TOUCHBeauty
Power Source	2 x AAA Batteries (not included)
Voltage	3 Volts (DC)
Material	Plastic
Color	White
Item Weight	6.7 ounces (0.19 Kilograms)
Package Dimensions	6.42 x 5.91 x 3.58 inches
Manufacturer	TOUCHBEAUTY BEAUTY & HEALTH SHENZHEN CO.,LTD



2 AAA Batteries

Image 8.1: Diagram showing the dimensions of the nail dryer.

Anti-slip Bottom



Image 8.2: View of the anti-slip bottom design of the nail dryer.

9. WARRANTY INFORMATION

TOUCHBeauty products are manufactured to high-quality standards. For specific warranty details, please refer to the warranty card included with your purchase or contact TOUCHBeauty customer support.

10. CUSTOMER SUPPORT

If you have any questions, concerns, or require assistance with your TOUCHBeauty Portable Nail Dryer TB-2130WH, please contact TOUCHBeauty customer support through their official website or the contact information provided in your product packaging.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question