

[Manuals.plus](#) /

› [Sakugi](#) /

› Sakugi Heavy-Duty Metal Clothes Rack with Storage Shelf & Casters (Model US641) - Instruction Manual

Sakugi US641

Sakugi Heavy-Duty Metal Clothes Rack (Model US641) - Instruction Manual

INTRODUCTION

Thank you for choosing the Sakugi Heavy-Duty Metal Clothes Rack. This rack is designed to provide a robust and versatile solution for your clothing storage and organization needs. Constructed from high-quality metal, it offers significant load-bearing capacity and includes a convenient mesh shelf for additional storage. Equipped with 360-degree rotating casters, it allows for easy movement and flexible placement within your home or office. This manual provides detailed instructions for assembly, operation, and maintenance to ensure optimal use and longevity of your product.



Figure 1: Assembled Sakugi Heavy-Duty Metal Clothes Rack.

PARTS LIST

Before beginning assembly, please ensure all components listed below are present and undamaged. If any parts are missing or damaged, please contact customer support.



Figure 2: Product dimensions and components.

- Top Hanging Rods (2)
- Vertical Support Poles (4)
- Bottom Mesh Shelf (1)
- Base Frame (2 sections)
- Casters (4, 2 with locking mechanism)
- Assembly Hardware (screws, wrench)

SETUP & ASSEMBLY

The Sakugi Clothes Rack is designed for quick and easy assembly. Follow these steps to set up your rack. A detailed manual and necessary tools are included in the package.

1. **Attach Casters to Base:** Secure the four casters to the bottom of the two base frame sections using the provided hardware. Ensure the two locking casters are placed on the same side for easy access.
2. **Connect Base Sections:** Join the two base frame sections together, ensuring they are securely fastened.
3. **Insert Vertical Support Poles:** Insert the vertical support poles into the designated slots on the base frame. Ensure the spring buttons click into place for a secure connection.
4. **Attach Bottom Mesh Shelf:** Place the mesh shelf onto the lower support bars of the vertical poles.
5. **Attach Top Hanging Rods:** Connect the top hanging rods to the upper ends of the vertical support poles. Ensure the spring buttons engage securely.

For a visual guide, please refer to the assembly video below:

Video: Assembly demonstration for the Sakugi Clothes Rack. This video shows the step-by-step process of putting together the rack, highlighting the ease of assembly and the inclusion of wheels.

OPERATING INSTRUCTIONS

Using your Sakugi Clothes Rack is straightforward. Follow these guidelines for optimal use:

- **Hanging Clothes:** Utilize the two top hanging rods for various garments, including shirts, dresses, and coats. The anti-slip stoppers at each end prevent hangers from sliding off. The rack can accommodate up to 55 garments and support up to 110 pounds.
- **Using the Mesh Shelf:** The bottom mesh shelf provides additional storage space. It is ideal for shoes, storage boxes, bags, or other accessories.
- **Moving the Rack:** The four 360-degree rotating casters allow for easy movement of the rack. To secure the rack in place, engage the locking mechanism on the two designated casters.



Figure 3: Sakugi Clothes Rack demonstrating multipurpose storage.

MAINTENANCE

To ensure the longevity and appearance of your Sakugi Clothes Rack, follow these simple maintenance tips:

- **Cleaning:** Wipe down the metal frame and mesh shelf with a soft, damp cloth. Avoid abrasive cleaners or harsh chemicals that could damage the finish.

- **Inspection:** Periodically check all connections and screws to ensure they remain tight. Re-tighten if necessary to maintain stability.
- **Caster Care:** Keep the casters free of debris (hair, lint) to ensure smooth rolling. Lubricate if needed.

TROUBLESHOOTING

If you encounter any issues with your clothes rack, refer to the following common solutions:

- **Rack feels wobbly:** Ensure all connection points, especially where the vertical poles meet the base and top rods, are fully engaged and tightened. Verify that the spring buttons are securely locked.
- **Casters not rolling smoothly:** Check for any hair or debris wrapped around the caster wheels. Clean them thoroughly. If the issue persists, ensure the casters are correctly installed and not overtightened.
- **Casters not locking:** Confirm that the locking mechanism on the designated casters is fully engaged. If they still do not lock, inspect for any obstructions or damage to the locking lever.
- **Clothes sliding off ends:** The rack is equipped with anti-slip stoppers at the ends of the hanging rods. Ensure these are in place.

If you are unable to resolve an issue, please contact Sakugi customer support for further assistance.

SPECIFICATIONS

Brand	Sakugi
Model Number	US641
Color	Black
Material	Iron
Product Dimensions (D x W x H)	16"D x 28"W x 59"H
Item Weight	4.05 Kilograms
Maximum Weight Recommendation	110 Pounds
Number of Shelves	1
Installation Type	Free Standing
Assembly Required	Yes

WARRANTY & SUPPORT

For warranty information or technical support, please refer to the product packaging or contact Sakugi customer service directly. Our support team is available to assist you with any questions or concerns regarding your clothes rack.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0DNQ9QY19>

More documents and user manuals: <https://manuals.plus/>