

TNW S30

TNW S30 Extendable Selfie Stick Tripod with Wireless Remote User Manual

Model: S30

1. INTRODUCTION

Thank you for choosing the TNW S30 Extendable Selfie Stick Tripod. This device is designed to enhance your mobile photography and videography experience, offering versatility as both a selfie stick and a stable tripod. Please read this manual carefully before use to ensure proper operation and to maximize the product's lifespan.

2. SAFETY INFORMATION

- Do not expose the product to extreme temperatures or direct sunlight for prolonged periods.
- Keep the device away from water and other liquids to prevent damage.
- Do not attempt to disassemble or modify the product, as this will void the warranty and may cause damage.
- Ensure your smartphone or camera is securely mounted before use to prevent accidental drops.
- When extending the stick, ensure all sections are locked firmly in place.

3. PACKAGE CONTENTS

Verify that all items are present in your package:

- TNW S30 Selfie Stick Tripod
- Detachable Wireless Remote Control
- USB Type-C Charging Cable
- User Manual



Image: The package contents include the TNW S30 Selfie Stick Tripod, a detachable remote control, a USB Type-C charging cable, and the user manual, all neatly arranged.

4. PRODUCT OVERVIEW

The TNW S30 combines a selfie stick and a tripod into one compact device, featuring a robust aluminum alloy construction and a stable four-legged base.

4.1 Key Features

- **Highly Stable Tripod Base:** Features a one-button open mechanism for convenience. Solid metal ribs on all four feet provide superior balance and support compared to standard tripods. Four non-slip pads on the base prevent slipping and tipping during use.
- **Multi-Angle Shooting:** This foldable travel tripod features a phone holder with 360-degree horizontal rotation, 270-degree vertical adjustment, and a 360-degree rotating head, allowing for versatile shooting angles. Equipped with a balanced grip for smooth video recording.

- **High-Quality Aluminum Alloy Pole:** The S30 phone tripod utilizes an aviation-grade aluminum alloy structure, offering superior quality and durability. The selfie stick will not bend even when fully extended, providing a sturdier yet lighter alternative to ordinary selfie sticks.
- **Integrated Wireless Remote Control:** The phone tripod includes a detachable Bluetooth wireless remote control, allowing for photo capture up to 10 meters away, including full-body shots. It is Type-C rechargeable, eliminating the need for replacement batteries.
- **Lightweight and Portable:** The phone holder extends up to 71 inches (180 cm) and folds down to 12 inches (30 cm), weighing 1.2 pounds (555 grams). This design ensures easy storage and portability for travel, allowing you to capture great footage on the go, whether alone or with friends.
- **Wide Compatibility:** The universal phone holder (2.3-3.7 inches wide) accommodates most smartphones with or without cases. The 1/4-inch screw mount also supports digital cameras, video cameras, action cameras, webcams, and ring lights.

4.2 Stability Design



Image: This diagram illustrates the upgraded four-legged keel design, one-click open button, zinc alloy keel reinforced support, and anti-pinch design that enhance the tripod's stability.

4.3 Material Construction



S30 Compact Tripod

- Max length: 71 inches
weight: 550g
- Carry it with you to
record beautiful moments



Image: A cross-section view showing the aircraft-grade aluminum alloy material, carbon steel cores, solid filler, anti-electrocution coating, and carbon fiber coating for a lightweight and sturdy build.

5. SETUP

5.1 Unfolding the Tripod

1. Hold the main body of the selfie stick.
2. Press the one-click open button located at the base to release the tripod legs.
3. Gently pull the legs outwards until they are fully extended and stable on a flat surface.

5.2 Attaching Your Device

1. **For Smartphones:** Extend the phone holder clamp. Place your smartphone securely between the clamps, ensuring it is centered and stable. The holder supports phones 2.3-3.7 inches wide.
2. **For Cameras/Accessories:** If using a digital camera, action camera, webcam, or ring light, unscrew the phone holder to reveal the 1/4-inch screw mount. Attach your device to this screw mount and tighten securely.

What's in the box



Image: This image shows the universal phone holder's dimensions (2.3-3.7 inches wide) and the 1/4-inch standard screw mount for compatibility with various devices like GoPro, cameras, and ring lights.

5.3 Pairing the Wireless Remote Control

1. Ensure the remote control is charged. Connect the included Type-C cable to charge if needed.
2. Turn on the remote control by pressing and holding the button until the indicator light flashes.
3. On your smartphone, go to Bluetooth settings and search for available devices.
4. Select "TNW Remote" or a similar name from the list to pair. The indicator light will stop flashing once paired.
5. The remote is now ready to use for capturing photos and videos.

Wide Compatibility

FOR
CAMERAS



FOR
CELL PHONES



FOR
CELL gopro



Image: This image displays the detachable wireless rechargeable remote control, highlighting its 10-meter range and compatibility with both Android and iOS devices.

6. OPERATING INSTRUCTIONS

6.1 Using as a Selfie Stick

1. Ensure the tripod legs are folded and secured.
2. Extend the aluminum alloy pole to your desired length (up to 71 inches).
3. Hold the handle firmly and position your device for the perfect shot.
4. Use the paired wireless remote to capture photos or start/stop video recording.

6.2 Using as a Tripod

1. Unfold the tripod legs as described in Section 5.1 and place the tripod on a stable, flat surface.
2. Extend the pole to your desired height.
3. Adjust the angle of your device using the multi-angle head.
4. Use the wireless remote to capture content without touching your device, minimizing shake.

6.3 Adjusting Shooting Angles

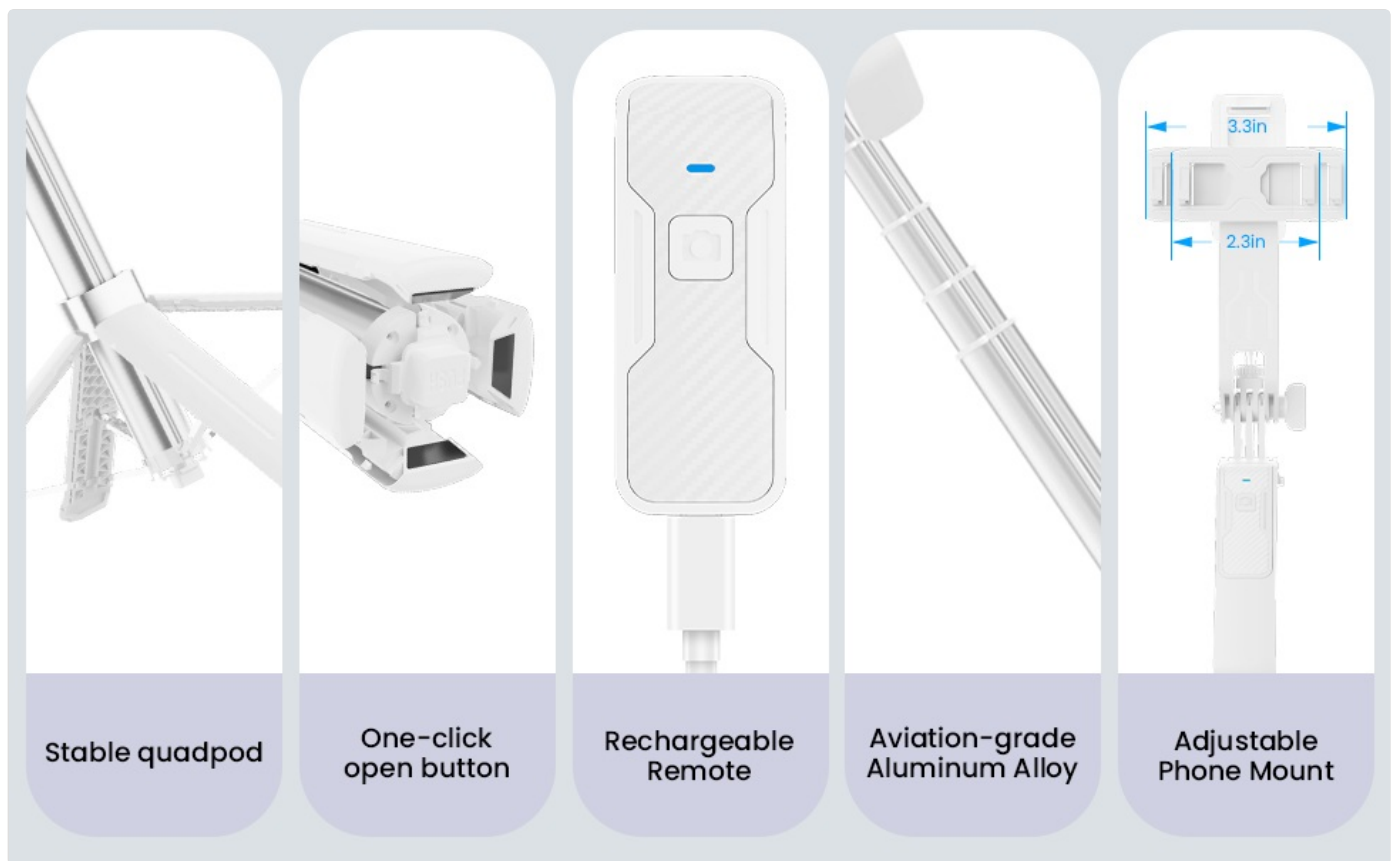


Image: This graphic demonstrates the multi-angle shooting capabilities, including 360-degree horizontal rotation, 270-degree vertical adjustment, and a 360-degree rotating head for versatile positioning.

- The phone holder allows for 360-degree horizontal rotation.
- The head can be tilted vertically up to 270 degrees.
- The entire head assembly can rotate 360 degrees for optimal framing.

7. MAINTENANCE

- Clean the device with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- Store the selfie stick tripod in a cool, dry place when not in use.
- Ensure the remote control is charged periodically, even if not in frequent use, to maintain battery health.
- Avoid forcing any parts if they feel stiff; check for obstructions.

8. TROUBLESHOOTING

8.1 Remote Control Not Connecting

- Ensure the remote control is charged and turned on.
- Check your smartphone's Bluetooth settings to ensure Bluetooth is enabled.
- Try unpairing and re-pairing the remote control from your phone's Bluetooth settings.
- Ensure the remote is within the 10-meter operating range.

8.2 Tripod Instability

- Ensure all four tripod legs are fully extended and locked.

- Place the tripod on a flat, level surface.
- Do not overload the tripod with devices heavier than recommended.
- Avoid extending the pole to its maximum height in windy conditions.

9. SPECIFICATIONS

Feature	Detail
Brand	TNW
Model Name	S30
Color	Black
Material	Aluminum
Compatible Devices	Camera, Smartphone
Maximum Height	71 inches (180 cm)
Minimum Height	12 inches (30 cm)
Folded Size	12 inches (30 cm)
Weight	1.2 pounds (555 grams)
Tripod Head Type	Ball Heads
Special Features	Remote Control, Lightweight, Foldable
Included Components	Remote Control

Lightweight and Portable

Easy to Carry in Travel



Image: This image illustrates the compact folded size of 11.8 inches and the extended length of the TNW S30, along with its weight of 1.2 lbs, demonstrating its portability.

10. WARRANTY AND SUPPORT

10.1 Warranty Information

The TNW S30 Selfie Stick Tripod comes with a **one-year manufacturer's warranty** from the date of purchase. This warranty covers defects in materials and workmanship under normal use. It does not cover damage caused by misuse, accidents, unauthorized modifications, or normal wear and tear.

10.2 Customer Support

For any questions, troubleshooting assistance, or warranty claims, please contact TNW customer support through the retailer where you purchased the product or visit the official TNW brand store online. Please have your purchase receipt and product model number (S30) ready when contacting support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question