

[Manuals.plus](#) /

> [TuTu](#) /

> TuTu 32 Inch TV with Built-in DVD Player User Manual (Model TN32C2NDVD)

TuTu TN32C2NDVD

TuTu 32 Inch TV with Built-in DVD Player User Manual

Model: TN32C2NDVD

INTRODUCTION

This manual provides essential instructions for the setup, operation, and maintenance of your TuTu 32 Inch 720P HD Flat Screen LED TV with a built-in DVD player. Please read this manual thoroughly before using the product to ensure proper function and safety. Keep this manual for future reference.



Image: Front view of the TuTu 32 Inch TV, highlighting its 720P HD display, built-in DVD player, HDMI, USB, and Dolby Audio features.

WHAT'S IN THE BOX

Carefully unpack your new TV and ensure all items listed below are present:

- 1x TuTu 32 Inch TV with DVD Player Built-in
- 1x Remote Control (requires 2 AAA batteries, included)
- 1x User Manual (this document)
- 2x TV Stand Legs
- 1x Warranty Card

SETUP INSTRUCTIONS

1. Attaching the TV Stand

To place the TV on a flat surface, attach the included stand legs:

1. Carefully place the TV screen-down on a soft, clean surface to prevent scratches.
2. Align each stand leg with the corresponding slots on the bottom of the TV.
3. Secure the legs with the provided screws (if applicable, check packaging for screws).
4. Ensure the stand is stable before uprighting the TV.

Alternatively, the TV can be wall-mounted (mounting hardware not included).

2. Connecting Power

Plug the power cord into the TV's power input, then into a standard electrical outlet. For RV use, a 12V inverter is required.

3. Connecting External Devices

Your TuTu TV offers multiple connection options for various devices. Refer to the image below for port locations.

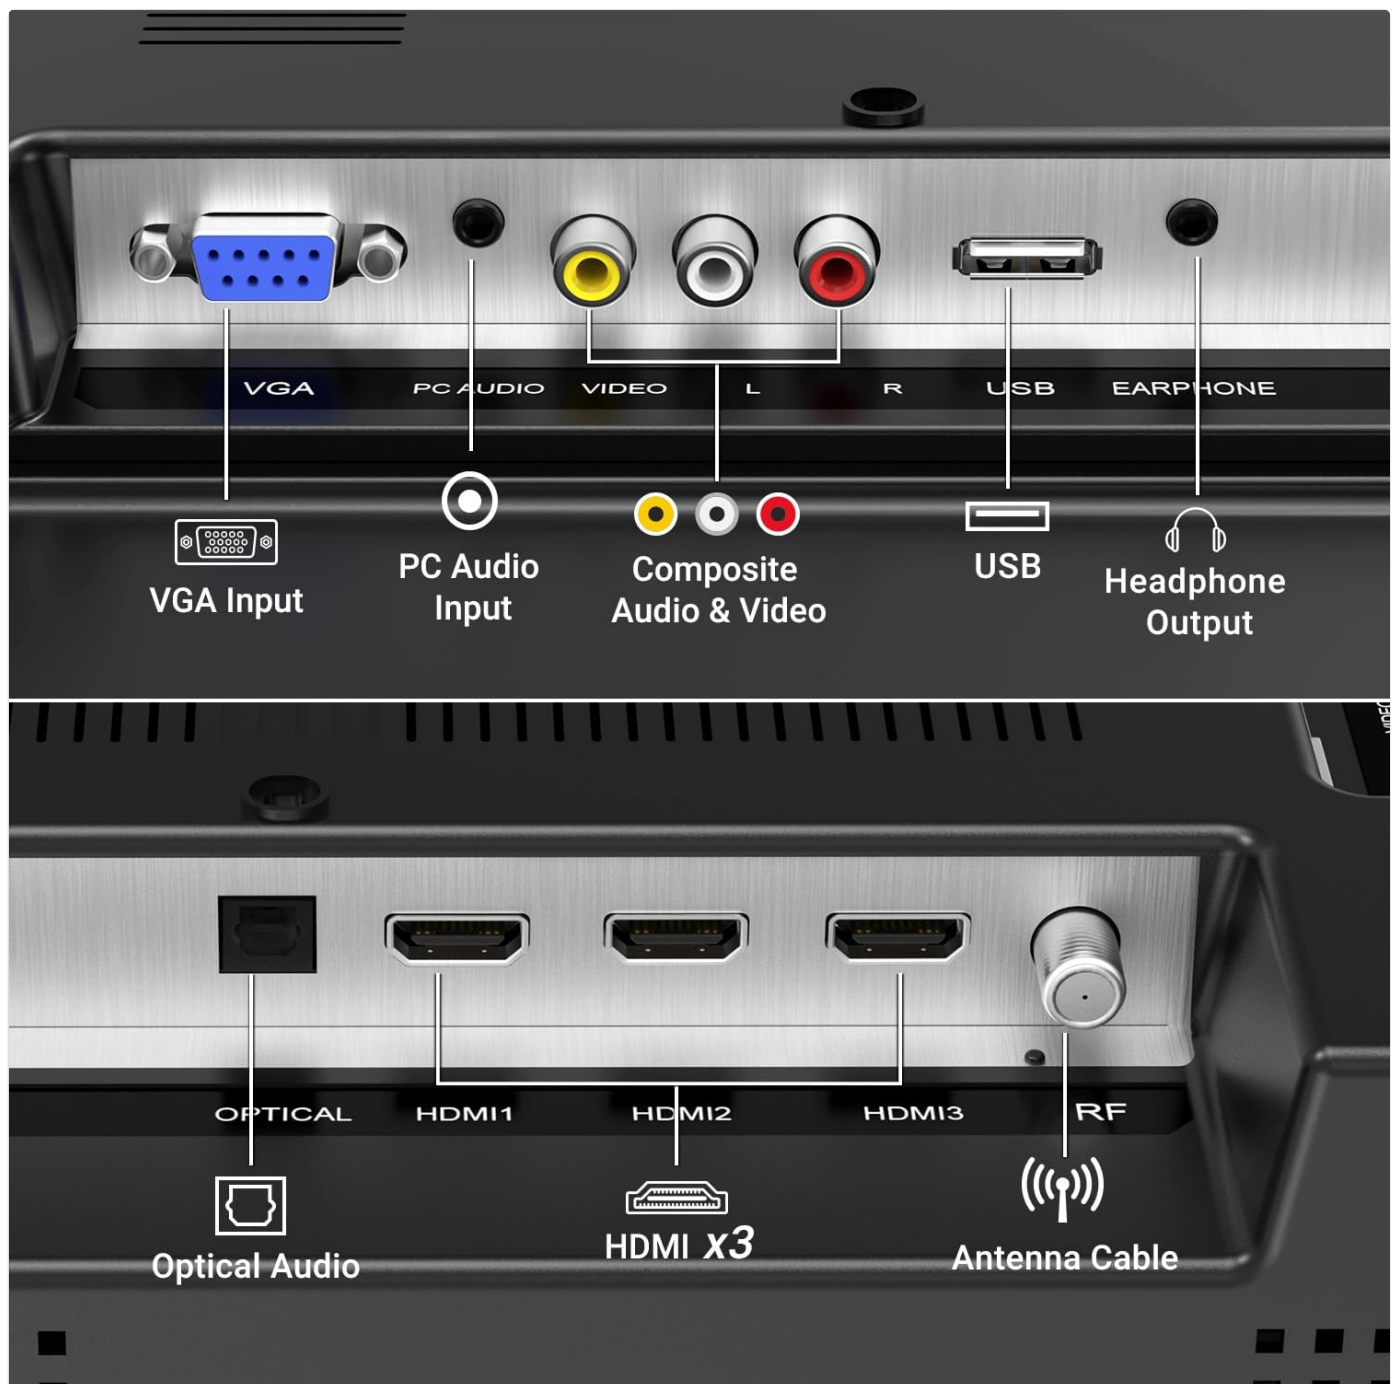


Image: Detailed view of the rear input/output ports on the TuTu TV, including VGA, PC Audio, Composite Audio/Video, USB, Headphone Output, Optical Audio, HDMI (x3), and RF (Antenna Cable).

- **HDMI (x3):** Connect Blu-ray players, gaming consoles, streaming devices (Fire TV, Apple TV, Google TV), or computers. HDMI (ARC) is supported for audio return channel functionality.
- **USB:** For media playback from USB drives.
- **VGA:** Connect a computer as a monitor.
- **Composite (AV):** Connect older devices using red, white, and yellow RCA cables.
- **RF (Antenna/Cable):** Connect an antenna for over-the-air broadcasts or a cable TV connection.
- **Optical Audio:** For connecting to external sound systems.
- **Earphone:** For private listening with headphones.



Image: The TuTu TV on a stand, with visual representations of connecting devices such as a streaming box, game controller, USB drive, and laptop via VGA, HDMI, and USB ports.

4. Initial Setup and Channel Scan

After connecting power and any desired antenna/cable, turn on the TV. Follow the on-screen prompts for initial setup, which typically includes language selection and a channel scan to find available broadcasts.

OPERATING INSTRUCTIONS

1. Basic Remote Control Functions

The included remote control allows you to navigate menus, change channels, adjust volume, and select input sources. Insert the two AAA batteries into the remote control, observing polarity.

- **Power:** Turns the TV on or off.
- **Source:** Cycles through available input sources (HDMI1, HDMI2, HDMI3, AV, VGA, TV, DVD).

- **Volume (+/-):** Adjusts the sound level.
- **Channel (+/-):** Changes the TV channel.
- **Menu:** Accesses the main settings menu.
- **Navigation Buttons:** Used to move through menus and options.
- **OK/Enter:** Confirms selections.

2. Using the Built-in DVD Player

Your TV features an integrated DVD player for convenient movie playback.



Image: A hand inserting a DVD disc into the side-mounted slot of the TuTu TV's built-in DVD player.

1. Insert a DVD or CD into the disc slot on the side of the TV, label side facing forward.
2. The TV will automatically switch to DVD mode or prompt you to select the DVD source.
3. Use the remote control to navigate DVD menus and control playback (Play, Pause, Stop, Skip).
4. Compatible formats include DVD, CD, CDR, CDRW, DVD+/- R, DVD+/- RW, VCD, and SVCD.

3. Adjusting Picture and Sound Settings

Access the TV's menu to customize picture and sound settings:

- **Picture Settings:** Adjust brightness, contrast, color, sharpness, and select picture modes (e.g., Standard, Dynamic, Movie). The TV features Triple Noise Reduction for clearer images.
- **Sound Settings:** Adjust bass, treble, balance, and select sound modes (e.g., Standard, Music, Movie). The built-in Dolby Digital sound system provides clear audio.



Image: A side-by-side comparison demonstrating the effectiveness of Triple Noise Reduction, showing a clearer image of a bee with the feature enabled versus a blurrier image without it.

4. Parental Controls

The TV includes built-in V-chip technology to monitor and restrict content based on program ratings. Access this feature through the TV's main menu to set preferences and block unwanted content.

5. Using USB Media Player

Insert a USB flash drive into the USB port. The TV's media player supports playback of text (.txt), audio (.mp3), and image (.jpg, .jpeg, .bmp, .png) files. Video formats are not supported via USB.

MAINTENANCE

1. Cleaning the TV

- Always unplug the TV before cleaning.
- Use a soft, dry cloth to wipe the screen and cabinet.
- For stubborn marks, lightly dampen the cloth with water or a mild, non-abrasive screen cleaner. Do not spray liquid directly onto the screen.
- Avoid using harsh chemicals or abrasive materials.

2. Care for the DVD Player

- Handle discs by their edges to avoid fingerprints and scratches.
- Clean discs with a soft, lint-free cloth, wiping from the center outwards.
- Do not insert damaged or warped discs into the player.

TROUBLESHOOTING

If you encounter issues with your TV, refer to the following common problems and solutions:

Problem	Possible Solution
No power	Ensure the power cord is securely plugged into both the TV and a working electrical outlet. Check if the outlet has power.
No picture, but sound is present	Check the input source selection. Ensure external devices are powered on and connected correctly.
No sound, but picture is present	Check the volume level and ensure the TV is not muted. Verify audio cables for external devices.
Remote control not working	Replace the batteries in the remote control. Ensure there are no obstructions between the remote and the TV's IR sensor.
DVD not playing	Ensure the disc is inserted correctly and is clean and undamaged. Select the DVD input source.
Cannot find channels	Perform a channel scan from the TV's menu. Ensure the antenna or cable is properly connected.

SPECIFICATIONS

- **Model Number:** TN32C2NDVD
- **Screen Size:** 32 Inches
- **Display Technology:** LED
- **Resolution:** 720p HD (1280 x 720)
- **Refresh Rate:** 60 Hz
- **Aspect Ratio:** 16:9

- **Connectivity:** 3x HDMI, 1x USB, 1x VGA, 1x Composite (AV), 1x RF, 1x Optical Audio, 1x Earphone
- **Built-in DVD Player:** Yes (compatible with DVD, CD, CDR, CDRW, DVD+/- R, DVD+/- RW, VCD, SVCD)
- **Audio:** Dolby Digital Sound System, Dual Speakers
- **Power Consumption (On-mode):** 40 Watts
- **Product Dimensions:** 3.3"D x 28.7"W x 16.8"H
- **Item Weight:** 8.16 Pounds
- **Color:** Black
- **Special Features:** Triple Noise Reduction, Parental Controls (V-chip), Hotel Mode

Slim Space Saving Design



Image: The TuTu TV mounted on a kitchen wall, demonstrating its slim, space-saving design suitable for various rooms.



Image: The TuTu TV mounted inside an RV, illustrating its suitability for campers and recreational vehicles.

WARRANTY AND SUPPORT

TuTu offers a **1-year product service warranty** from the date of purchase. If you encounter any issues or require assistance with your TuTu TV, please contact our customer support team. We are committed to resolving any concerns promptly.

For support, please refer to the contact information provided on your warranty card or visit the official TuTu website.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question