

[Manuals.plus](#) /

› [YHKEMA](#) /

› YHKEMA EB10 Electronic Shooting Earbuds User Manual

YHKEMA EB10

YHKEMA EB10 Electronic Shooting Earbuds User Manual

Model: EB10 | Brand: YHKEMA

INTRODUCTION

The YHKEMA EB10 Electronic Shooting Earbuds are designed to provide advanced hearing protection and enhanced situational awareness. Featuring a Noise Reduction Rating (NRR) of 28dB, Bluetooth 5.3 connectivity, active noise cancellation, and sound amplification, these earbuds are suitable for various high-decibel environments such as shooting ranges, hunting expeditions, and construction sites.

The advanced sound technology and seamless Bluetooth integration allow for clear communication and media enjoyment while maintaining awareness of your surroundings. The ergonomic design ensures a comfortable and secure fit, accommodating various headwear and movements. The included charging case provides extended battery life for on-the-go use.



Image: YHKEMA EB10 Electronic Shooting Earbuds in their open charging case, showing the left and right earbuds.

SETUP

1. Initial Charging

Before first use, place both earbuds into the charging case and connect the case to a power source using the provided USB-C cable. Ensure the earbuds and case are fully charged. The indicator lights on the case will show the charging status. A full charge provides up to 8 hours of continuous use for the earbuds, with the case offering up to 3 additional full charges for a total of 30 hours.

Why Choose YHKEMA

YHKEMA low profile earplugs, special design

YHKEMA is at the forefront of shooting ear protection, with new shooting earbuds for 2024. We deeply believe in the unstoppable future trend of electronic shooting earplugs, which is a fashion trend. Compared with traditional shooting earphones, the shooting earplugs are lighter, smaller and more portable, with strong air permeability, high comfort and long battery life.



YHKEMA Specification

- 28NRR Noise Reduction Rating
- Two Mode of Noise Reduction
- Clear Voice Tracking
- The Fastest Attack Time
- One-handed Volume Adjustment
- Voice Prompts
- Type-C Charging Port

Image: Illustration of the charging case with earbuds, showing battery life indicators and continuous use time.

2. Selecting and Installing Ear Tips

The EB10 earbuds come with three different ear tip sizes and two pairs of replacement earmuffs to ensure a proper and comfortable fit. A good seal is crucial for effective noise reduction and sound quality.

1. Choose the ear tip size that best fits your ear canal. Experiment with different sizes to find the most comfortable and secure fit.
2. Gently remove the pre-installed ear tip by twisting and pulling.
3. Align the new ear tip with the earbud nozzle and push it on firmly until it is securely attached.

Your browser does not support the video tag.

Video: Demonstration of how to change the ear tips on the YHKEMA EB10 Electronic Shooting Earbuds.



Image: Close-up of the YHKEMA EB10 earbuds showing the ear tip and ear hook design.

3. Bluetooth Pairing

To connect your earbuds to a Bluetooth-enabled device:

1. Open the charging case. The earbuds will automatically enter pairing mode, indicated by a flashing light on the earbuds.
2. On your device (e.g., smartphone), go to Bluetooth settings and enable Bluetooth.
3. Search for available devices and select "YHKEMA EB10" from the list.
4. Once connected, the earbud indicator light will stop flashing, and you will hear a confirmation tone.

OPERATING INSTRUCTIONS

Power On/Off

- **Power On:** Open the charging case, and the earbuds will automatically power on. Alternatively, press and hold the button on each earbud for 3 seconds.
- **Power Off:** Place the earbuds back into the charging case and close the lid. They will automatically power off and begin charging. Alternatively, press and hold the button on each earbud for 5 seconds. The earbuds also feature an automatic power-off function after several hours of no operation.

Mode Selection

The EB10 earbuds offer three distinct modes for various environments. Press the button on either earbud to cycle through the modes.

- **Outdoor Mode:** Suitable for quiet environments where you need to pick up more ambient sound.
- **Interior Mode:** Ideal for indoor or target shooting, providing balanced noise reduction and sound amplification.
- **Noise Reduction Mode:** Primarily for Bluetooth music or phone calls, offering maximum noise cancellation.

BUTTON TON OPERATION

PRESS THE BUTTON TO DIRECTLY TURN ON
THE NOISE REDUCTING MODE



Outdoor Mode

Suitable for Quiet, Need to Pick Up
More Ambient Sound



Interior Mode

Suitable for Indoor Or Target
Shooting



Noise Reduction Mode

Suitable for Bluetooth Music Or
Phone Calls



Image: Diagram illustrating the button operation and the three available sound modes: Outdoor, Interior, and Noise Reduction.

Volume Control

The earbuds feature one-handed volume adjustment. Specific controls may vary slightly depending on the mode. Refer to the quick start guide for detailed button press sequences for volume up/down.

Call Handling

When connected via Bluetooth, you can answer, end, or reject calls using the earbud buttons.

- **Answer/End Call:** Single press the button on either earbud.
- **Reject Call:** Press and hold the button on either earbud for 2 seconds.

NOISE REDUCTION



28
dB

NOISE REDUCTION
28dB



4x

UP TO 4x SOUND
AMPLIFICATION

Image: A person wearing the YHKEMA EB10 earbuds in a tactical setting, highlighting noise reduction and sound amplification features.

MAINTENANCE

Cleaning

- Regularly clean the ear tips with a soft, damp cloth. Ensure they are completely dry before reattaching to the earbuds.
- Wipe the earbuds and charging case with a dry, soft cloth to remove dust and debris.
- Do not use harsh chemicals, cleaning solvents, or strong detergents.

Storage

When not in use, store the earbuds in their charging case to protect them from dust, moisture, and physical damage. Store in a cool, dry place away from direct sunlight and extreme temperatures.



Image: The YHKEMA EB10 charging case, closed, protecting the earbuds inside.

TROUBLESHOOTING

• No Sound/Poor Sound Quality:

- Ensure earbuds are properly seated in your ears and ear tips provide a good seal.
- Check if the earbuds are connected via Bluetooth to your device.
- Verify the volume level on both the earbuds and your connected device.
- Ensure earbuds are charged.

• Earbuds Not Pairing:

- Make sure Bluetooth is enabled on your device.
- Place earbuds back in the case, close the lid, then open it again to re-enter pairing mode.
- Forget the device from your phone's Bluetooth settings and try pairing again.
- Ensure earbuds are charged.

• Charging Issues:

- Verify the USB-C cable and power adapter are working correctly.
- Ensure the charging contacts on both the earbuds and the case are clean and free of debris.
- Make sure the earbuds are correctly seated in the charging case.

• High-Pitched Feedback:

- This can sometimes occur if the ear tips do not form a proper seal. Try a different size ear tip.
 - Ensure the earbuds are correctly inserted into your ear canal.
 - If feedback persists in a specific mode, try switching modes.
- **Buttons Difficult to Press:**
 - Ensure your fingers are dry and clean.
 - Apply firm, direct pressure to the center of the button.

SPECIFICATIONS

Model Number	EB10
Brand	YHKEMA
Noise Reduction Rating (NRR)	28dB
Bluetooth Version	5.3
Battery Type	Lithium Ion (1 required, included)
Continuous Use Time (Earbuds)	Up to 8 hours
Total Use Time (with Charging Case)	Up to 30 hours
Charging Port	USB-C
Material	Acrylonitrile Butadiene Styrene, Polycarbonate
Recommended Uses	Noise Protection (Hunting, Shooting, Construction)
Package Dimensions	4.21 x 4.17 x 2.44 inches
Item Weight	6.74 ounces

WARRANTY AND SUPPORT

Warranty Information

YHKEMA products are manufactured to high-quality standards. For specific warranty details regarding your EB10 Electronic Shooting Earbuds, please refer to the warranty card included in your product packaging or visit the official YHKEMA website. Keep your proof of purchase for warranty claims.

Customer Support

- If you encounter any issues or have questions about your YHKEMA EB10 Electronic Shooting Earbuds, please contact our customer support team.
- **Website:** [www.yhkema.com](#) (Note: This is a placeholder URL, please refer to actual product documentation for correct website.)
 - **Email:** support@yhkema.com (Note: This is a placeholder email, please refer to actual product documentation for correct contact.)

Please have your model number (EB10) and purchase date ready when contacting support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question