

[Manuals.plus](#) /

› [Effireli](#) /

› Effireli GA841WJSA Replacement Remote for Sharp Aquos TV User Manual

Effireli GA841WJSA

Effireli GA841WJSA Replacement Remote for Sharp Aquos TV User Manual

Model: GA841WJSA

INTRODUCTION

This manual provides instructions for the Effireli GA841WJSA replacement remote control, designed for use with various Sharp Aquos TV models. Please read this manual carefully before using the remote control to ensure proper operation.

SETUP

1. Battery Installation

The Effireli GA841WJSA remote control requires batteries for operation. Locate the battery compartment on the back of the remote control. Insert two AAA batteries, ensuring correct polarity (+ and - terminals). Close the battery compartment cover securely.

2. Initial Use

No programming or setup is required for this replacement remote. Once batteries are installed, the remote is ready for immediate use with compatible Sharp Aquos TV models. Simply point the remote at your television and begin operation.



Image: The Effireli GA841WJSA replacement remote control. This image displays the full remote, highlighting its button layout and design,

which is ready for use after battery installation.

OPERATING INSTRUCTIONS

This section details the functions of the buttons on your Effireli GA841WJSA remote control.

Button Functions Overview

- **TV Power ()**: Turns the television on or off.
- **ID / P.INFO**: Accesses identification or program information.
- **ATV / DTV / SAT / RADIO**: Selects analog TV, digital TV, satellite, or radio input modes.
- **SOURCE**: Cycles through available input sources (HDMI, AV, etc.).
- **AQUOS LINK**: Activates Sharp Aquos Link functions for connected devices.
- **OPTION**: Displays additional options or settings.
- **REC / REC STOP**: Controls recording functions (if supported by TV).
- **Playback Controls (, , ,)**: Rewind, Play, Fast Forward, Stop, Pause for media playback.
- **TIME SHIFT / READY**: Activates or manages time shift functions.
- **Number Pad (0-9)**: Directly enters channel numbers.
- **Channel Up/Down (^ P / v P)**: Changes television channels.
- **Volume Up/Down (+ / -)**: Adjusts the television volume.
- **Mute ()**: Mutes or unmutes the television audio.
- **AV MODE / ECO**: Selects AV mode or activates ECO power-saving mode.
- **MENU**: Opens the main television menu.
- **CONTROL / EPG**: Accesses control functions or the Electronic Program Guide.
- **Navigation Pad (Up, Down, Left, Right, OK)**: Navigates through menus and confirms selections.
- **END**: Exits menus or returns to the previous screen.
- **Colored Buttons (Red, Green, Yellow, Blue)**: Functions vary depending on the TV menu or application.

MAINTENANCE

Cleaning the Remote

To clean the remote control, use a soft, dry cloth. Do not use liquid cleaners or abrasive materials, as these can damage the remote's surface or internal components.

Battery Replacement

If the remote control's response becomes sluggish or stops working, replace the batteries. Always replace both batteries at the same time with new ones of the same type (AAA). Dispose of used batteries according to local regulations.

TROUBLESHOOTING

- **Remote not responding:**
 - Ensure batteries are correctly installed with proper polarity.
 - Replace old batteries with new ones.
 - Check for any obstructions between the remote and the TV's infrared sensor.

- Ensure the remote is pointed directly at the TV.

- **Some buttons not working:**

- This remote is a replacement and may not support all advanced functions of your original TV remote, especially if your TV model is not listed as compatible.
- Clean the remote buttons and surrounding areas to ensure no debris is interfering with button presses.

- **TV model not listed as compatible:**

If your TV model number is not explicitly listed in the compatibility section or your original remote looks significantly different, contact customer support for assistance to confirm compatibility.

SPECIFICATIONS

Model Number	GA841WJSA (YK-GA841WJSA)
Brand	Effireli
Connectivity Technology	Infrared
Compatible Devices	Television (Sharp Aquos TV models)
Special Feature	No Programming Required
Item Weight	2.82 ounces
Package Dimensions	8.66 x 1.97 x 0.79 inches
Date First Available	November 21, 2024

Compatible TV Models

This remote control is compatible with the following Sharp Aquos TV models:

- LC-40LX705E
- LC-46LE600E
- LC-40LE810E
- LC-40LE812E
- LC-40LE820E
- LC-40LE822E
- LC-40LU820E
- LC-40LU822E
- LC-40LX810E
- LC-40LX812E
- LC-46LE600E
- LC-46LE700S
- LC-46LE705E
- LC-46LU705S
- LC-46LX700E
- LC-46LX700RU
- LC-46LX705E

- LC-46LE810E
- LC-46LE812E
- LC-46LE812ERU
- LC-46LE820E
- LC-46LE822E
- LC-46LE822ERU
- LC-46LU820E
- LC-46LU822E
- LC-46LX810E
- LC-46LX812E
- LC-46LX812ERU
- LC-52LE700S
- LC-52LE705E
- LC-52LE705S
- LC-52LE820E
- LC-52LE822E
- LC-52LE822ERU
- LC-60LE822E
- LC-32LE600E
- LC-32LE600RU
- LC-32LU700S
- LC-32LU705E
- LC-32LX700RU
- LC-32LX705E
- LC-32SH130E
- LC-40LE600S
- LC-40LE700E
- LC-40LE705S
- LC-40LU700E
- LC-40LU700S

Note: If your specific TV model number is not listed above, or if your original remote control has a significantly different appearance, please contact customer support to verify compatibility before use.

WARRANTY INFORMATION

This product comes with a **12-month warranty** covering manufacturing defects. Additionally, a **30-day money-back guarantee** is provided. Returns and exchanges are accepted within the warranty period for eligible issues.

CUSTOMER SUPPORT

For further assistance, troubleshooting, or inquiries regarding product compatibility, please contact Effireli customer support. Refer to your product packaging or the retailer's website for specific contact details.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0DNRB85MQ>

More documents and user manuals: <https://manuals.plus/>