

[Manuals.plus](#) /

› [Bosch](#) /

› Bosch Series 2 SMV25CX10Q Integrated Dishwasher User Manual

Bosch SMV25CX10Q

Bosch Series 2 SMV25CX10Q Integrated Dishwasher User Manual

Model: SMV25CX10Q | Brand: Bosch

1. INTRODUCTION

This manual provides essential information for the safe and efficient operation of your Bosch Series 2 SMV25CX10Q Integrated Dishwasher. This appliance is designed for washing dishes, glassware, delicate porcelain, pots, pans, and heavily soiled baking dishes. It features 12 place settings, 5 wash programs, VarioSpeed, Half Load function, and an inherent heat drying system. The ActiveWater 60 system includes a height-adjustable upper rack for accommodating larger items.

2. SAFETY INFORMATION

- Read all instructions before using the appliance.
- Keep this manual for future reference.
- Ensure the appliance is properly grounded.
- Do not allow children to play with or in the dishwasher.
- Use only detergents and rinse aids specifically designed for automatic dishwashers.
- Sharp items should be loaded with points and sharp edges down to avoid injury.
- Do not operate the dishwasher if it is damaged. Contact qualified service personnel.

3. SETUP

3.1. Installation

The Bosch SMV25CX10Q is an integrated dishwasher designed for seamless installation into your kitchen cabinetry. Professional installation is highly recommended to ensure correct water, electrical, and drainage connections. Refer to the separate installation guide for detailed instructions on plumbing, electrical connections, and cabinet integration.



Image: The Bosch SMV25CX10Q integrated dishwasher seamlessly installed within kitchen cabinetry, showing its sleek, hidden design.

3.2. First Use

- **Salt Dispenser:** Fill the salt dispenser with dishwasher salt before the first wash cycle. This helps soften hard water and prevents limescale buildup.
- **Rinse Aid Dispenser:** Fill the rinse aid dispenser. Rinse aid ensures streak-free drying and adds shine to your dishes.
- **Detergent Dispenser:** Add the appropriate amount of dishwasher detergent.
- Run an empty wash cycle (e.g., a short program) to clean the appliance interior before loading dishes.

4. OPERATING INSTRUCTIONS

4.1. Loading the Dishwasher

Proper loading is crucial for optimal cleaning results. Scrape off large food particles before loading. Avoid overcrowding to allow water and detergent to reach all surfaces.

- **Lower Rack:** Ideal for large items like plates, serving dishes, pots, and pans.
- **Upper Rack:** Suitable for glasses, cups, smaller plates, and bowls. The upper rack is height-adjustable to accommodate taller items in either rack.
- **Cutlery Basket:** Place cutlery with handles down, except for knives and other sharp utensils, which should be placed handles up for safety.



Image: An open view of the Bosch SMV25CX10Q dishwasher interior, showcasing the two racks and cutlery basket, with the upper rack

4.2. Adding Detergent, Salt, and Rinse Aid

- **Detergent:** Open the detergent dispenser and add the recommended amount of powder, gel, or a tablet. Close the dispenser lid securely.
- **Salt:** Check the salt indicator. If illuminated, refill the salt reservoir with dishwasher salt.
- **Rinse Aid:** Check the rinse aid indicator. If illuminated, refill the rinse aid dispenser.

4.3. Program Selection

Your dishwasher offers 5 wash programs:

- **Program 1 (Intensive):** For heavily soiled pots, pans, and dishes.
- **Program 2 (Auto):** Automatically adjusts cleaning performance based on soil level.
- **Program 3 (Eco):** Energy-efficient program for normally soiled dishes.
- **Program 4 (Quick):** For lightly soiled dishes that do not require drying.
- **Program 5 (Pre-Rinse):** For rinsing dishes that will be washed later.

4.4. Special Functions (VarioSpeed & Half Load)

- **VarioSpeed:** Reduces program duration by up to 50% while maintaining optimal cleaning and drying results.
- **Half Load:** For washing smaller loads, saving water and energy.

4.5. Starting a Program

- Close the dishwasher door firmly.
- Select your desired wash program using the push buttons.
- Press the Start button. The program will begin.

5. MAINTENANCE

5.1. Cleaning Filters

Regularly clean the filter system to prevent blockages and ensure efficient cleaning. Remove the coarse and fine filters, rinse them under running water, and remove any trapped food particles. Reassemble and replace them correctly.

5.2. Cleaning Spray Arms

Check the spray arm nozzles for any blockages. If necessary, remove the spray arms and clear any debris from the holes using a thin object like a toothpick.

5.3. Exterior Cleaning

Wipe the exterior surfaces of the dishwasher with a soft, damp cloth. Do not use abrasive cleaners or solvents.

5.4. Care During Non-Use

If the dishwasher will not be used for an extended period, it is recommended to:

- Turn off the water supply.
- Unplug the appliance from the power outlet.
- Leave the door slightly ajar to prevent odors and mildew.

6. TROUBLESHOOTING

Before contacting service, review the following common issues and solutions:

Problem	Possible Cause	Solution
Dishes not clean	Improper loading, clogged spray arms, insufficient detergent, incorrect program.	Reload dishes correctly, clean spray arms, add more detergent, select appropriate program.
Water not draining	Clogged filter, kinked drain hose, blocked drain pump.	Clean filters, check drain hose for kinks, clear drain pump.
Dishwasher not starting	Door not closed properly, power supply issue, program not selected.	Ensure door is latched, check power connection, select a program and press start.
White film on dishes	Hard water, insufficient salt, too much detergent.	Check salt level, adjust water hardness setting, reduce detergent amount.

7. SPECIFICATIONS

Brand	Bosch
Model Name	SMV25CX10Q
Installation Type	Integrated
Capacity	12 Place Settings
Number of Programs	5
Drying System	Inherent Heat
Special Features	Half Load, VarioSpeed
Dimensions (H x W x D)	81.5 cm x 60 cm x 55 cm
Voltage	220 Volts
Control Type	Push Button
Material	Plastic
Finish Type	Glossy
Color	White
Manufacturer	Bosch
Country of Origin	Turkey

8. WARRANTY AND SUPPORT

8.1. Warranty Information

Your Bosch SMV25CX10Q Integrated Dishwasher comes with a **5-year warranty**. This warranty covers manufacturing defects and ensures reliable operation under normal use. Please retain your proof of

purchase for warranty claims.

8.2. Customer Support

For technical assistance, service requests, or to inquire about spare parts, please contact Bosch customer service. Contact details can typically be found on the official Bosch website for your region or on your purchase documentation.

When contacting support, please have your model number (SMV25CX10Q) and serial number ready. The serial number is usually located on a label inside the dishwasher door.