

GLOBE 65000108

GLOBE Electric 65000108 Rechargeable LED Wall Sconce
User Manual

Model: 65000108

- [Introduction](#)
- [Safety Information](#)
- [Package Contents](#)
- [Setup & Installation](#)
- [Operation](#)
- [Charging](#)
- [Maintenance](#)
- [Troubleshooting](#)
- [Specifications](#)
- [Warranty & Support](#)

1. INTRODUCTION

Thank you for purchasing the GLOBE Electric 65000108 Rechargeable LED Wall Sconce. This modern, minimalist wall light features integrated LED technology, a 3-step dimmer touch switch, and a rechargeable battery for versatile lighting. This manual provides detailed instructions for safe installation, operation, and maintenance of your new wall sconce.

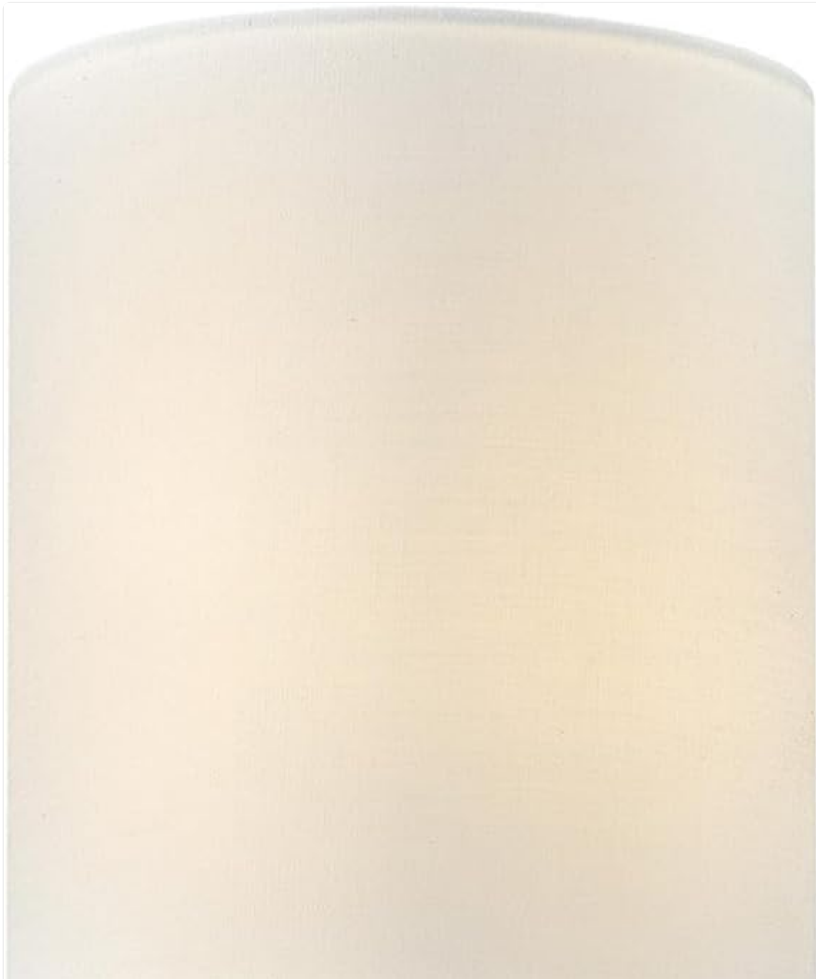




Image 1.1: The GLOBE Electric 65000108 Rechargeable LED Wall Sconce with its white fabric shade and matte black finish, shown with the included USB-C charging cable.

2. IMPORTANT SAFETY INFORMATION

Please read all instructions carefully before installation and use. Keep this manual for future reference.

- **Indoor Use Only:** This product is designed for indoor use in dry locations. Do not expose to water or moisture.
- **Power Source:** Use only the provided USB-C cable for charging. Do not use damaged cables or chargers.
- **Battery Care:** The sconce contains a Lithium Ion battery. Do not attempt to replace the battery yourself. Do not expose the battery to extreme temperatures or direct sunlight.
- **Cleaning:** Disconnect from power before cleaning. Use a soft, dry cloth. Do not use abrasive cleaners.
- **Installation:** Ensure the mounting surface is suitable and can support the weight of the fixture.
- **Children:** Keep out of reach of children. This is not a toy.

3. PACKAGE CONTENTS

Verify that all components are present before beginning installation:

- GLOBE Electric 65000108 Wall Sconce (with integrated LED and battery)
- White Fabric Shade
- Mounting Hardware (screws, anchors, mounting bracket)

- USB-C Charging Cable (5 ft)
- Instruction Manual

4. SETUP AND INSTALLATION

Follow these steps to properly install your wall sconce:

1. **Prepare the Mounting Location:** Choose a suitable indoor wall location. Ensure there are no electrical wires or pipes behind the wall where you plan to drill.
2. **Install the Mounting Bracket:**



Image 4.1: A hand using a screwdriver to secure the mounting bracket to the wall.

Position the mounting bracket on the wall and mark the drill holes. Drill pilot holes if necessary, then secure the mounting bracket to the wall using the provided screws and anchors.

3. **Attach the Sconce:** Align the sconce with the installed mounting bracket. Gently slide the sconce onto the bracket until it is securely in place.
4. **Attach the Fabric Shade:** Carefully place the white fabric shade onto the sconce. Ensure it is seated properly and securely.

5. OPERATING INSTRUCTIONS

Your wall sconce features a touch-sensitive switch for power and brightness control.



Image 5.1: Close-up view of the sconce's base showing the dimmable touch switch and the USB-C charging port.

5.1. Power and Brightness Control

The sconce has a 3-step dimmer function controlled by the touch switch:

- **First Touch:** Turns the light on at 10% brightness.
- **Second Touch:** Brightens the light to 50% brightness.
- **Third Touch:** Brightens the light to 100% brightness.
- **Fourth Touch:** Turns the light off.

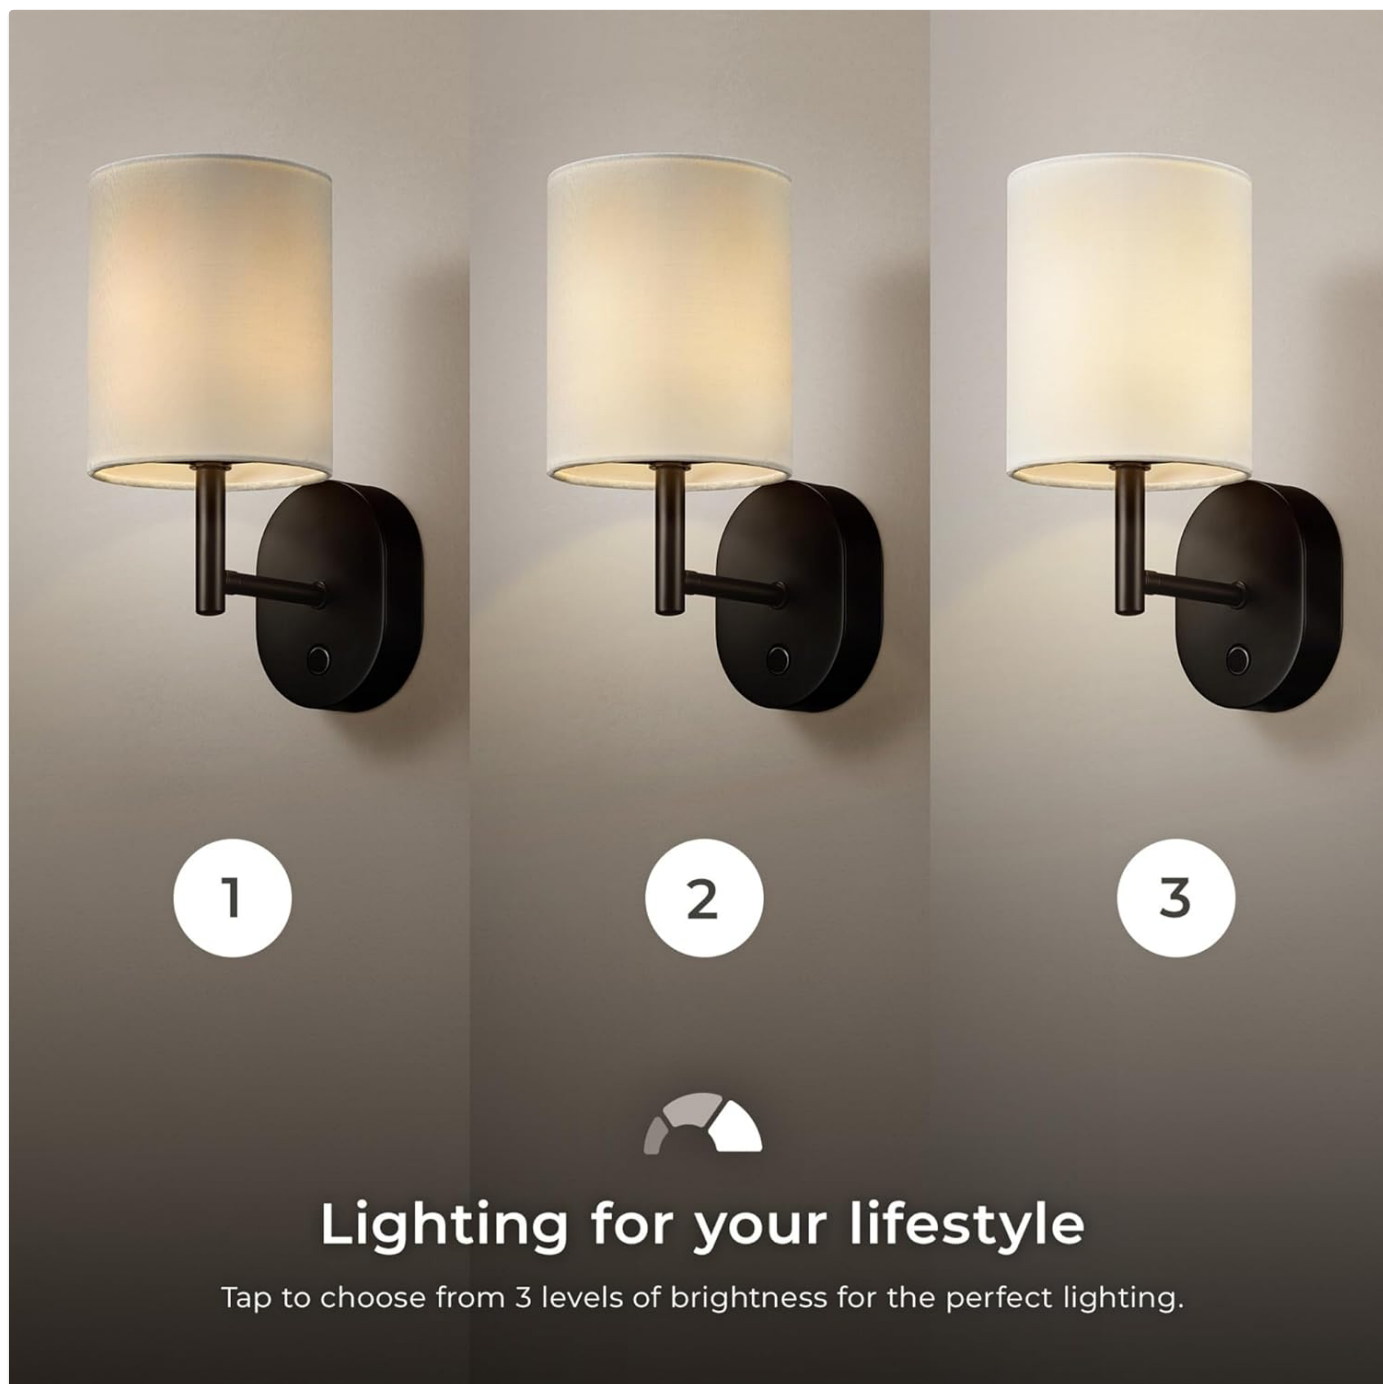


Image 5.2: The wall sconce displaying its three brightness levels: 10%, 50%, and 100% illumination.

5.2. One-Hour Timer Function

To activate the one-hour timer:

- While the light is on, press and hold the on/off touch button for 3 seconds.
- A blue indicator light will illuminate, confirming that the timer is active.
- The wall sconce will automatically turn off after one hour.

6. CHARGING INSTRUCTIONS

The sconce is powered by a rechargeable battery. When the battery is low, the light output may diminish or turn off.

1. **Connect the USB-C Cable:** Locate the USB-C charging port on the base of the sconce (refer to Image 5.1). Insert the provided USB-C cable into the port.
2. **Connect to Power:** Plug the other end of the USB-C cable into a compatible USB power adapter (not included) or a powered USB port.

3. **Charging Indicator:** The indicator light on the sconce will show the charging status (e.g., red for charging, green for fully charged).
4. **Charging Time:** A full charge takes approximately 6 hours.
5. **Battery Life:**
 - Up to 10 hours at 100% brightness.
 - Up to 20 hours at 50% brightness.
 - Up to 100 hours at 10% brightness.

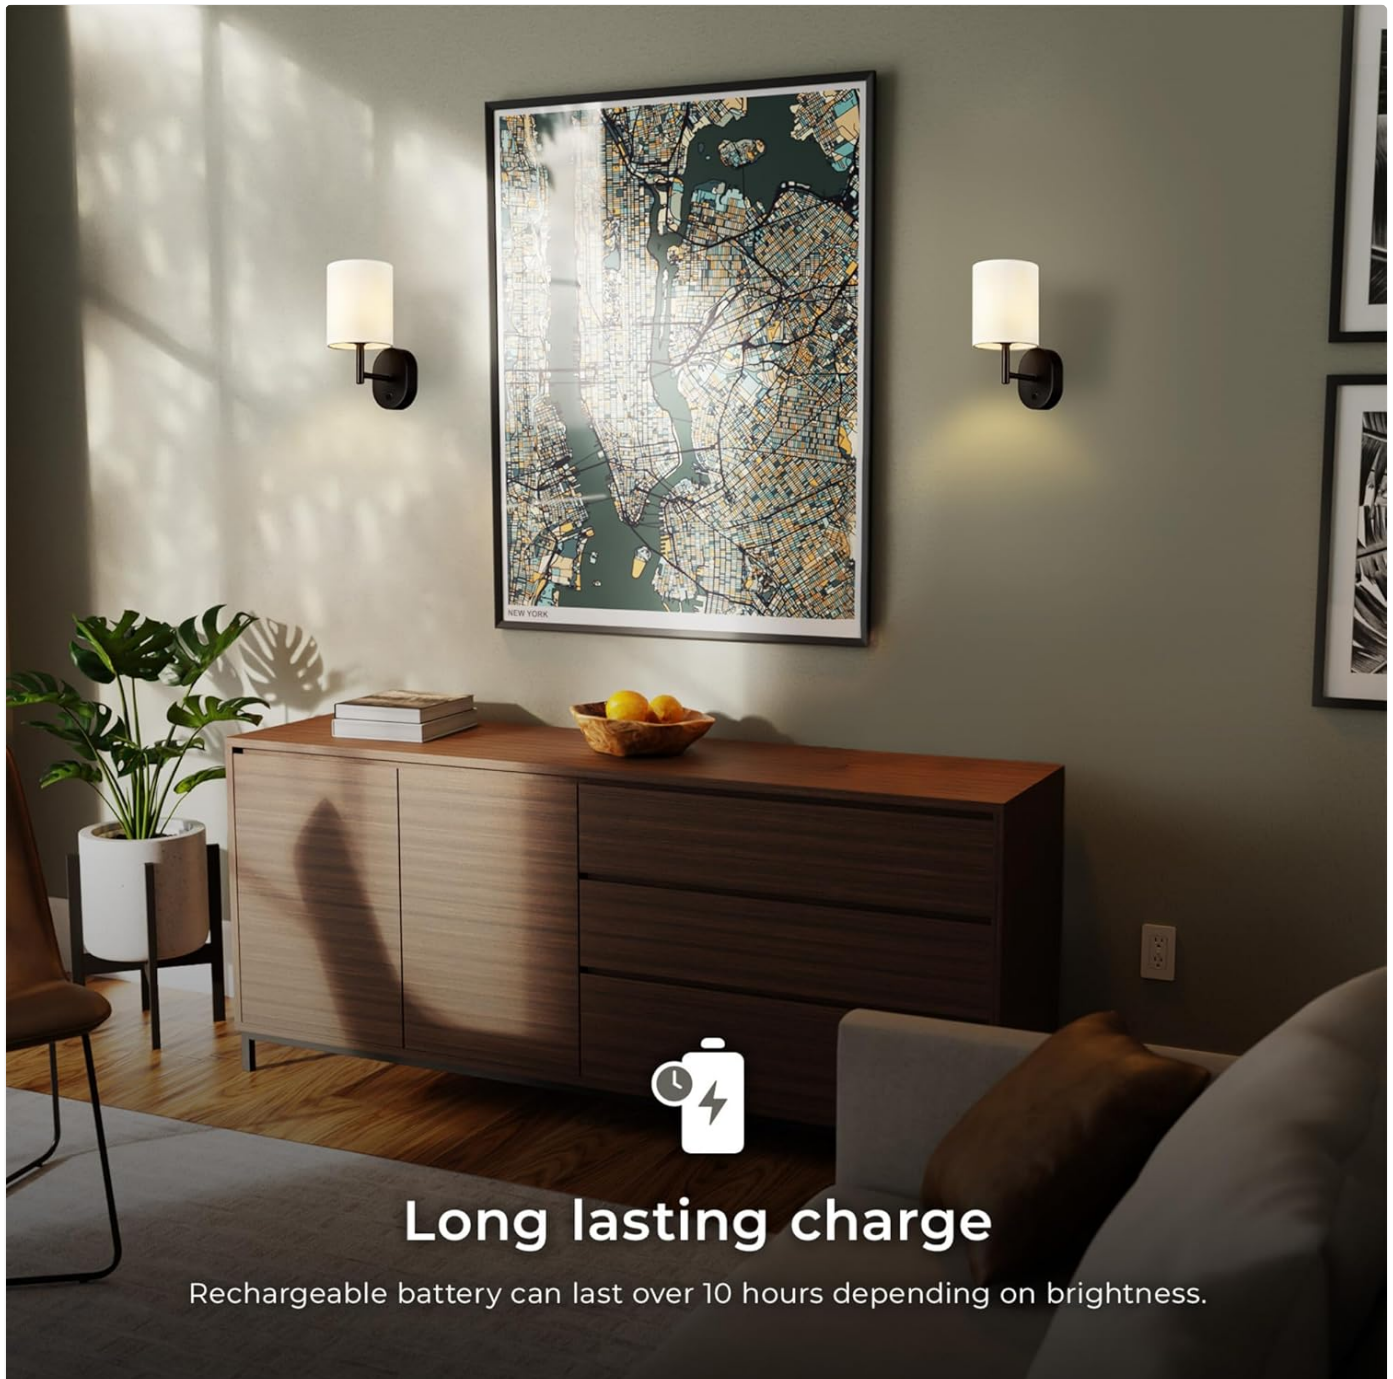


Image 6.1: An icon indicating a long-lasting charge, with text stating "Rechargeable battery can last over 10 hours depending on brightness."

7. MAINTENANCE

Proper care will ensure the longevity of your wall sconce.

- **Cleaning:** Ensure the sconce is turned off and disconnected from any charging cable before cleaning. Wipe the metal parts

with a soft, dry cloth. For the fabric shade, use a lint roller or a soft brush to remove dust. Do not use liquid cleaners or sprays directly on the fixture.

- **Storage:** If storing the sconce for an extended period, ensure it is fully charged and store it in a cool, dry place. Recharge every 3-6 months to maintain battery health.
- **LEDs:** The LED light source is integrated and not user-replaceable. Do not attempt to open the fixture to access the LEDs.

8. TROUBLESHOOTING

If you encounter issues with your wall sconce, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Light does not turn on.	Battery is depleted.	Charge the sconce using the provided USB-C cable.
Light is dim or flickers.	Low battery.	Recharge the sconce.
Touch switch is unresponsive.	Sconce is not charged or a temporary glitch.	Ensure the sconce is charged. Try a soft reset by letting the battery fully deplete and then recharging.
Timer function does not activate.	Button not held long enough.	Ensure you press and hold the touch button for a full 3 seconds until the blue indicator light appears.

If the problem persists, please contact customer support (refer to Section 10).

9. PRODUCT SPECIFICATIONS

Feature	Detail
Model Number	65000108
Brand	GLOBE Electric
Light Source	Integrated LED
Wattage	1.5 Watts
Lumen Output	150 Lumens
Color Temperature	3000 Kelvin (Warm White)
Color Rendering Index (CRI)	90 CRI
Brightness Levels	3-step dimmer (10%, 50%, 100%)
Control Method	Touch Switch
Power Source	Rechargeable Lithium Ion Battery
Charging Port	USB-C
Full Charge Time	Approx. 6 hours
Battery Life (100% brightness)	Up to 10 hours

Feature	Detail
Timer Function	1-hour auto-off
Material	Metal (fixture), Fabric (shade)
Finish	Matte Black (fixture), White (shade)
Product Dimensions	7"L x 9"W x 10.5"H (17.78cm L x 22.86cm W x 26.67cm H)
Item Weight	1.03 Pounds (0.47 kg)
Indoor/Outdoor Usage	Indoor Only



USB-C charging cable included



Image 9.1: Diagram showing the dimensions of the wall sconce: 10.5" (26.67 cm) height, 7" (17.78 cm) length, and 4.88" (12.3 cm) width from the wall.

10. WARRANTY AND CUSTOMER SUPPORT

10.1. Manufacturer's Warranty

This GLOBE Electric 65000108 Rechargeable LED Wall Sconce is covered by a **1-year manufacturer's limited warranty** from the date of purchase. This warranty covers defects in materials and workmanship under normal use. It does not cover damage resulting from misuse, accident, modification, or unauthorized repair.

Please retain your proof of purchase for warranty claims.

10.2. Customer Support



 
For technical assistance, warranty inquiries, or to report missing/damaged parts, please contact GLOBE Electric customer support:


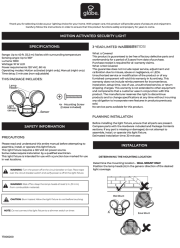 
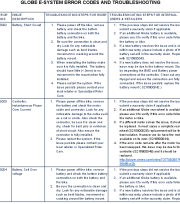 
- **Website:** Visit the official GLOBE Electric website for support resources and contact information.
- **Phone:** Refer to the contact details provided on the product packaging or the official website.
- **Online Store:** You can also visit the [GLOBE Electric Store on Amazon](#) for product information and support.

© 2024 GLOBE Electric. All rights reserved.

Model: 65000108

Related Documents - 65000108

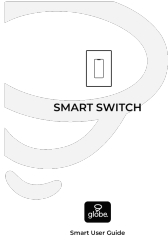	<p>Globe Electric Countertop Panini/Sandwich Grill Instruction Manual</p> <p>Instruction manual for Globe Electric Countertop Panini/Sandwich Grill models GPG1410, GSG1410, GPG1410-C, and GSG1410-C, covering installation, operation, safety, cleaning, troubleshooting, and warranty information.</p>
	<p>Globe Streamwatch Xtreme Prepaid User Manual and Setup Guide</p> <p>Comprehensive user manual for the Globe Streamwatch Xtreme Prepaid device. Learn how to connect to the internet, stream content on your TV, access apps via Google Play, and find troubleshooting solutions. Includes setup guides and device information.</p>
	<p>Globe Smart Switch User Guide</p> <p>User guide for the Globe Smart Switch, detailing installation, setup via the Globe Suite™ app, features like remote control, scheduling, and voice assistant integration. Learn how to enhance your home with smart lighting control.</p>

	<p>Globe SMART FLOOR LAMP User Manual and Setup Guide</p> <p>Comprehensive guide for the Globe SMART FLOOR LAMP, including safety instructions, features, specifications, assembly, and connecting to the Globe Suite app and voice assistants like Google Home and Amazon Alexa.</p>
	<p>Globe Motion Activated Security Light Installation and Operation Guide</p> <p>Comprehensive guide for installing, operating, and troubleshooting the Globe Motion Activated Security Light. Features include specifications, safety precautions, step-by-step installation instructions, and maintenance tips.</p>
	<p>Globe E-System Error Codes and Troubleshooting Guide</p> <p>A comprehensive guide to understanding and resolving error codes for the Globe E-System, providing troubleshooting steps for riders and retailers.</p>

Documents - GLOBE – 65000108

no relevant documents