

Bitty Boomers BITTYSTDUSTINS4

Bitty Boomers Dustin Season 4 Mini Bluetooth Speaker User Manual

Model: BITTYSTDUSTINS4

1. INTRODUCTION

This manual provides instructions for the Bitty Boomers Dustin Season 4 Mini Bluetooth Speaker. This ultra-portable speaker combines pop culture design with wireless audio technology, allowing you to connect to any Bluetooth-enabled device for music playback. It also features a stereo pairing mode for two speakers and a selfie remote function.

2. SAFETY INFORMATION

- Do not expose the device to extreme temperatures, direct sunlight, or high humidity.
- Do not disassemble, repair, or modify the device. This may void the warranty and pose safety risks.
- Keep the device away from water or other liquids. It is not waterproof.
- Use only the provided charging cable or a certified equivalent.
- Dispose of the device and its battery responsibly according to local regulations.

3. PACKAGE CONTENTS

Verify that all items are present in the package:

- Bitty Boomers Dustin Season 4 Mini Bluetooth Speaker
- Micro USB Charging Cable
- Backpack Clip/Strap

4. PRODUCT OVERVIEW

Familiarize yourself with the speaker's components.



Figure 4.1: Front View. This image shows the front of the Bitty Boomers speaker, featuring the character Dustin from Stranger Things Season 4, wearing a 'Thinking Cap' hat and a 'Hellfire Club' shirt design.



Figure 4.2: Side View. This image displays the side profile of the speaker, highlighting the character's curly hair and the compact design.



Figure 4.3: Back View. The rear of the speaker is shown, featuring the Micro USB charging port at the bottom and the character's hair texture.

5. SETUP

5.1 Charging the Speaker

1. Connect the Micro USB charging cable to the charging port located on the back of the speaker.
2. Connect the other end of the USB cable to a USB power source (e.g., computer USB port, USB wall adapter).
3. The speaker will indicate charging status (e.g., LED indicator). A full charge takes approximately 4 hours and provides over 4 hours of music playback.

6. OPERATING INSTRUCTIONS

6.1 Power On/Off

- To power on, press and hold the power button (location varies by model, typically on the base or side)

until you hear an audible cue or see an LED indicator light up.

- To power off, press and hold the power button again until the device shuts down.

6.2 Bluetooth Pairing

1. Ensure the speaker is powered on and within 30 feet of your Bluetooth-enabled device.
2. The speaker will automatically enter pairing mode (indicated by a flashing LED or audible prompt).
3. On your device (smartphone, tablet, laptop), go to Bluetooth settings and search for available devices.
4. Select "Bitty Boomers" from the list.
5. Once connected, the speaker will provide an audible confirmation, and the LED indicator will typically become solid.

6.3 True Wireless Stereo (TWS) Pairing (BB5 Models Only)

This feature allows two Bitty Boomers (BB5 models) to connect and play audio in stereo.

1. Ensure both Bitty Boomers speakers are powered off.
2. Power on both speakers simultaneously.
3. Double-press the power button on one of the speakers. It will search for the other speaker.
4. Once connected, you will hear a confirmation sound. The speakers are now paired in stereo.
5. Connect your Bluetooth-enabled device to one of the paired Bitty Boomers as described in Section 6.2.

6.4 Selfie Remote Function

The speaker can also function as a remote shutter for your phone's camera.

1. Ensure the speaker is paired with your smartphone via Bluetooth.
2. Open your phone's camera application.
3. Press the power button on the Bitty Boomers speaker to trigger the camera shutter.

7. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to wipe the speaker. Do not use abrasive cleaners or solvents.
- **Storage:** Store the speaker in a cool, dry place away from direct sunlight and extreme temperatures when not in use for extended periods.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Charge the speaker regularly, even if not in use.

8. TROUBLESHOOTING

Problem	Possible Solution
Speaker does not power on.	Ensure the speaker is fully charged. Connect to a power source using the Micro USB cable.

Problem	Possible Solution
Cannot pair with a Bluetooth device.	Ensure the speaker is in pairing mode. Turn off and on your device's Bluetooth. Move the speaker closer to your device. Forget the device in your Bluetooth settings and try pairing again.
No sound or low volume.	Increase the volume on both the speaker and your connected device. Ensure the speaker is properly paired. Check if the audio source is playing.
Stereo pairing not working.	Ensure both speakers are BB5 models. Follow the TWS pairing instructions carefully (Section 6.3). Make sure both speakers are fully charged.
Selfie remote not working.	Ensure the speaker is paired with your phone. Check your phone's camera settings for remote shutter compatibility.

9. SPECIFICATIONS

Feature	Detail
Model Name	Bitty Boomers
Item Model Number	BITTYSTDUSTINS4
Speaker Type	Portable Speaker
Wireless Technology	Bluetooth 5.0
Wireless Range	30 Feet (approx. 9 meters)
Music Play Time	Over 4 hours on a single charge
Charging Time	4 Hours
Power Source	Battery Powered
Speaker Maximum Output Power	3 Watts
Product Dimensions	2"D x 2"W x 2"H (approx. 5.1 cm x 5.1 cm x 5.1 cm)
Item Weight	4 ounces (0.25 Pounds)
Waterproof	No
Compatible Devices	Smartphone, Tablet, Laptop, Desktop, Television
Control Method	App (via connected device)
Included Components	Power Cable

10. WARRANTY INFORMATION

This product comes with a Limited Warranty. For specific details regarding warranty coverage, terms, and conditions, please refer to the warranty card included with your purchase or visit the official Bitty Boomers website.

11. SUPPORT

If you encounter any issues or have questions not covered in this manual, please refer to the following resources:

- Visit the official Bitty Boomers website for FAQs and support information.
- Contact the retailer from whom you purchased the product.