

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Bitty Boomers](#) /
- › [Bitty Boomers Netflix Rebel Moon: Jimmy - Mini Bluetooth Speaker User Manual](#)

Bitty Boomers BITTYRMJIMMY

Bitty Boomers Netflix Rebel Moon: Jimmy - Mini Bluetooth Speaker User Manual

Model: BITTYRMJIMMY

INTRODUCTION

This manual provides essential instructions for the safe and efficient use of your Bitty Boomers Netflix Rebel Moon: Jimmy Mini Bluetooth Speaker. Please read this guide thoroughly before operating the device and retain it for future reference.

PACKAGE CONTENTS

Verify that all items listed below are included in your package:

- Bitty Boomers Netflix Rebel Moon: Jimmy Mini Bluetooth Speaker
- Micro USB Charging Cable
- Backpack Clip/Strap

PRODUCT OVERVIEW



Figure 1: Side View. This image displays the side profile of the Bitty Boomers Jimmy speaker, highlighting its distinctive helmet-inspired shape and intricate surface details. Two small grey cylindrical elements are visible on the side.



Figure 2: Rear View and Controls. The rear of the speaker features a circular speaker grille, a Micro USB charging port, and control buttons including power, mode, and track navigation/volume controls.



Figure 3: Retail Packaging. The speaker is shown within its original packaging, which prominently displays the Bitty Boomers logo, Netflix Rebel Moon branding, and the character name "Jimmy".

SETUP

1. Charging the Speaker

1. Connect the supplied Micro USB cable to the charging port on the back of the speaker (refer to Figure 2).
2. Connect the other end of the USB cable to a USB power adapter (not included) or a computer's USB port.
3. The LED indicator will illuminate during charging and turn off once fully charged.
4. A full charge provides over 4 hours of music playback.

2. Power On/Off

- To power on, press and hold the **Power button** (refer to Figure 2) until you hear an audible prompt.
- To power off, press and hold the **Power button** again until you hear an audible prompt.

3. Bluetooth Pairing

1. Ensure the speaker is powered on. It will automatically enter Bluetooth pairing mode, indicated by a flashing LED.
2. On your Bluetooth-enabled device (smartphone, tablet, etc.), navigate to the Bluetooth settings.
3. Search for available devices and select "**Bitty Boomers**" from the list.
4. Once connected, the LED indicator will stop flashing, and you will hear a confirmation tone.
5. The speaker has a wireless range of up to 30 feet (9 meters).

4. True Wireless Stereo (TWS) Pairing (for two Bitty Boomers BB5 models)

To enhance your audio experience, you can connect two Bitty Boomers (BB5 models only) for true wireless stereo sound:

1. Ensure both Bitty Boomers speakers are powered on and not connected to any other Bluetooth device.
2. On one of the speakers, double-press the **Mode (M) button** (refer to Figure 2). The speaker will search for another Bitty Boomers speaker.
3. Once successfully paired, you will hear a confirmation tone, and both speakers will play audio in stereo.
4. Connect your Bluetooth-enabled device to one of the paired Bitty Boomers speakers as described in "3. Bluetooth Pairing".

OPERATING INSTRUCTIONS

1. Music Playback

- **Play/Pause:** Press the **Power button** once to play or pause music.
- **Next Track:** Press the ">>" **button** once to skip to the next track.
- **Previous Track:** Press the "<<" **button** once to go to the previous track.
- **Volume Up:** Press and hold the ">>" **button** to increase volume.
- **Volume Down:** Press and hold the "<<" **button** to decrease volume.

2. Selfie Remote Function

Your Bitty Boomers speaker can also function as a remote shutter for your smartphone camera:

1. Ensure the speaker is paired with your smartphone via Bluetooth.

2. Open your smartphone's camera application.
3. Press the **Power button** on the speaker to remotely trigger your phone's camera shutter.

MAINTENANCE

Cleaning

- Wipe the speaker with a soft, dry cloth.
- Do not use abrasive cleaners, solvents, or harsh chemicals.
- Avoid exposing the speaker to excessive moisture.

Storage

- Store the speaker in a cool, dry place away from direct sunlight and extreme temperatures.
- If storing for an extended period, charge the battery periodically to maintain its lifespan.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Speaker does not power on.	Battery is depleted.	Charge the speaker using the Micro USB cable.
Cannot pair with Bluetooth device.	Bluetooth is off on your device; speaker is too far; speaker is already paired.	Ensure Bluetooth is enabled on your device. Move the speaker closer. Disconnect from other devices or restart the speaker.
No sound or low volume.	Volume is too low on speaker or device; speaker is not connected.	Increase volume on both the speaker and your connected device. Ensure the speaker is properly paired.
TWS pairing fails.	Speakers are too far apart; one speaker is already connected to a device.	Ensure both speakers are close to each other and not connected to any other Bluetooth device before initiating TWS pairing.

SPECIFICATIONS

Model Name:	Bitty Boomers
Model Number:	BITTYRMJIMMY
Speaker Type:	Portable Speaker

Connectivity Technology:	Bluetooth 5.0
Bluetooth Range:	30 Feet (9 meters)
Speaker Maximum Output Power:	5 Watts
Audio Output Mode:	Stereo (with TWS pairing)
Battery Life:	Over 4 hours of music time on a single charge
Product Dimensions (DxWxH):	4"D x 4"W x 5"H (10.16 cm x 10.16 cm x 12.7 cm)
Item Weight:	8 ounces (226.8 grams)
UPC:	746507369010

WARRANTY INFORMATION

This Bitty Boomers product comes with a full warranty. For specific details regarding warranty coverage, duration, and claims, please refer to the warranty card included with your product or contact the manufacturer directly.

CUSTOMER SUPPORT

If you encounter any issues or have questions not covered in this manual, please visit the official Bitty Boomers website or contact their customer support for assistance. Please have your product model number (BITTYRMJIMMY) and purchase information ready.

Official Bitty Boomers Store: [Bitty Boomers Store on Amazon](#)