

Manuals.plus /

> XINJISHIMIN /

> Replacement Remote Control for Daizuki DXTH09C416-20 DXTH09C426-20 DXTH12C416-20 DXTH12C426-20 DXTH18C426-20 DXTH24C426-20 DXTH36C426-17 Mini-Split System Air Conditioner (with Wall Mounting Bracket)

## XINJISHIMIN C124112101D11

# User Manual: Replacement Remote Control for Daizuki Mini-Split System Air Conditioner

Brand: XINJISHIMIN | Model: C124112101D11

## INTRODUCTION

This manual provides instructions for the XINJISHIMIN Replacement Remote Control, designed for various Daizuki Mini-Split System Air Conditioners, including models DXTH09C416-20, DXTH09C426-20, DXTH12C416-20, DXTH12C426-20, DXTH18C426-20, DXTH24C426-20, and DXTH36C426-17. This remote control offers essential functions for operating your air conditioning unit and includes a wall mounting bracket for convenient storage.





Image: The replacement remote control, displaying temperature and mode settings.

## SETUP

---

### 1. Battery Installation

The remote control requires two (2) AAA 1.5V batteries (not included). To install:

1. Open the battery compartment cover on the back of the remote control.
2. Insert two AAA batteries, ensuring the correct polarity (+ and -) as indicated inside the compartment.
3. Close the battery compartment cover securely.

## 2. Wall Mounting Bracket Installation

A wall mounting bracket is included for convenient storage of your remote control.



Image: The remote control and its accompanying wall mounting bracket.

1. Choose a suitable location on a wall, preferably near your air conditioning unit, that is easily accessible and away from direct sunlight or heat sources.
2. Use appropriate screws (not included) to secure the bracket to the wall. Ensure the bracket is level and firmly attached.
3. Place the remote control into the bracket for storage when not in use.



Image: Example of remote control wall mounting near an air conditioning unit.

## OPERATING INSTRUCTIONS

This remote control is designed to operate your Daizuki Mini-Split System Air Conditioner. Ensure there is a clear line of sight between the remote control and the air conditioner's receiver.

### Button Functions:






- **Power Button** (

): Turns the air conditioner

ON or OFF.

- **MODE:** Cycles through operating modes (e.g., Cool, Heat, Fan, Dry, Auto).



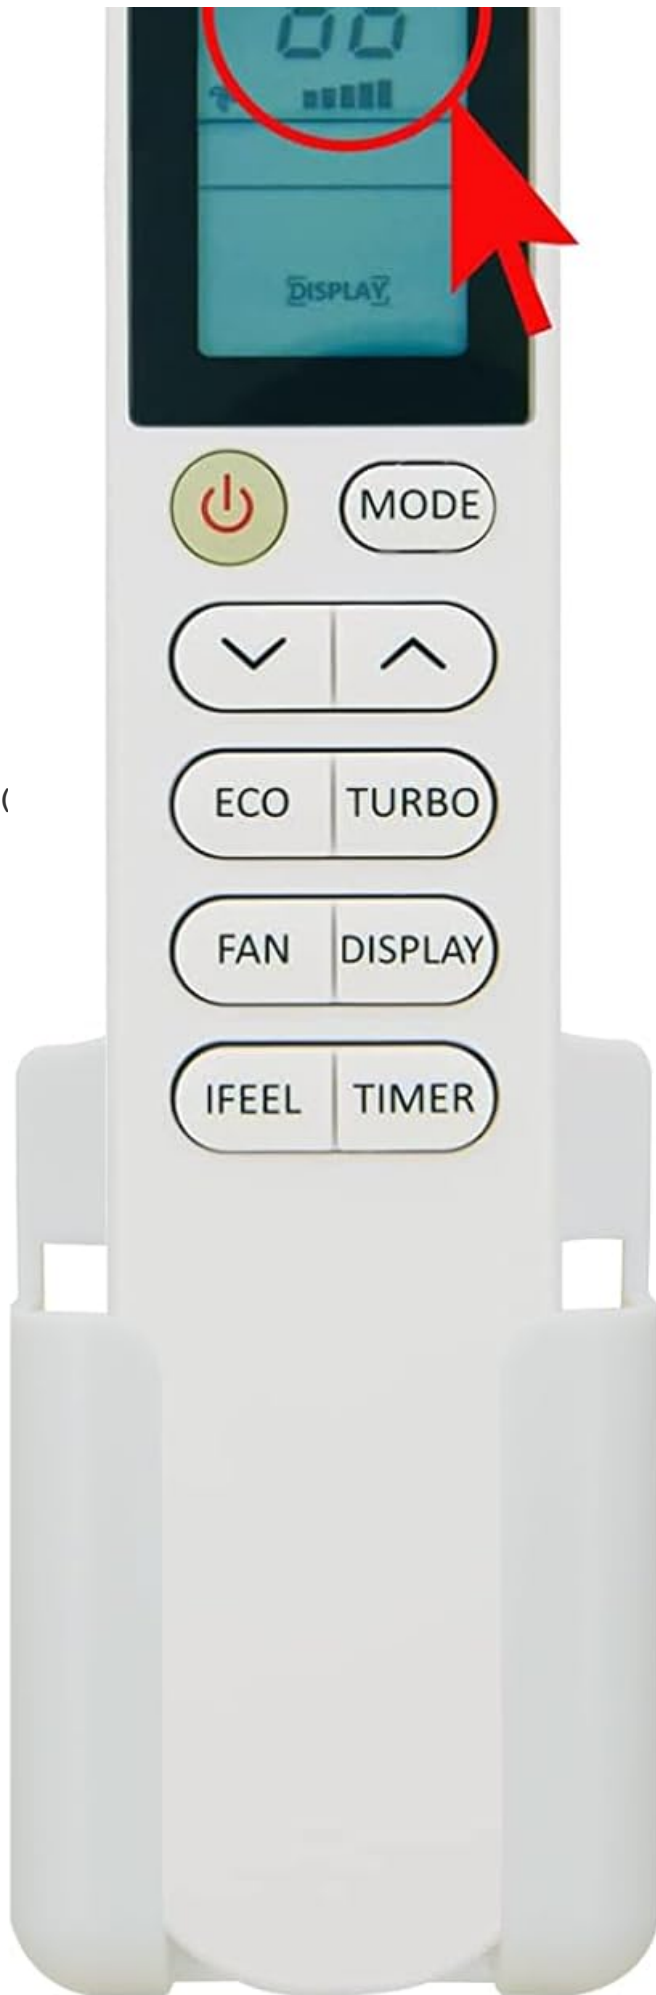

- Temperature Up/Down Arrows (

/



): Adjusts the desired temperature setting.



- **ECO:** Activates or deactivates the energy-saving mode.
- **TURBO:** Engages maximum fan speed for rapid cooling or heating.
- **FAN:** Adjusts the fan speed (e.g., Low, Medium, High, Auto).
- **DISPLAY:** Toggles the display on the air conditioner unit or changes display information. This button also allows switching between Fahrenheit and Celsius temperature display on the remote.
- **IFeel:** Activates the 'I Feel' function, which measures the temperature at the remote's location for more precise comfort control.
- **TIMER:** Sets the ON/OFF timer for the air conditioner.

### Temperature Display:

The remote control supports display in both Fahrenheit (°F) and Celsius (°C). Use the **DISPLAY** button to toggle between these units.

## MAINTENANCE

---

### Cleaning:

To clean the remote control, wipe it gently with a soft, dry cloth. Do not use liquid cleaners, abrasive materials, or chemical solvents, as these may damage the remote's surface or internal components.

### Battery Replacement:

Replace batteries when the remote control's display becomes dim or its operational range decreases. Always replace both batteries simultaneously with new AAA 1.5V batteries. Do not mix old and new batteries or different types of batteries.

## TROUBLESHOOTING

---

- **Remote not responding:**
  - Check if batteries are correctly installed and have sufficient charge. Replace if necessary.
  - Ensure there are no obstructions between the remote control and the air conditioner's receiver.
  - Confirm you are within the operational range of the air conditioner.
- **Display is dim or blank:**
  - Batteries may be low. Replace with new AAA batteries.
- **Air conditioner not responding to specific commands:**
  - Ensure the remote control is pointed directly at the air conditioner's receiver.
  - Verify the air conditioner unit is powered on.

## SPECIFICATIONS

---

Feature	Detail
Model Number	C124112101D11
Compatible Devices	Daizuki Mini-Split System Air Conditioners (DXTH09C416-20, DXTH09C426-20, DXTH12C416-20, DXTH12C426-20, DXTH18C426-20, DXTH24C426-20, DXTH36C426-17)
Connectivity Technology	Infrared
Batteries Required	2 x AAA 1.5V (not included)
Item Weight	1.06 ounces
Package Dimensions	0.39 x 0.2 x 0.08 inches
Max Number of Supported Devices	9999

## WARRANTY AND SUPPORT

---

For warranty information and customer support, please refer to the product packaging or contact the manufacturer directly. Specific warranty terms may vary.