

TEMOLA TS10DK-MSUS011

TEMOLA TS10 Handheld Car Vacuum Cleaner

INSTRUCTION MANUAL

Model: TS10DK-MSUS011 | Brand: TEMOLA

1. Introduction

Thank you for choosing the TEMOLA TS10 Handheld Car Vacuum Cleaner. This portable and cordless vacuum is designed for efficient cleaning of your car, home, and office. Featuring powerful suction and a washable HEPA filter, it provides a convenient solution for maintaining cleanliness. Please read this manual thoroughly before use to ensure proper operation and maintenance.

2. Important Safety Instructions

- Read all instructions before using the appliance.
- Do not use outdoors or on wet surfaces.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or appliance with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce air flow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Do not pick up toxic material, such as chlorine bleach, ammonia, or drain cleaner.

- Do not use without dust bag and/or filters in place.
- Turn off all controls before unplugging.
- Use extra care when cleaning on stairs.
- Do not use to pick up hard or sharp objects such as glass, nails, screws, or coins that could damage the vacuum cleaner.

3. Package Contents

Your TEMOLA TS10 Handheld Car Vacuum Cleaner package includes the following items:

- TEMOLA TS10 Handheld Vacuum Cleaner Unit
- Crevice Nozzle (1)
- Dust Brush (1)
- Washable HEPA Filter (1 installed, 1 extra)
- Type-C Charging Cable
- Drawstring Storage Bag
- Instruction Manual

Convenient Storage and Quickly Charge



High Capacity

2500mAh Rechargeable Battery



USB

Rechargeable



Fast Charging

3-5 Hours



Image: TEMOLA TS10 Handheld Car Vacuum Cleaner with included crevice tool, dust brush, and HEPA filter.

4. Setup and Charging

Before first use, ensure the vacuum is fully charged and accessories are correctly attached.

4.1 Attaching Nozzles

1. Select the desired nozzle (Crevice Nozzle or Dust Brush) for your cleaning task.
2. Align the nozzle with the vacuum's suction opening.
3. Push firmly until it clicks into place.



Image: The TEMOLA TS10 vacuum cleaner shown with both the crevice nozzle and brush nozzle attached, demonstrating versatility for different cleaning needs.

4.2 Charging the Vacuum

The vacuum has a built-in 2*2000mAh high-capacity battery. It takes approximately 4 hours to fully charge and provides up to 20 minutes of use.

1. Connect the Type-C charging cable to the charging port on the vacuum cleaner.
2. Plug the other end of the cable into a compatible USB power adapter (not included).
3. The indicator light will show charging status (e.g., red for charging, off or green for fully charged).
4. Disconnect the charger once fully charged.

Your browser does not support the video tag.

Video: Demonstrates the unboxing and initial setup of the TEMOLA Handheld Vacuum Cleaner, including how to attach accessories and the charging process.

5. Operating Instructions

The TEMOLA TS10 is designed for easy, one-handed operation.

5.1 Powering On/Off

- To turn on the vacuum, press the power button located on the handle.
- To turn off the vacuum, press the power button again.

5.2 Using the Vacuum

- Ensure the appropriate nozzle is attached for the cleaning area.
- For general surfaces, use the main suction opening.
- For tight spaces, crevices, and corners, attach the Crevice Nozzle.
- For delicate surfaces or to agitate stubborn dirt, attach the Dust Brush.
- Move the vacuum slowly over the area to be cleaned, allowing the powerful suction to pick up debris.



Image: The TEMOLA TS10 vacuum cleaner in action, demonstrating its powerful suction on a table covered with small debris.

Your browser does not support the video tag.

Video: Shows the TEMOLA Handheld Car Vacuum Cleaner being used to clean various surfaces in a car, highlighting its portability and effectiveness.

6. Maintenance

Regular maintenance ensures optimal performance and extends the life of your vacuum cleaner.

6.1 Cleaning the Dust Cup and HEPA Filter

The handheld vacuum features a washable and reusable HEPA filter. It is crucial to clean the filter regularly to prevent suction loss and clogging.

1. Press the release button to detach the dust cup from the main unit.
2. Remove the HEPA filter from the dust cup.
3. Empty the contents of the dust cup into a trash receptacle.
4. Rinse the HEPA filter and dust cup under running water. Use a small brush to remove any stubborn debris from the filter.
5. Allow the HEPA filter and dust cup to air dry completely before reassembling. **Do not place a wet filter back into the vacuum.**
6. Once dry, reinsert the HEPA filter into the dust cup and reattach the dust cup to the vacuum unit until it clicks securely.

Washable Filter

Removable and washable HEPA Filter to maintain high cleaning efficiency.



7. Troubleshooting

If you encounter any issues with your TEMOLA TS10 Handheld Car Vacuum Cleaner, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Low suction power	- Dust cup is full. - HEPA filter is dirty or clogged. - Nozzle is blocked.	- Empty the dust cup. - Clean or replace the HEPA filter (ensure it's completely dry before reinserting). - Check and clear any blockages in the nozzle or suction path.
Vacuum does not turn on	- Battery is depleted. - Power button not pressed correctly.	- Charge the vacuum fully. - Ensure the power button is pressed firmly.
Short operating time after full charge	- Battery life degradation over time. - HEPA filter is dirty, causing the motor to work harder.	- Ensure the HEPA filter is clean. - Contact customer support if the issue persists after cleaning the filter and fully charging.

8. Specifications

Feature	Detail
Brand	TEMOLA
Model Name	TS10DK-MSUS011
Special Feature	Portable, Lightweight, Cordless, Compact
Filter Type	HEPA Filter
Included Components	Crevice Tool, Dust Brush
Is Cordless?	Yes
Capacity	350 Grams
Wattage	120 watts
Charging Time	4 Hours
Maximum Suction	8000 Pa
Battery Description	Lithium-Ion
Battery Life	20 minutes

Feature	Detail
Product Dimensions	11"L x 4"W x 4"H
Item Weight	1 pounds
Power Source	Battery Powered
Control Method	Touch

9. Warranty and Support

For warranty information or customer support, please refer to the documentation included with your purchase or contact TEMOLA customer service directly. Keep your purchase receipt for warranty claims.