

[Manuals.plus](#) /

› [binROC](#) /

› binROC Cordless Immersion Blender (Model TG-HB-6009R) Instruction Manual

binROC TG-HB-6009R

binROC Cordless Immersion Blender

MODEL: TG-HB-6009R - INSTRUCTION MANUAL

1. Introduction

Thank you for choosing the binROC Cordless Immersion Blender. This versatile 4-in-1 kitchen tool is designed to simplify your food preparation tasks with its powerful, cordless operation and multiple attachments. Please read this manual thoroughly before first use to ensure safe and optimal performance.



Image 1.1: binROC Cordless Immersion Blender with all included accessories.

2. Safety Instructions

- Always ensure the appliance is switched off and unplugged (if charging) before assembling, disassembling, or cleaning.
- Keep hands, hair, clothing, and utensils away from moving blades during operation to prevent injury.
- Do not immerse the motor unit in water or other liquids. Clean with a damp cloth only.
- This appliance is not intended for use by children. Keep out of reach of children.
- Avoid blending very hard items such as ice cubes or coffee beans with the immersion blender attachment, as this may damage the blades or motor.
- Use caution when handling sharp blades.
- Ensure the chopper lid is securely locked before operating the chopper attachment.
- Do not operate the appliance continuously for longer than 1 minute. Allow a short break between cycles.
- The safety switch must be pressed simultaneously with the speed button to activate the blender.

3. Package Contents

Verify that all items are present in your package:

- Main Motor Unit
- Blender Attachment (Stainless Steel)
- 500ml Chopper Attachment with Lid and Blades
- Whisk Attachment
- 600ml Beaker with Lid
- Type-C USB Charging Cable
- User Manual (this document)

Product Size



Image 3.1: All included components and their approximate dimensions.


4. Product Overview

The binROC Cordless Immersion Blender offers a versatile solution for various kitchen tasks. Its ergonomic design ensures comfortable handling, while the cordless feature provides unrestricted movement.

Key Features:

- **Cordless & Rechargeable:** Freedom to blend anywhere with a Type-C USB charging cable.
- **4-in-1 Functionality:** Includes immersion blender, chopper, whisk, and beaker for diverse culinary needs.
- **Variable Speed Control:** Trigger switch allows intuitive adjustment from low to high speed.
- **Anti-Scratch & Anti-Splash Design:** 304 stainless steel blade with a food-grade semi-enclosed guard protects cookware and prevents splashing.
- **One-Click Detachment:** Easy attachment and detachment for quick cleaning and switching accessories.
- **LED Indicators:** Displays battery level and speed settings.

Trigger Control Grip

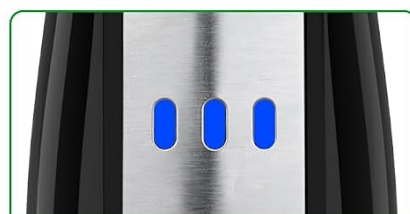

Battery Indicators



Charging Port



Safety Switch

Image 4.1: Detail of the main unit's control panel and charging port.

5. Charging the Device

Before initial use, fully charge the blender's main motor unit. The unit is equipped with a 12V battery.

1. Locate the Type-C USB charging port on the top of the main motor unit.
2. Connect the provided Type-C USB charging cable to the port.

3. Plug the other end of the USB cable into a compatible USB power adapter (not included) or a powered USB port.
4. The LED battery indicators will illuminate to show the charging status. All lights on blue indicate a power level above 80%. A green working indicator light will show when ready to work.
5. Once fully charged, disconnect the charging cable.

Image 5.1: Rechargeable design with battery and charging indicators.

6. Assembly and Attachment Guide

The binROC Immersion Blender features a one-click detachment system for easy assembly and disassembly of its various attachments.

6.1 Attaching/Detaching Accessories:

1. Align the desired attachment (blender, chopper, or whisk) with the main motor unit.
2. Push the attachment onto the motor unit until you hear a 'click', indicating it is securely locked.
3. To detach, press the release buttons on the sides of the motor unit and pull the attachment off.



Image 6.1: One-click installation and removal of attachments.

6.2 Immersion Blender Attachment:

Ideal for blending soups, smoothies, sauces, and baby food directly in pots or the included beaker.

ANTI-SCRATCH & SPLASH DESIGN

The food-grade blade guards protect your cookware from scratches



Image 6.2: Anti-scratch and anti-splash design for clean blending.

6.3 Chopper Attachment:

Use the 500ml chopper for mincing meat, chopping vegetables (onions, carrots), nuts, and preparing ingredients for salsa or hummus.

1. Place the detachable blades onto the central pin inside the chopper bowl.
2. Add ingredients to the chopper bowl.
3. Place the chopper lid onto the bowl, ensuring it is securely twisted and locked.
4. Attach the main motor unit to the chopper lid.

6.4 Whisk Attachment:

Perfect for whisking eggs, whipping cream, or mixing batters.

1. Attach the whisk to the main motor unit.
2. Insert the whisk into the ingredients in a bowl or the 600ml beaker.

7. Operating Instructions

The binROC Immersion Blender features intuitive controls for ease of use.

7.1 Powering On/Off:

To activate the blender, simultaneously press the speed button and the safety switch. The safety switch prevents accidental activation.

7.2 Variable Speed Control:

The variable-speed trigger switch allows you to adjust the blending speed. Simply press the trigger intuitively: light pressure for lower speeds (e.g., for smoothies) and more pressure for greater power and higher speeds (e.g., for tougher ingredients).



Image 7.1: Variable speed control for precise blending.

7.3 Safety Switch:

The safety switch is designed to prevent unintended operation. Always ensure it is engaged when not in use and press it along with the speed button to start the appliance.



Image 7.2: The safety switch ensures secure operation.

Your browser does not support the video tag.

Video 7.1: Demonstration of the Cordless Immersion Blender in use, highlighting its handheld functionality.

8. Cleaning and Maintenance

Proper cleaning ensures the longevity and hygiene of your binROC Immersion Blender.

8.1 Detaching for Cleaning:

All attachments can be easily detached from the main motor unit with one click for separate cleaning.

8.2 Dishwasher Safe Components:

The blender attachment, chopper bowl, chopper blades, whisk, and beaker are dishwasher-safe. Ensure they are placed on the top rack.



Image 8.1: Dishwasher-safe accessories for convenient cleaning.

8.3 Hand Washing:

The main motor unit should never be immersed in water. Wipe it clean with a damp cloth. For other accessories, they can be rinsed directly in water with mild dish soap.



Image 8.2: Easy cleaning methods for the blender and its attachments.

9. Troubleshooting

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Blender does not turn on.	Battery is low or depleted. Safety switch not engaged.	Charge the battery fully. Ensure both the speed button and safety switch are pressed simultaneously.
Blender stops during operation.	Overheating due to prolonged use. Battery depleted.	Allow the unit to cool down. Recharge the battery.
Ingredients are not blending smoothly.	Too many ingredients or ingredients are too hard.	Reduce the quantity of ingredients. Add more liquid if necessary. Avoid very hard items.
Attachments are difficult to remove.	Release buttons not fully pressed.	Ensure both release buttons on the motor unit are fully pressed while pulling the attachment.

10. Specifications

- **Brand:** binROC
- **Model:** TG-HB-6009R
- **Power Source:** Battery Powered (1 x 12V battery included)
- **Voltage:** 5 Volts
- **Blade Material:** 304 Stainless Steel
- **Material Type Free:** BPA Free
- **Chopper Capacity:** 500ml
- **Beaker Capacity:** 600ml
- **Product Dimensions:** 6.6"D x 6.6"W x 15.7"H
- **Item Weight:** 2.9 pounds
- **Special Features:** 4-in-1, Cordless, Variable Speed, Anti-Scratch, Anti-Splash

11. Warranty and Support

Your binROC Cordless Immersion Blender comes with a limited warranty.

- **Warranty Type:** Limited warranty. Please refer to the product packaging or contact customer support for specific terms and conditions.
- **Customer Support:** We offer 365 days service and free replacement for eligible issues. Our customer support team provides 100% response within 24 hours.
- For assistance, please visit the [binROC Store on Amazon](#) or contact us directly through your purchase platform.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question