

[Manuals.plus](#) /

› [ECONTROLLY](#) /

› ECONTROLLY RMT-TX450E Replacement Remote Control User Manual for Sony Bravia TVs

ECONTROLLY RMT-TX450E

ECONTROLLY RMT-TX450E Replacement Remote Control User Manual

Model: RMT-TX450E

1. INTRODUCTION

This manual provides instructions for the ECONTROLLY RMT-TX450E replacement remote control. This remote is designed to be compatible with various Sony Bravia TV models, offering a direct replacement for your original remote without requiring complex setup.

Compatible Sony Bravia TV Models include:

- KD-50X80L, XR-75X90L, XR-77A83L, XR-65X90L, XR-55X90L, XR-65A80L, XR-98X90L, XR-55A80L, XR-65X90L, XR-55A84L, XR-65A95L, KD-43X75WL, XR-83A84L
- FWD-43X80L, KD-65X80L, XR-85X95L, KD-75X75WL, XR-77A95L, XR-55A95L, XR-83A80L, XR-65A84L, XR-55A75L
- KD50X80L, XR75X90L, XR77A83L, XR65X90L, XR55X90L, XR65A80L, XR98X90L, XR55A80L, XR65X90L, XR55A84L, XR65A95L, KD43X75WL, XR83A84L
- FWD43X80L, KD65X80L, XR85X95L, KD75X75WL, XR77A95L, XR55A95L, XR83A80L, XR65A84L, XR55A75L

2. SETUP AND BATTERY INSTALLATION

The RMT-TX450E remote control requires two 1.5V AAA alkaline batteries for operation. No programming or pairing is required; simply install the batteries, and the remote will be ready for use with compatible devices.

2.1 Installing Batteries

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards to open the compartment.
3. Insert two new 1.5V AAA alkaline batteries, ensuring the positive (+) and negative (-) terminals match the diagrams inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.



Figure 1: Battery compartment open, showing battery insertion.



Figure 2: Battery compartment closed.

3. OPERATING INSTRUCTIONS

Once batteries are installed, point the remote control directly at your Sony Bravia TV and press the desired function button. Ensure there are no obstructions between the remote and the TV's infrared receiver.





Figure 3: Front view of the RMT-TX450E remote control.

3.1 Key Functions

- **Power Button ():** Turns the TV on or off.
- **TV Button:** Switches to TV input.
- **Audio Button:** Accesses audio settings or modes.
- **Help Button:** Displays on-screen help or information.
- **Exit Button:** Exits current menu or application.
- **Number Buttons (0-9):** Directly select channels or input numbers.
- **Navigation Pad (Up, Down, Left, Right, Enter):** Navigates through menus and selects options.
- **Menu Button:** Opens the main menu.
- **Volume Up/Down (+/-):** Adjusts the volume level.
- **Channel Up/Down (CH +/-):** Changes TV channels.
- **Mute Button ():** Mutes or unmutes the TV audio.
- **Playback Controls (Play, Pause, Stop, Rewind, Fast Forward):** Controls media playback.
- **Colored Buttons (Red, Green, Yellow, Blue):** Functionality varies depending on the TV model and current on-screen content.

4. MAINTENANCE

4.1 Cleaning the Remote

To clean the remote control, use a soft, dry cloth. For stubborn dirt, lightly dampen the cloth with water or a mild, non-abrasive cleaner. Avoid using harsh chemicals or excessive moisture, as this can damage the remote's electronics.

4.2 Battery Replacement

Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new 1.5V AAA alkaline batteries. Do not mix old and new batteries, or different types of batteries.

5. TROUBLESHOOTING

- **Remote not responding:**
 - Check if the batteries are inserted correctly with the correct polarity.
 - Replace old batteries with new 1.5V AAA alkaline batteries.
 - Ensure there are no obstructions between the remote control and the TV's infrared sensor.
 - Verify that the remote control is pointed directly at the TV.
- **Specific buttons not working:**
 - Ensure the remote is compatible with your specific Sony Bravia TV model. Refer to the compatibility list in Section 1.
 - Clean the remote control, especially around the unresponsive buttons, to remove any dirt or debris that might be interfering with button presses.
- **Intermittent operation:**
 - This often indicates low battery power. Replace the batteries.
 - Ensure you are within the effective range of the TV's infrared receiver.

6. SPECIFICATIONS

Model Number	RMT-TX450E
Brand	ECONTROLLY
Compatible Devices	Sony Bravia Televisions
Power Source	2 x 1.5V AAA Alkaline Batteries (not included)
Product Dimensions	5.91 x 1.57 x 0.59 inches (15 x 4 x 1.5 cm)
Item Weight	3.2 ounces (90.7 grams)
Color	Black
Special Feature	Ergonomic design

7. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation provided with your purchase or contact the seller directly. ECONTROLLY strives to provide reliable products and assistance.

© 2024 ECONTROLLY. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0DNT83HJW>

More documents and user manuals: <https://manuals.plus/>