

ECONTROLLY 55Q20-SENUO

ECONTROLLY Replacement Voice Remote Control User Manual

Compatible with Skyworth Coocaa Android 4K UHD Smart TVs

1. INTRODUCTION

This manual provides instructions for the ECONTROLLY Replacement Voice Remote Control. It is designed for use with various Skyworth Coocaa Android 4K UHD Smart TV models, including 65Q20, 50Q20, 43Q20, 55Q20, TB5000, TB7000, UB5100, CT9010, and HS-8A00J-01. Please read this manual carefully before using the remote control.

2. PACKAGE CONTENTS

- 1 x ECONTROLLY Voice Remote Control

3. PRODUCT OVERVIEW

The remote control features an ergonomic design for comfortable handling and includes dedicated buttons for common functions and streaming services.





Figure 3.1: Front view of the remote control, displaying all buttons including power, voice assistant, settings, navigation pad, back, home, TV input, volume, mute, and quick access buttons for Netflix, Prime Video, YouTube, and Google Play.



Figure 3.2: Angled view of the remote control, showcasing its ergonomic design and button layout from a side perspective.

4. SETUP

4.1 Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery cover downwards to open it.
3. Insert two (2) new 1.5V AAA alkaline batteries, ensuring the positive (+) and negative (-) terminals match the diagrams inside the compartment.
4. Slide the battery cover back into place until it clicks securely.



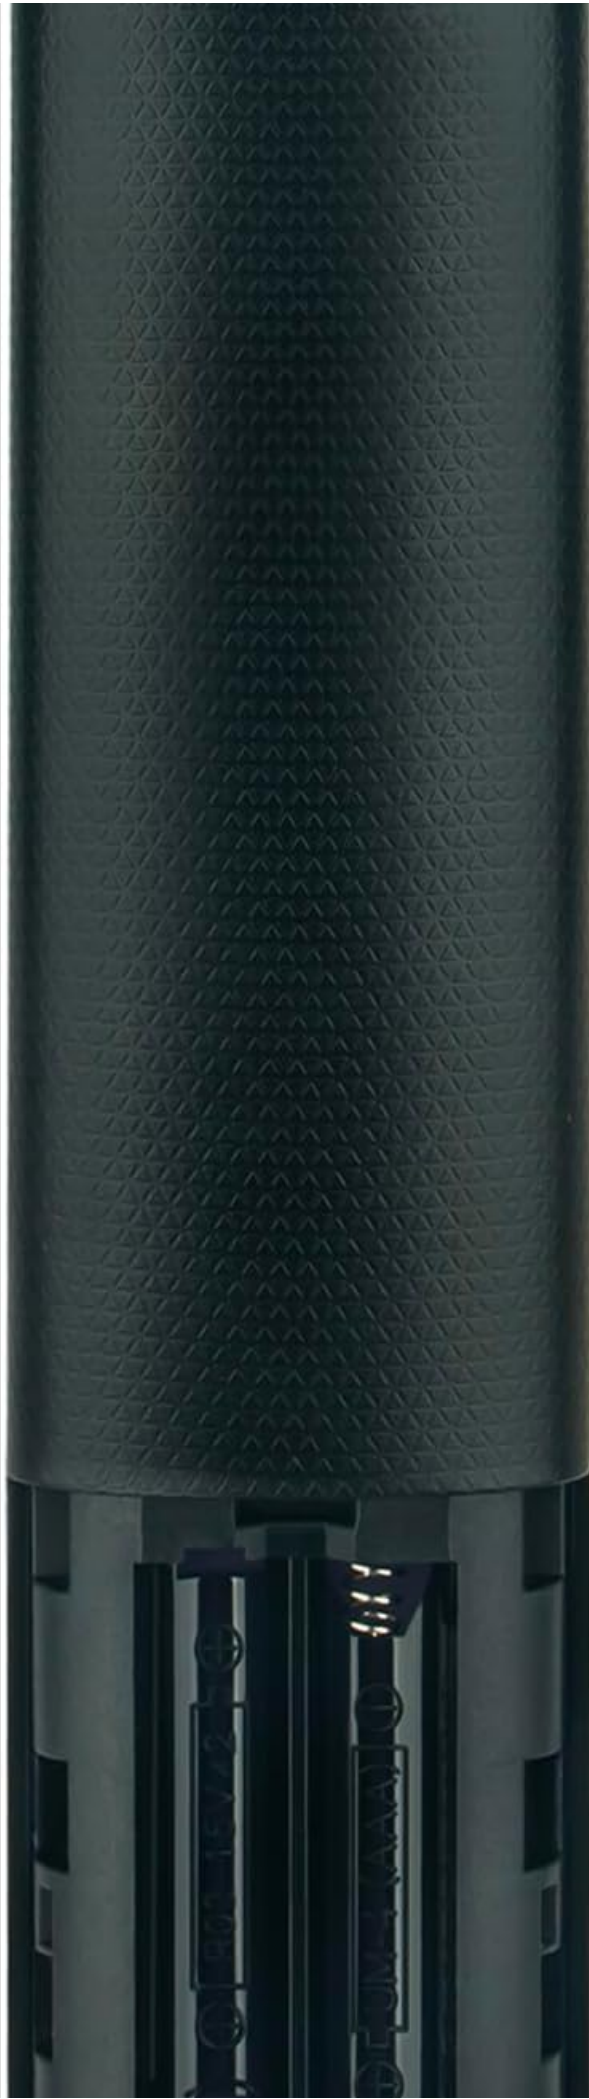




Figure 4.1: The remote control with its battery cover removed, illustrating the correct orientation for inserting two AAA batteries.

4.2 Pairing the Remote Control

This remote control requires pairing with your TV before use to enable full functionality, especially voice control.

1. Ensure your TV is powered on.
2. Install two new 1.5V AAA alkaline batteries into the remote control as described in Section 4.1.
3. Follow the specific pairing instructions provided in your Skyworth Coocaa Android TV's user manual. Typically, this involves navigating to the TV's settings menu (e.g., *Settings > Remotes & Accessories > Add Accessory*) and then pressing a specific button combination on the new remote (often the 'Home' and 'Back' buttons simultaneously, or a dedicated pairing button if present) until the TV detects it.
4. Once detected, select the remote control on your TV screen to complete the pairing process. A confirmation message should appear on your TV.

Note: If pairing fails, ensure the remote is within range of the TV and try the process again. Refer to your TV's manual for model-specific pairing details.

5. OPERATING INSTRUCTIONS

5.1 Basic Functions

- **Power Button** (⏻): Turns the TV on or off.
- **Navigation Pad (Circle)**: Use the directional buttons (Up, Down, Left, Right) to navigate menus and the central button to select items.
- **Back Button** (⏮): Returns to the previous screen or menu.
- **Home Button** (🏠): Accesses the TV's home screen or main menu.
- **Volume Buttons** (+/-): Increases or decreases the TV volume.
- **Mute Button** (🔇): Mutes or unmutes the TV audio.
- **TV Input Button**: Switches between different input sources (HDMI, AV, etc.).
- **Settings Button** (⚙️): Opens the TV's settings menu.

5.2 Voice Control

This remote features a voice control function, allowing you to issue commands to your TV using your voice.

1. Press the Voice Assistant button (often represented by a microphone icon or Google Assistant logo) on the remote control.
2. Hold the remote control near your mouth and speak your command clearly. For example, "Open Netflix," "Search for action movies," or "What's the weather?"
3. Release the Voice Assistant button when you have finished speaking.

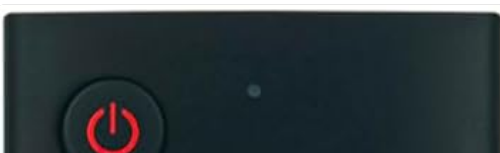




Figure 5.1: The remote control highlighting the Voice Assistant button, used to activate voice commands.

5.3 Quick Access Buttons

Dedicated buttons provide direct access to popular streaming services:

- **NETFLIX:** Launches the Netflix application.
- **Prime Video:** Launches the Amazon Prime Video application.
- **YouTube:** Launches the YouTube application.
- **Google Play:** Launches the Google Play Store or Google Play Movies & TV.

6. TROUBLESHOOTING

- **Remote not responding:**
 - Check if the batteries are inserted correctly and are not depleted. Replace with new AAA batteries if necessary.
 - Ensure there are no obstructions between the remote control and the TV's infrared receiver.
 - Re-pair the remote control with the TV (refer to Section 4.2).
- **Voice control not working:**
 - Ensure the remote is properly paired with the TV. Voice functionality often requires a Bluetooth connection.
 - Speak clearly and hold the remote close to your mouth.
 - Check your TV's settings to ensure voice control is enabled.
- **Quick access buttons not launching apps:**
 - Ensure the TV is connected to the internet.
 - Verify that the respective applications are installed and updated on your TV.

7. SPECIFICATIONS

Product Dimensions	5.91 x 1.57 x 0.59 inches
Item Weight	1.41 ounces
Power Source	2 x AAA 1.5V Alkaline Batteries (not included)
Compatible Devices	Skyworth Coocaa Android 4K UHD Smart TVs (Models: 65Q20, 50Q20, 43Q20, 55Q20, TB5000, TB7000, UB5100, CT9010, HS-8A00J-01)
Model Number	55Q20-SENUO

8. MAINTENANCE

- Clean the remote control with a soft, dry cloth. Do not use liquid cleaners or abrasive materials.
- Avoid exposing the remote to extreme temperatures, direct sunlight, or moisture.
- If the remote will not be used for an extended period, remove the batteries to prevent leakage.

9. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation provided with your purchase or contact the manufacturer directly through their official support channels. Keep your purchase receipt as proof of

purchase.

© 2024 ECONTROLLY. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question