

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [BOURGINI](#) /

› [Bourgini Slimfit Airfryer XL Hot Air Fryer User Manual](#)

## BOURGINI Slimfit

# Bourgini Slimfit Airfryer XL Hot Air Fryer User Manual

Model: Slimfit

## 1. INTRODUCTION

---

Thank you for choosing the Bourgini Slimfit Airfryer XL. This 5-liter, 1500W hot air fryer is designed for healthy cooking with minimal oil, featuring a compact design, ultra-quiet operation, and a durable PFAS-free ceramic non-stick coating. Please read this manual carefully before use to ensure safe and optimal performance of your appliance. Keep this manual for future reference.



Image 1.1: The Bourgini Slimfit Airfryer XL highlighting its PFAS-free ceramic coating, SilentFry technology for quiet operation, and generous XL capacity.

## 2. IMPORTANT SAFETY INSTRUCTIONS

---

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions before use.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electric shock, do not immerse cord, plugs, or the main unit in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Ensure the appliance is placed on a stable, heat-resistant surface.
- Do not block any ventilation openings.

### **3. PRODUCT OVERVIEW**

---

Familiarize yourself with the components of your Bourgini Slimfit Airfryer XL.

#### **3.1 Main Components**

- Main Unit (housing)
- Control Panel with Digital Display
- Removable Frying Basket
- Frying Pan/Drawer
- Handle



Image 3.1: The Slimfit design of the air fryer, showing its compact dimensions (approximately 40cm length, 22cm width, 29cm height) for efficient space utilization.

### 3.2 Control Panel

The digital control panel allows you to easily set cooking parameters and select pre-set programs.

- **Temperature Display:** Shows the current or set temperature.
- **Timer Display:** Shows the remaining cooking time.
- **Temperature Control Buttons:** Adjust temperature up or down.
- **Timer Control Buttons:** Adjust cooking time up or down.
- **Pre-set Program Icons:** Quick selection for common foods (e.g., fries, chicken, fish).
- **Power Button:** Turns the appliance on/off and starts/pauses cooking.



## SLIM-FIT DESIGN

Past perfect in de diepte van het keukenblad voor optimaal gebruik van de ruimte



Image 3.2: Detailed view of the digital control panel, featuring temperature and time adjustments, along with intuitive icons for different food types and functions.

## 4. BEFORE FIRST USE / SETUP

### 4.1 Unpacking

1. Remove all packaging materials from the appliance.
2. Check that all parts are present and in good condition.

### 4.2 Cleaning Before First Use

1. Wipe the main unit with a damp cloth.
2. Wash the frying basket and pan in hot, soapy water. Rinse thoroughly and dry completely. These parts are generally dishwasher safe, but hand washing is recommended to prolong the life of the non-stick coating.
3. Ensure all parts are completely dry before assembly and use.

### 4.3 Placement

- Place the air fryer on a stable, flat, heat-resistant surface.

- Ensure there is at least 10 cm (4 inches) of free space around the back and sides of the appliance to allow for proper ventilation.
- Do not place the appliance near flammable materials or under wall cabinets that are not heat-resistant.

## 5. OPERATING INSTRUCTIONS

---

### 5.1 Preheating

Preheating is recommended for best results, especially for foods that require a crispy exterior.

1. Plug the appliance into a grounded wall outlet.
2. Press the Power button to turn on the display.
3. Set the desired temperature using the temperature control buttons.
4. Set the timer for 3-5 minutes for preheating.
5. Press the Power button again to start preheating. The appliance will beep when preheating is complete.

### 5.2 Cooking Food

1. Pull out the frying pan/drawer by the handle.
2. Place food into the frying basket. Do not overfill the basket to ensure even cooking.
3. Slide the frying pan/drawer back into the appliance until it clicks into place.
4. Set the desired temperature and cooking time using the control panel. Alternatively, select a pre-set program.
5. Press the Power button to start cooking.
6. Some foods may require shaking or tossing halfway through cooking. To do this, carefully pull out the drawer, shake the basket, and reinsert it. The air fryer will resume cooking automatically.
7. When the timer reaches zero, the appliance will beep, indicating cooking is complete.
8. Carefully pull out the drawer and remove the cooked food. Use tongs or heat-resistant utensils.
9. Unplug the appliance after use.



Image 5.1: The air fryer with its frying drawer extended, illustrating how to access the removable basket for loading and unloading food.

## 6. CLEANING AND MAINTENANCE

---

Regular cleaning ensures optimal performance and extends the lifespan of your air fryer.

### 6.1 Cleaning

1. Always unplug the air fryer and allow it to cool completely before cleaning.
2. Wipe the exterior of the appliance with a damp cloth. Do not use abrasive cleaners or scourers.
3. Remove the frying basket and pan. Wash them in hot, soapy water using a non-abrasive sponge. The ceramic non-stick coating is easy to clean.
4. For stubborn food residue, soak the basket and pan in hot water with some dish soap for about 10-15 minutes before cleaning.
5. Clean the interior of the appliance with a damp cloth. Avoid getting water into the heating element area.
6. Ensure all parts are thoroughly dry before storing or reassembling.

### 6.2 Storage

Store the cleaned and dried air fryer in a cool, dry place.

## 7. TROUBLESHOOTING

---

If you encounter any issues with your air fryer, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Air fryer does not turn on.	Appliance not plugged in. No power from outlet.	Ensure the power cord is securely plugged into a working outlet. Check the circuit breaker.
Food is not cooked evenly.	Basket is overfilled. Food not shaken/tossed.	Do not overfill the basket. Shake or toss food halfway through cooking.
Food is not crispy.	Not enough oil (for some foods). Temperature too low or time too short.	Lightly brush or spray food with oil. Increase temperature or cooking time. Ensure preheating.
White smoke coming from appliance.	Grease residue from previous use. Fatty food being cooked.	Clean the frying pan and basket thoroughly after each use. For fatty foods, drain excess fat during cooking.
Appliance emits a burning smell.	New appliance smell (normal for first few uses). Food residue on heating element.	The smell should dissipate after a few uses. Unplug and allow to cool, then check and clean the heating element area if accessible and safe.

If the problem persists after trying these solutions, please contact customer support.

## 8. TECHNICAL SPECIFICATIONS

---

Feature	Specification
Brand	BOURGINI
Model Number	Slimfit
Capacity	5 Liters
Power	1500 Watts
Material	Ceramic (non-stick coating)
Color	Beige
Product Dimensions (L x W x H)	28.2 x 22.8 x 39.9 cm
Item Weight	4.84 Kilograms
Special Features	Temperature Control, Timer, Programmable
Recommended Uses	Bake, Defrost, Reheat, Roast

## 9. WARRANTY AND CUSTOMER SUPPORT

---

BOURGINI products are manufactured to the highest quality standards. In the unlikely event of a defect arising from faulty materials or workmanship, your product is covered by a manufacturer's warranty.

### 9.1 Warranty Information

Please refer to the warranty card included with your purchase for specific terms and conditions, including the warranty period and coverage details. Keep your proof of purchase (receipt) as it will be required for any warranty claims.

### 9.2 Customer Support

For technical assistance, troubleshooting beyond this manual, or to inquire about warranty service, please contact BOURGINI customer support:

- **Website:** Visit the official BOURGINI website for support resources and contact information.
- **Email:** Refer to your product packaging or warranty card for the customer service email address.
- **Phone:** Contact numbers may vary by region. Please check the BOURGINI website for local support numbers.

When contacting support, please have your product model number (Slimfit) and proof of purchase ready.