

Effireli AKB75675311

Effireli AKB75675311 Replacement Remote Control for LG Smart TVs User Manual

INTRODUCTION

This manual provides instructions for the Effireli AKB75675311 replacement remote control, designed for various LG Smart TV models. This remote offers a straightforward, ready-to-use solution without the need for complex programming or setup. Simply insert batteries and begin operation.

Compatible LG TV Models include:

- 55UM71007LB, 55UM7000PLC, 49UM7400PLB, 49UM7390PLC, 49UM7100PLB, 49UM71007LB, 49UM7000PLA
- 43UM7400PLB, 43UM7390PLC, 43UM7100PLB, 43UM71007LB, 43UM7000PLA, 43LM6300PLA
- 32LM630BPLA, 32LM6300PLA, 75UM7110PLB, 75UM7000PLA, 70UM7100PLA
- 65UM7400PLB, 65UM7100PLA, 65UM7000PLA, 60UM7100PLB, 60UM71007LB
- 55UM7400PLB, 55UM7100PLB

If your specific LG TV model is not listed, or if your original remote control has a significantly different appearance, please contact customer support for compatibility verification.

SETUP INSTRUCTIONS

1. Battery Installation

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards or press the latch to open it.
3. Insert two AAA batteries (not included), ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover, sliding it back into place until it clicks securely.

2. Initial Use

The Effireli AKB75675311 remote control is designed for immediate use with compatible LG TVs. No

programming, pairing, or code entry is required. Simply point the remote at your television and press the desired function button.

OPERATING INSTRUCTIONS

Familiarize yourself with the layout and functions of the remote control buttons:



An image showing the full layout of the Effireli AKB75675311 replacement remote control for LG TVs, highlighting all buttons and their labels.

Button Functions:

- **Power (Red button with circle and line):** Turns the television on or off.
- **TV/RAD:** Switches between TV and Radio modes.
- **Search (Magnifying glass icon):** Accesses the search function on your TV.
- **SUBTITLE:** Toggles subtitles on or off.
- **Settings (Gear icon):** Opens the TV's settings menu.
- **Input (Rectangle with arrow icon):** Selects the input source (HDMI, AV, etc.).
- **Number Buttons (0-9):** Directly select channels or input numerical values.
- **LIST:** Displays the channel list or program guide.
- **QUICK ACCESS / AD:** Provides quick access to frequently used apps or functions, and may activate Audio Description.
- **More Options (...):** Accesses additional menu options.
- **Volume Up/Down (Speaker icon with up/down arrows):** Adjusts the volume level.
- **Mute (Speaker icon with a cross):** Mutes or unmutes the sound.
- **GUIDE:** Opens the electronic program guide.
- **Channel Up/Down (Plus/Minus in a box icon):** Changes the television channel.
- **NETFLIX:** Direct access to the Netflix application.
- **Home (House icon):** Returns to the TV's home screen or smart hub.
- **Prime Video:** Direct access to the Prime Video application.
- **BACK:** Returns to the previous screen or menu.
- **Navigation Arrows (Up, Down, Left, Right triangles):** Navigate through menus and options.
- **OK/Enter (Circle button):** Confirms selections.
- **EXIT:** Exits the current menu or application.
- **TEXT:** Accesses teletext services.
- **T.OPT (Tools/Options):** Opens additional tools or options related to the current content.
- **MOVIES:** Direct access to a movie streaming service or TV's movie section.
- **REC (Record):** Initiates recording if your TV supports it with an attached storage device.
- **Stop (Square icon):** Stops playback or recording.
- **Playback Controls (Rewind, Play/Pause, Fast Forward icons):** Controls media playback.
- **Color Buttons (Red, Green, Yellow, Blue squares):** Functionality varies by TV model and application, often used for interactive services or specific menu options.

MAINTENANCE

Battery Replacement

Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries simultaneously with new AAA batteries. Do not mix old and new batteries, or different types of batteries.

Cleaning

Wipe the remote control with a soft, dry cloth. Avoid using liquid cleaners, sprays, or abrasive materials, as these can damage the remote's surface or internal components.

Storage

Store the remote control in a cool, dry place away from direct sunlight and extreme temperatures. If the remote will not be used for an extended period, remove the batteries to prevent leakage.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Remote is unresponsive.	Dead or incorrectly inserted batteries.	Check battery orientation. Replace with fresh AAA batteries.
Remote works intermittently.	Weak batteries; obstruction between remote and TV; remote sensor on TV is blocked.	Replace batteries. Ensure a clear line of sight to the TV's IR sensor. Remove any obstructions.
Certain buttons do not work.	Button malfunction; TV model incompatibility for specific advanced functions.	Ensure the remote is compatible with your specific TV model. If basic functions also fail, the remote may be faulty.

If troubleshooting steps do not resolve the issue, please refer to the Warranty and Support section for further assistance.

SPECIFICATIONS

- **Model Number:** YK-AKB75675311 (AKB75675311)
- **Brand:** Effireli
- **Connectivity Technology:** Infrared (IR)
- **Compatible Devices:** LG Televisions
- **Max Number of Supported Devices:** 1
- **Special Feature:** No Programming Required
- **Package Dimensions:** 6.69 x 1.77 x 0.59 inches
- **Item Weight:** 2.11 ounces

WARRANTY AND SUPPORT

Warranty Information

This Effireli remote control comes with a **12-month warranty** covering manufacturing defects. Additionally, a **30-day money-back guarantee** is provided. Returns and exchanges are accepted within the warranty period for eligible issues.

Customer Support

For any questions regarding compatibility, troubleshooting, or warranty claims, please contact Effireli customer support. Refer to your purchase documentation or the seller's contact information for specific support channels.