

[Manuals.plus](#) /

> [Baby Trend](#) /

> Baby Trend Journey Jogging Stroller, Stellar Grey - Instruction Manual

Baby Trend JG02F51A

Baby Trend Journey Jogging Stroller - Stellar Grey

Model: JG02F51A

INTRODUCTION

The Baby Trend Journey Jogging Stroller is designed for active parents, offering a blend of comfort, safety, and convenience for both child and caregiver. This manual provides essential information for the proper assembly, operation, and maintenance of your stroller.

Key features include:

- All-terrain bicycle tires for a smooth ride.
- Lockable front swivel wheel for enhanced maneuverability.
- Parent tray with two cup holders and a center console.
- Child tray with cup holders and snack areas.
- Large ratcheting canopy with UPF 50+ protection.
- Multi-position, reclining seat with adjustable 5-point safety harness.
- Large, durable footrest.
- Extra-large storage basket with rear access.

WHAT'S IN THE BOX

Verify that all components are present before beginning assembly:

- Jogging Stroller Frame
- Parent Tray
- Child Tray
- Front Wheel (1)
- Rear Wheels (2)

- Canopy

SETUP AND ASSEMBLY

Follow these steps to assemble your Baby Trend Journey Jogging Stroller:

1. **Unfolding the Stroller:** Release any locking mechanisms and carefully unfold the stroller frame until it clicks securely into place. Ensure all frame components are fully extended and locked.
2. **Attaching the Wheels:**
 - **Rear Wheels:** Slide each rear wheel onto its axle until it locks into position. Pull on the wheel to ensure it is securely attached.
 - **Front Wheel:** Insert the front wheel assembly into the designated slot at the front of the stroller until it clicks. Ensure the wheel is securely fastened.



Image: Fully assembled Baby Trend Journey Jogging Stroller in Stellar Grey.

3. **Attaching the Parent Tray:** Align the parent tray with the attachment points on the handlebar and press down until it snaps into place. This tray includes two cup holders and a center console for personal items.



Image: Close-up of the parent tray with cup holders and a storage compartment.

4. **Attaching the Child Tray:** Position the child tray onto the front of the stroller seat and secure it into the designated slots. This tray features cup holders and snack areas for your child.
5. **Canopy Installation:** Attach the canopy to the stroller frame at the designated points. The large ratcheting canopy provides UPF 50+ protection and can be adjusted to shield your child from the sun and elements.

Peek-a-boo window on canopy



Image: View of the peek-a-boo window on the stroller's canopy.

OPERATING INSTRUCTIONS

Adjusting the Seat Recline

The multi-position reclining seat can be adjusted to suit your child's comfort. Locate the recline strap mechanism at the back of the seat. Squeeze the buckle to loosen the strap and recline the seat, or pull the strap to bring the seat to a more upright position. Ensure the seat is securely set before placing your child in the stroller.



Image: Stroller seat shown in a reclined position, indicating adjustability.

Using the 5-Point Safety Harness

Always secure your child with the adjustable 5-point safety harness. Place the shoulder straps over your child's shoulders, connect the waist straps, and insert the buckle tongues into the buckle housing until they click. Adjust the straps for a snug, secure fit. The harness features adjustable height and no-rethread options for convenience.

Locking and Unlocking the Front Swivel Wheel

For jogging or navigating rough terrain, lock the front swivel wheel for stability. For everyday walks and enhanced maneuverability, unlock the front wheel. Refer to the mechanism near the front wheel for specific locking and unlocking procedures.

Folding the Stroller

To fold the stroller for storage or transport, locate the easy push-button fold mechanisms, typically on the handlebar or sides of the frame. Follow the instructions to collapse the stroller into a compact size. Ensure all locking mechanisms engage to keep the stroller folded.

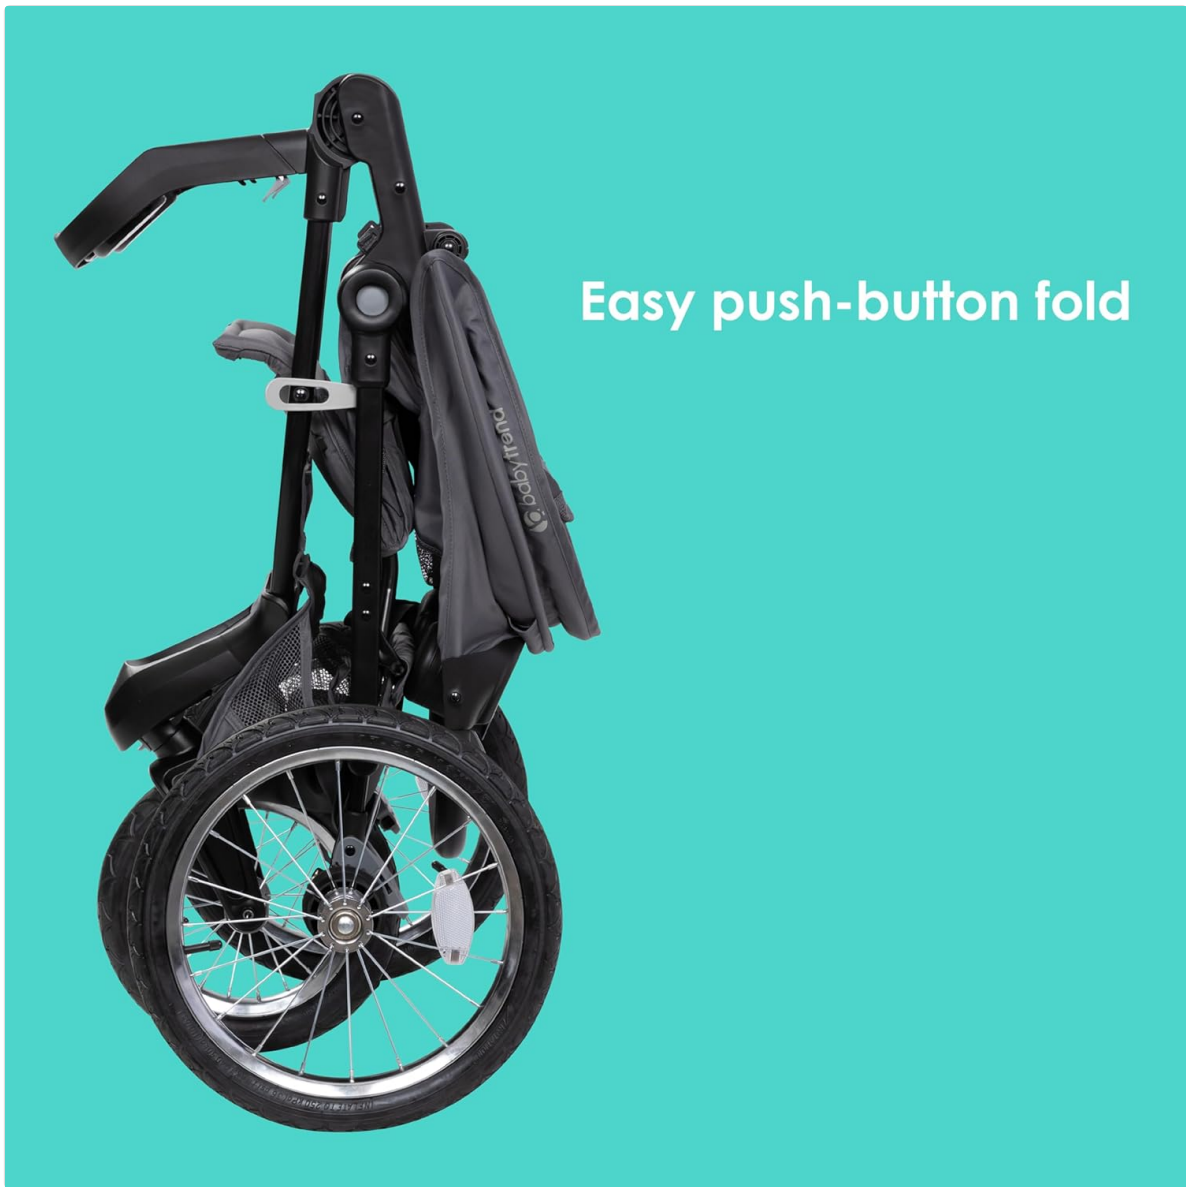


Image: Stroller shown in its folded, compact state.

Car Seat Compatibility

The Baby Trend Journey Jogging Stroller is car seat compatible, allowing you to create a travel system. Consult your car seat's instruction manual for proper installation and compatibility with this stroller model. Ensure the car seat is securely attached before use.

Infant car seat sold separately



EZ-Lift Infant Car Seat easily attaches to stroller to create a travel system

Image: An infant car seat shown attached to the jogging stroller frame.

Storage Basket

Utilize the extra-large storage basket located beneath the seat for carrying essentials. It features rear access for convenience.



Image: A hand placing items into the extra-large storage basket of the stroller.

Product Video Overview

Video: An overview of the Baby Trend Journey Jogger Travel System, demonstrating its features and ease of use, including the lockable swivel wheel, all-terrain tires, and car seat compatibility.

MAINTENANCE

- **Cleaning:** The fabric components are 100% polyester. Spot clean with mild soap and warm water. Do not use bleach. Allow to air dry completely. The frame can be wiped clean with a damp cloth.
- **Tire Care:** The all-terrain bicycle tires require occasional inflation. Use a standard bicycle pump to maintain recommended tire pressure for optimal performance and a smooth ride. Regularly inspect tires for wear and tear.
- **Hardware Inspection:** Periodically check all screws, nuts, and fasteners to ensure they are tight and secure. Replace any worn or damaged parts immediately.

TROUBLESHOOTING

- **Stroller Pulls to One Side:** Ensure the front wheel is properly aligned and locked (if applicable). Check tire pressure on all wheels; uneven pressure can cause pulling.

- **Wobbly Front Wheel:** Verify the front wheel is securely attached and locked. If the wobble persists, inspect the wheel assembly for any damage or loose components. Ensure tire pressure is adequate.
- **Difficulty Folding/Unfolding:** Ensure all locking mechanisms are disengaged before attempting to fold. For unfolding, ensure the frame is fully extended until it clicks into place. Check for any obstructions.
- **Harness Not Securing:** Ensure all buckle tongues are fully inserted into the buckle housing until a click is heard. Adjust straps for a snug fit, ensuring no twists.

SPECIFICATIONS

Feature	Detail
Model Number	JG02F51A
Item Weight	20.5 Pounds
Item Dimensions (L x W x H)	48"L x 23.5"W x 40"H
Folded Size	23.5" x 36.5" x 16"
Maximum Weight Recommendation	50 Pounds
Rear Facing Maximum Weight	30 Pounds
Front Wheel Diameter	11 Inches
Back Wheel Diameter	16 Inches
Harness Type	5 Point
Number of Cup Holders	4 (2 Parent, 2 Child)
Material Type	Metal, Plastic, Polyester (Fabric: 100% Polyester)
Age Range Description	Newborn; Infant; Baby; Toddler; Kid
Color	Stellar Grey



STROLLER DIMENSIONS

23.5"

LENGTH

48"

WIDTH

40"

HEIGHT



STROLLER MAX WEIGHT: 50 POUNDS



STROLLER MAX HEIGHT: 42 INCHES

Image: Visual representation of the stroller's dimensions.

WARRANTY AND SUPPORT

For warranty information, product registration, or to contact customer support, please visit the official Baby Trend website or refer to the documentation included with your purchase. Keep your proof of purchase for warranty claims.

For additional assistance, you may visit the [Baby Trend Store on Amazon](#).