

[Manuals.plus](#) /

› [Blue Diamond](#) /

› Blue Diamond 20x10.5 Inch Electric Griddle Instruction Manual (Model CC008743-001)

Blue Diamond CC008743-001

Blue Diamond 20x10.5 Inch Electric Griddle Instruction Manual

Model: CC008743-001

Brand: Blue Diamond

1. INTRODUCTION

The Blue Diamond 20x10.5 Inch Electric Griddle is designed for versatile cooking, offering ample space for family-sized meals. It features a unique diamond-infused ceramic nonstick coating for durability and easy cleanup. This griddle is free of PFAS, PFOA, lead, and cadmium, ensuring healthier meal preparation. With its intuitive one-knob temperature control and convenient warming drawer, cooking becomes efficient and enjoyable.

BLUE DIAMOND PRO XL GRIDDLE



PFAS-FREE CERAMIC NONSTICK

Our ceramic nonstick interior provides strength, scratch resistance, and simple cleaning



ROOM FOR MORE

The extra-large surface gives you space for family-sized portions or multiple meals at once



OIL DRIPS AWAY

The removable drip tray collects grease to make cleaning even easier

Figure 1: The Blue Diamond Electric Griddle in use, showcasing its spacious cooking surface for various breakfast items.

2. IMPORTANT SAFETY INSTRUCTIONS

To ensure safe operation and prevent injury or damage, please read all instructions before using this appliance. Keep this manual for future reference.

- Always ensure the griddle is placed on a stable, heat-resistant surface.
- Do not immerse the temperature control probe or cord in water or other liquids.
- Unplug the griddle from the outlet when not in use and before cleaning. Allow to cool completely before handling or storing.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Close supervision is necessary when any appliance is used by or near children.
- Avoid using metal utensils on the nonstick surface to prevent scratching. Use heat-resistant plastic, silicone, or wooden utensils.
- Do not touch hot surfaces. Use handles or knobs.
- Ensure the drip tray is correctly inserted before cooking.

3. PARTS AND FEATURES

Your Blue Diamond Electric Griddle comes with several key components designed for optimal performance and ease of use:

- **Spacious Cooking Surface:** An expansive 10.5" x 20" area, ideal for preparing large meals.
- **Diamond-Infused Ceramic Nonstick Coating:** Provides enhanced durability, scratch resistance, and effortless food release. It is PFAS, PFOA, lead, and cadmium-free.
- **Temperature Control Probe:** A removable probe with a dial for precise temperature adjustments (Low, Medium, High).
- **Stay-Cool Handles:** Designed to remain cool to the touch during operation for safe handling.
- **Removable Drip Tray:** Efficiently collects grease and liquids, simplifying cleanup.
- **Built-in Warming Drawer:** Keeps cooked food warm until ready to serve.
- **Glass Lid with Steam Vent:** Allows you to monitor cooking progress while retaining heat and moisture, with a vent to release excess steam.

BLUE DIAMOND PRO XL GRIDDLE



LARGE WARMING DRAWER

Keep your food warm until you're ready to serve



DIAL IN YOUR TEMPERATURE

Easily adjust your temperature for perfect results



EASY TO CLEAN

Wipe the griddle clean or place in the dishwasher without the knob for tougher messes


Figure 2: Overview of the griddle's main components and features.

MORE MEAL OPTIONS

THE DO-IT-ALL GRIDDLE



PANCAKES

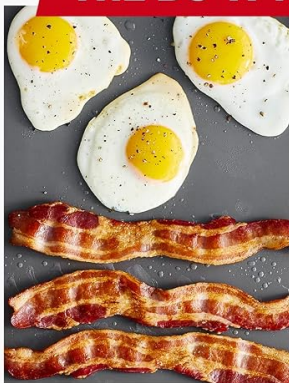

EGGS & BACON



GRILLED CHEESES



FAJITAS



BURGERS



STEAKS



CREPES



COOKIES

Figure 3: The warming drawer keeps food warm, as shown with pancakes.

4. SETUP

1. **Unpack:** Carefully remove all packaging materials and inspect the griddle for any damage.
2. **Initial Cleaning:** Before first use, wash the griddle plate, glass lid, and drip tray in warm, soapy water. Rinse thoroughly and dry completely. The temperature control probe should only be wiped clean with a damp cloth.
3. **Assemble:** Insert the removable drip tray into its slot at the front of the griddle. Attach the temperature control probe securely into the receptacle on the side of the griddle.
4. **Placement:** Place the griddle on a clean, dry, level, and heat-resistant surface, away from walls or cabinets that could be damaged by heat or steam.

5. OPERATING INSTRUCTIONS

The Blue Diamond Electric Griddle offers versatile cooking options, including frying, sautéing, baking, grilling, and steaming.

1. **Connect Power:** Plug the temperature control probe into a standard electrical outlet.
2. **Set Temperature:** Turn the temperature control knob to your desired setting (Low, Medium, or High). The indicator light will illuminate, signaling that the griddle is heating.
3. **Preheat:** Allow the griddle to preheat until the indicator light turns off. This indicates that the set temperature has been reached.
4. **Cooking:** Place food directly onto the preheated nonstick cooking surface. Use the glass lid for steaming or to retain heat and moisture.
5. **Warming Drawer:** Use the pull-out warming drawer to keep cooked items warm while other foods finish cooking.
6. **After Cooking:** Once cooking is complete, turn the temperature control knob to the "OFF" position and unplug the griddle. Allow it to cool completely before cleaning.

A promotional graphic for Blue Diamond Enhanced Ceramic Nonstick. The background is a close-up of a griddle with cookies and a fried egg. Overlaid on this is a dark blue banner with white and red text. The text includes the brand name 'BLUE DIAMOND' with a trademark symbol, followed by 'ENHANCED CERAMIC NONSTICK'. Below this is a red banner with the text 'THE NEW NONSTICK STANDARD'. Further down, it says '5X' with a shield icon, '10X' with a circular arrow icon, and '4X' with a diamond icon and arrows, all followed by the text 'HARDER COATING* • LONGER LASTING* • BETTER HEAT TRANSFER*'. At the bottom, it says 'FREE OF PFAS AND PFOA' in large white letters.

BLUE DIAMOND™
ENHANCED CERAMIC NONSTICK

THE NEW NONSTICK STANDARD

5X  **10X**  **4X** 
HARDER COATING* • LONGER LASTING* • BETTER HEAT TRANSFER*

FREE OF PFAS AND PFOA

Figure 4: The easy-to-use one-knob temperature control for precise cooking.

Your browser does not support the video tag.

Video 1: An official product video demonstrating the features and use of the Blue Diamond XL Griddle.

6. MAINTENANCE AND CLEANING

Proper cleaning and maintenance will extend the life of your electric griddle.

1. **Cool Down:** Always allow the griddle to cool completely before cleaning.
2. **Remove Probe:** Detach the temperature control probe before cleaning the griddle. The probe is not dishwasher safe and should not be immersed in water. Wipe it clean with a damp cloth.
3. **Empty Drip Tray:** Remove and empty the drip tray. Wash it in warm, soapy water or place it in the dishwasher.
4. **Clean Griddle Plate:** The griddle plate can be wiped clean with a soft cloth or sponge and warm, soapy water. For tougher messes, the griddle plate is dishwasher safe once the temperature control probe is removed.
5. **Clean Lid:** The glass lid is dishwasher safe or can be washed by hand.
6. **Storage:** Ensure all parts are completely dry before storing. Store the griddle in a cool, dry place.



DISHWASHER SAFE

Wipe clean or place in the dishwasher without probe

Figure 5: The griddle's nonstick surface allows for easy cleaning under running water.

7. TROUBLESHOOTING

If you encounter issues with your Blue Diamond Electric Griddle, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Griddle does not heat up.	Not plugged in correctly; temperature probe not fully inserted; power outlet malfunction.	Ensure the power cord is securely plugged into both the griddle and a working electrical outlet. Check that the temperature control probe is fully inserted. Test the outlet with another appliance.

Problem	Possible Cause	Solution
Food sticks to the surface.	Insufficient preheating; excessive heat; damaged nonstick coating.	Allow the griddle to fully preheat until the indicator light turns off. Reduce the temperature setting if food is burning. Ensure only non-metal utensils are used to protect the nonstick coating.
Uneven heating.	Griddle not on a level surface; internal heating element issue.	Place the griddle on a flat, level surface. If the problem persists, contact customer support.

8. SPECIFICATIONS

- **Model Number:** CC008743-001
- **Brand:** Blue Diamond
- **Product Dimensions:** 24.21"D x 12.87"W x 4.92"H
- **Cooking Surface:** 10.5" x 20"
- **Material:** PFAS-Free Healthy Ceramic Nonstick
- **Color:** Graphite
- **Item Weight:** 8.53 pounds
- **Special Features:** Grease Management System, Non Stick Coating, Stay-cool Handles, Temperature Control, Warming Drawer
- **Included Components:** XL Griddle, Glass Lid, Temperature Control Probe, Removable Drip Tray

9. WARRANTY AND SUPPORT

Your Blue Diamond Electric Griddle comes with a Limited Warranty. For specific details regarding warranty coverage, please refer to the warranty card included with your product or visit the official Blue Diamond website.

For customer support, troubleshooting assistance, or to inquire about protection plans, please contact Blue Diamond customer service through their official channels. Protection plans for 3-Year, 4-Year, and Complete Protect options may be available for purchase.

