

JBL Wind 3

JBL Wind 3 FM Bluetooth Handlebar Speaker User Manual

Model: JBLWIND3BAO

INTRODUCTION

Thank you for choosing the JBL Wind 3 FM Bluetooth Handlebar Speaker. This manual provides essential information for setting up, operating, and maintaining your speaker. Please read it thoroughly to ensure optimal performance and longevity of your device.

WHAT'S IN THE BOX

Verify that all components are present:

- JBL Wind 3 Speaker
- Handlebar Mount
- USB Charging Cable (not explicitly listed but standard for such devices)
- Quick Start Guide (not explicitly listed but standard for such devices)

PRODUCT OVERVIEW

Familiarize yourself with the speaker's features and controls.



Figure 1: Front view of the JBL Wind 3 speaker in Bluetooth mode, showing the display and control buttons.



Figure 2: Front view of the JBL Wind 3 speaker in FM radio mode, showing the frequency display.



Figure 3: Side view of the JBL Wind 3 speaker, highlighting the integrated clip for attachment.



Figure 4: Bottom view of the JBL Wind 3 speaker, indicating the model name and the attachment point for the handlebar mount.

Controls and Indicators:

- **Power Button:** Turns the speaker on/off.
- **Volume Buttons (+/-):** Adjusts audio volume.
- **Play/Pause Button:** Controls audio playback.
- **Mode Button:** Switches between Bluetooth and FM Radio modes.
- **Display Screen:** Shows current mode, battery level, and FM frequency.
- **Charging Port:** USB port for charging the internal battery.

SETUP

1. Charging the Speaker

Before first use, fully charge the speaker. Connect the provided USB cable to the speaker's charging port and a compatible USB power source. The battery indicator on the display will show charging status.

2. Attaching the Handlebar Mount

The JBL Wind 3 includes a handlebar mount for secure attachment to bicycles or motorcycles.

1. Select a suitable position on your handlebar.
2. Open the clamp of the handlebar mount and position it around the handlebar.
3. Tighten the screw until the mount is secure and does not rotate freely. Do not overtighten.
4. Slide the JBL Wind 3 speaker onto the mount until it clicks into place. Ensure it is firmly attached.



Figure 5: The JBL Wind 3 speaker securely attached to a bicycle handlebar using the provided mount.



Figure 6: View of the JBL Wind 3 speaker mounted on a bicycle handlebar, as seen from the rider's position.

OPERATING

1. Power On/Off

Press and hold the Power button for approximately 2 seconds to turn the speaker on or off.

2. Bluetooth Pairing

1. Turn on the JBL Wind 3 speaker. It will automatically enter Bluetooth pairing mode, indicated by a flashing 'bt' on the display.
2. On your mobile device (smartphone, tablet, etc.), enable Bluetooth and search for available devices.
3. Select 'JBL Wind 3' from the list of devices.
4. Once connected, the 'bt' indicator on the speaker's display will become solid.

3. FM Radio Operation

1. Press the Mode button to switch to FM Radio mode. The display will show 'FM' and a frequency.
2. To auto-scan for stations, press and hold the Play/Pause button. The speaker will scan and save available stations.
3. Use the Volume +/- buttons to navigate through saved FM stations.

4. Audio Playback

- **Play/Pause:** Press the Play/Pause button to start or pause audio.
- **Volume Control:** Press the Volume + or - buttons to adjust the volume.
- **Track Skip (Bluetooth mode):** Double-press the Volume + button for next track, double-press Volume - for previous track.

MAINTENANCE

Cleaning

Wipe the speaker with a soft, damp cloth. Do not use abrasive cleaners or solvents. Ensure the charging port cover is securely closed before cleaning or exposing to water.

Water Resistance

The JBL Wind 3 is water resistant. This means it can withstand splashes and light rain. Do not submerge the speaker in water.

Storage

Store the speaker in a cool, dry place away from direct sunlight and extreme temperatures when not in use for extended periods. Charge the battery periodically to maintain its health.

TROUBLESHOOTING

Problem	Possible Solution
---------	-------------------

Problem	Possible Solution
Speaker does not power on	Ensure the battery is charged. Connect to a power source and try again.
Cannot pair via Bluetooth	Ensure the speaker is in pairing mode. Turn off and on your device's Bluetooth. Move closer to the speaker.
Poor FM radio reception	Move to an open area. Re-scan for stations.
No sound	Check volume levels on both the speaker and your connected device. Ensure the speaker is not muted.
Speaker rattles on bumpy roads	Ensure the handlebar mount is securely tightened. Consider adding additional padding or shims to the mount for a tighter fit.

SPECIFICATIONS

Feature	Detail
Model Name	Wind 3
Item Model Number	JBLWIND3BAO
Mounting Type	Handlebar Mount
Speaker Type	Single Speaker
Connectivity Technology	Bluetooth
Wireless Communication Technology	Bluetooth
Power Source	Battery Powered
Speaker Maximum Output Power	5 Watts
Frequency Response	20000 Hz
Audio Output Mode	Stereo
Control Method	Push Button, Touch
Is Waterproof	True
Water Resistance Level	Water Resistant
Product Dimensions	2.06 x 2.88 x 3.88 inches
Item Weight	13.4 ounces (0.38 Kilograms)
UPC	050036396622

WARRANTY AND SUPPORT

The JBL Wind 3 FM Bluetooth Handlebar Speaker comes with a Limited Warranty. For detailed warranty

information, product support, or service inquiries, please visit the official JBL website or contact their customer service directly. Keep your purchase receipt as proof of purchase for warranty claims.
For further assistance, please refer to the official JBL support resources:

- JBL Official Website: www.jbl.com

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question