

- Manuals.plus /
- › SMAEL /
 - › SMAEL 8109 Digital Watch User Manual

SMAEL 8109

SMAEL 8109 Digital Watch User Manual

Model: 8109

1. INTRODUCTION

Thank you for choosing the SMAEL 8109 Digital Watch. This manual provides detailed instructions on how to set up, operate, and maintain your watch. Please read this manual carefully to ensure proper use and to fully utilize all features of your new timepiece.

2. PRODUCT OVERVIEW

The SMAEL 8109 is a robust digital and analog watch designed for outdoor and sport activities. It features a durable ABS case, a comfortable TPU band, and a clear Plexiglass dial window. The watch combines a precise quartz movement for analog timekeeping with an electronic movement for digital functions, including a chronograph and luminous display.



Figure 2.1: Front view of the SMAEL 8109 digital watch, showcasing its rectangular black case, digital and analog displays, and multiple function buttons.



Figure 2.2: An angled view of the SMAEL 8109 digital watch, highlighting its robust case design and side buttons.

3. SETUP

3.1 Initial Inspection

Upon unpacking, inspect the watch for any visible damage. Remove any protective films from the watch face or case back.

3.2 Setting Time and Date

Your SMAEL 8109 watch features both analog and digital time displays. The analog hands are typically set via the crown

on the side, while the digital display is set using the push buttons.

1. **Setting Analog Time:** Pull out the crown (usually located on the right side) to the first or second click position (depending on the model). Rotate the crown to adjust the hour and minute hands. Once set, push the crown back in to secure the time.

2. **Setting Digital Time and Date:**

- Press the **MODE** button (often bottom-left) repeatedly until the time setting mode is displayed (usually indicated by flashing digits).
- Use the **ADJUST** button (often top-left) to select the digit or setting you wish to change (e.g., hours, minutes, year, month, day).
- Use the **START/RESET** button (often top-right or bottom-right) to increase the value of the flashing digit.
- Once all settings are correct, press the **MODE** button again to exit the setting mode.

3.3 Setting Alarm

To set the alarm, navigate to the alarm mode using the **MODE** button. Follow a similar procedure as setting the digital time, using the **ADJUST** and **START/RESET** buttons to set the desired alarm time. Press **MODE** to confirm.

4. OPERATING INSTRUCTIONS

4.1 Button Functions

Your watch typically has four buttons, usually labeled A, B, C, D or with icons, located around the watch case. Their functions generally are:

- **Button A (Top-Left):** Often used for **ADJUST** or selecting settings.
- **Button B (Top-Right):** Often used for **START/RESET** in chronograph mode or increasing values during setting.
- **Button C (Bottom-Left):** The **MODE** button, used to cycle through different functions (Time, Date, Alarm, Chronograph).
- **Button D (Bottom-Right):** Often used for **LIGHT** or switching between 12/24-hour format.

4.2 Mode Switching

Press the **MODE** button (Button C) to cycle through the available modes:

1. Time Display (main screen)
2. Chronograph (Stopwatch)
3. Alarm Setting
4. Date Display

4.3 Using the Chronograph (Stopwatch)

1. Navigate to the Chronograph mode using the **MODE** button.
2. Press the **START/RESET** button (Button B) to start the stopwatch.
3. Press **START/RESET** again to pause the stopwatch.
4. To resume, press **START/RESET** again.
5. To reset the stopwatch to zero, ensure it is paused, then press the **ADJUST** button (Button A).

4.4 Using the Luminous Backlight

To illuminate the digital display in low-light conditions, press the**LIGHT** button (often Button D). The backlight will typically stay on for a few seconds.

4.5 Water Resistance Guidelines

Your SMAEL 8109 watch has a water resistance depth of 5 Bar (50 meters), making it suitable for daily use, showering, and swimming in shallow water. **Important: Do not press any buttons while the watch is submerged in water, as this can compromise the water resistance and lead to water ingress. Avoid hot water exposure.**

5. MAINTENANCE

5.1 Cleaning

Wipe the watch case and band regularly with a soft, damp cloth. For stubborn dirt, a mild soap solution can be used, followed by rinsing with clean water and drying thoroughly. Avoid using harsh chemicals or abrasive materials.

5.2 Battery Care

The watch uses a combination of quartz and electronic movements, each powered by a battery. When the digital display dims or the analog hands stop, it indicates a low battery. Battery replacement should be performed by a qualified watch technician to ensure proper sealing and water resistance.

5.3 Storage

When not in use, store your watch in a cool, dry place away from direct sunlight, extreme temperatures, and strong magnetic fields. Keep it away from chemicals and solvents.

6. TROUBLESHOOTING

- **Digital Display is Blank:** Check if the battery is low. If the watch is new, ensure any protective battery tabs have been removed.
- **Incorrect Time/Date:** Refer to Section 3.2 for instructions on how to set the time and date.
- **Buttons Unresponsive:** Ensure the watch is not in a locked mode (if applicable) or that no buttons are stuck. If submerged, remove from water and allow to dry completely before attempting to use buttons.
- **Water Inside Watch:** If you notice condensation or water inside the watch, stop using it immediately and take it to a professional watch repair service. This indicates a breach in water resistance.

7. SPECIFICATIONS

Feature	Specification
Brand Name	SMAEL
Model Number	8109

Style	Sport
Case Shape	Barrel shape
Gender	Men
Movement	Quartz + Electronic
Item Type	Digital Wristwatches
Band Material Type	TPU
Case Material	ABS
Dial Window Material Type	Plexiglass
Band Width	2.2 cm
Dial Diameter	5 cm
Water Resistance Depth	5 Bar (50 meters)
Clasp Type	Needle Buckle
Origin	Mainland China
Certification	CE

8. WARRANTY INFORMATION

For specific warranty details regarding your SMAEL 8109 watch, please refer to the documentation provided at the time of purchase or contact the seller directly. Warranty terms typically cover manufacturing defects but may not cover damage resulting from improper use, accidents, or unauthorized repairs.

9. CUSTOMER SUPPORT

If you encounter any issues not covered in this manual or require further assistance, please contact the retailer or the official SMAEL customer support channel. Provide your model number (8109) and a detailed description of the issue for efficient service.

© 2024 SMAEL. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0DNVS9ZH8>

More documents and user manuals: **<https://manuals.plus/>**