



[Manuals.plus](#) /

› [P PANACARE](#) /

› P PANACARE Automatic Bubble Machine Instruction Manual

P PANACARE Automatic Bubble Machine

P PANACARE Automatic Bubble Machine Instruction Manual

Model: Automatic Bubble Machine

INTRODUCTION

Thank you for choosing the P PANACARE Automatic Bubble Machine. This portable bubble blower is designed to create a fun and engaging atmosphere with over 10,000 bubbles per minute and integrated LED lights. This manual provides essential information for the safe and efficient use, setup, operation, and maintenance of your bubble machine. Please read it thoroughly before first use and retain it for future reference.



Image: The P PANACARE Automatic Bubble Machine, ready for use.

WHAT'S IN THE BOX

Carefully unpack the box and ensure all items are present and in good condition. If any items are missing or damaged, please contact customer support.

- 1 x Bubble Machine
- 1 x Bubble Liquid (240ml)
- 1 x USB Cable
- 1 x Screwdriver
- 1 x Rechargeable Battery



1*Rechargeable battery 1* 160ML Bubble Water

1*Screwdriver

Products Include List



Image: The product package contents, including the bubble machine, bubble solution, rechargeable battery, USB cable, and screwdriver.

SAFETY INFORMATION

Please observe the following safety precautions to prevent injury or damage to the product:

- Keep bubble solution away from eyes and fire. In case of contact with eyes, rinse immediately with plenty of water.
- This product is recommended for ages 3 years and up. Adult supervision is advised for younger children.
- Do not immerse the bubble machine in water or other liquids.
- Use only the recommended bubble solution. Other solutions may damage the machine.
- Ensure the battery compartment is securely closed before operation.
- If using AA batteries (not included), do not mix old and new batteries, or different types of batteries.
- Remove batteries if the device will not be used for an extended period.

SETUP

Follow these steps to set up your P PANACARE Automatic Bubble Machine:

1. **Install Battery:** Open the battery compartment using the provided screwdriver. Insert the rechargeable battery, ensuring correct orientation. Alternatively, if using AA batteries (not included), insert them with correct polarity. Close the compartment securely.
2. **Add Bubble Solution:** Unscrew the cap from the provided bubble solution bottle. Carefully pour the bubble solution into the designated reservoir on the bubble machine. The machine features a separate sealed bubble liquid bottle design to help prevent leakage.
3. **Charging (Optional):** If the rechargeable battery is low or if you prefer continuous power, connect the included USB cable to the machine and a power bank or suitable USB power adapter.



Image: Visual guide for setting up the bubble machine, illustrating battery installation and adding bubble solution.

OPERATING INSTRUCTIONS

Once set up, operating your bubble machine is simple:

1. **Power On:** Locate the power switch (usually a button or toggle) on the machine. Press or slide it to the "ON" position.
2. **Bubble Generation:** The machine will immediately begin producing a continuous stream of bubbles from its 12 bubble holes. The integrated LED lights will also activate, enhancing the visual effect, especially in low-light conditions.
3. **Power Off:** To stop the bubble machine, press or slide the power switch to the "OFF" position.

The P PANACARE Automatic Bubble Machine is designed to produce over 10,000 bubbles per minute, creating a rich bubble environment for various events.



Image: Children playing with numerous bubbles, demonstrating the machine's high bubble output in an outdoor setting.

MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your bubble machine:

- **Cleaning:** After each use, especially if using for an extended period, empty any remaining bubble solution. Wipe the

exterior of the machine with a damp cloth. Do not use abrasive cleaners.

- **Rinsing:** For thorough cleaning, you may carefully rinse the bubble wand area with clean water to prevent residue buildup. Ensure the machine is completely dry before storing or next use.
- **Storage:** Store the bubble machine in a cool, dry place away from direct sunlight. Remove batteries if storing for a long duration.

TROUBLESHOOTING

If you encounter issues with your bubble machine, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
No bubbles are produced.	No bubble solution. Batteries are dead or incorrectly installed. Power switch is off. Bubble wand is clogged.	Refill the bubble solution reservoir. Replace batteries or check installation. Ensure the rechargeable battery is charged. Turn the power switch to "ON". Clean the bubble wand area to remove any residue.
Few bubbles or weak stream.	Low battery power. Insufficient bubble solution. Bubble solution quality.	Replace batteries or recharge. Add more bubble solution. Ensure you are using a high-quality bubble solution.
Machine leaks solution.	Overfilled reservoir. Machine tilted. Loose bubble solution bottle.	Do not overfill the reservoir. Keep the machine on a flat, stable surface. Ensure the bubble solution bottle is securely attached.

SPECIFICATIONS

Feature	Detail
Product Dimensions	7.28 x 3.54 x 3.54 inches
Item Weight	1.45 pounds
Material	ABS
Power Supply	Rechargeable Battery / AA Battery (not included) / USB Charging
Bubble Output	10,000+ bubbles per minute
Bubble Holes	12 holes
Recommended Age	3 years and up

WARRANTY AND SUPPORT

Information regarding product warranty and customer support was not available in the provided product data. For any inquiries or assistance, please refer to the contact information provided with your purchase or visit the official PANACARE website.

