

Berdson BD-706

Berdson BD-706 Electric Kettle User Manual

Model: BD-706 | Capacity: 1.7L | Power: 2200W

1. INTRODUCTION

Thank you for choosing the Berdson BD-706 Electric Kettle. This appliance is designed for efficient water heating with precise temperature control and enhanced safety features. Please read this manual carefully before first use and keep it for future reference.

Key Features:

- **Advanced Soft Touch Panel:** Intuitive control for temperature settings (70°C, 80°C, 90°C, 100°C), 2-hour keep warm function, and quick on/off.
- **Precise Temperature Control:** Ideal for various beverages like tea, coffee, or honey water.
- **Seamless Stainless Steel Interior:** Ensures cleaner water, easy cleaning, and extended product lifespan.
- **Double-Layer Cool-Touch Housing:** Minimizes burn risk and provides superior thermal insulation.
- **2200W Power:** For rapid water boiling.
- **Minimalist Design:** Black finish with LED display and matte texture to complement any kitchen.

2. SAFETY INSTRUCTIONS

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and personal injury.

- Do not immerse the kettle, power base, cord, or plug in water or other liquids.
- Ensure the voltage indicated on the appliance corresponds to your local mains voltage before connecting.
- Keep the appliance out of reach of children. Close supervision is necessary when used near children.
- Do not operate the kettle if the cord or plug is damaged, or if the appliance malfunctions or has been damaged in any way.
- Place the kettle on a firm, flat, heat-resistant surface, away from the edge of the countertop to prevent tipping.
- Do not fill above the maximum fill line or below the minimum fill line.

- Always ensure the lid is securely closed during operation.
- **Cool-Touch Exterior:** The double-layer housing is designed to keep the exterior cool, but caution should still be exercised as steam can be hot.
- Unplug the kettle from the outlet when not in use and before cleaning.



Image: The kettle features a cool-touch exterior, minimizing the risk of burns during operation.

3. PACKAGE CONTENTS

Upon unpacking, please ensure all items are present and in good condition:

- Berdsen BD-706 Electric Kettle
- Power Base with Cord
- User Manual (this document)



Image: The Berdsen BD-706 Electric Kettle and its retail packaging.

4. SETUP

1. **Unpack:** Remove all packaging materials from the kettle and power base.
2. **Initial Cleaning:** Before first use, fill the kettle with clean water to the maximum level. Boil the water (see Operating Instructions) and then discard it. Repeat this process 2-3 times to remove any manufacturing residues.
3. **Placement:** Place the power base on a dry, flat, stable, and heat-resistant surface. Ensure the power cord is not dangling or in contact with hot surfaces.

5. OPERATING INSTRUCTIONS

Filling the Kettle:

- Remove the kettle from its power base.
- Open the lid.
- Fill the kettle with fresh water, ensuring it is between the MIN and MAX fill marks. Do not overfill.
- Close the lid securely.
- Place the kettle back onto the power base.

Using the Soft Touch Control Panel:



Image: The kettle's control panel showing temperature settings and suggested uses.

1. **Power On:** Plug the power base into a suitable electrical outlet. The LED display will illuminate.
2. **Select Temperature:** Press the desired temperature button (70°C, 80°C, 90°C, 100°C). The selected temperature will be displayed, and the kettle will begin heating.
3. **Boil Function (100°C):** Press the '100°C' button to quickly boil water to 100°C. The kettle will automatically shut off once boiling is complete.
4. **Keep Warm Function:** After selecting a temperature and the water reaches it, press the 'Warm' button. The kettle will maintain the selected temperature for up to 2 hours. To deactivate, press the 'Warm' button again or lift the kettle from the base.
5. **Power Off:** To turn off the kettle manually, press the power button (). The kettle will automatically shut off when the set temperature is reached or if it boils dry.



Image: The kettle pouring water into a cup, demonstrating its use.

6. MAINTENANCE AND CLEANING

Regular cleaning and maintenance will ensure the longevity and optimal performance of your kettle.

Exterior Cleaning:

- Always unplug the kettle and allow it to cool completely before cleaning.
- Wipe the exterior with a soft, damp cloth. Do not use abrasive cleaners or scouring pads, as they may scratch the surface.
- Ensure the power base and cord remain dry.

Interior Cleaning and Descaling:

Over time, mineral deposits (limescale) may build up inside the kettle, especially in hard water areas. Descaling regularly will improve performance and extend the kettle's life.



Wasserkocher von Berdson - stilvoll und funktional

- Der Wasserkocher ist mit einem hitzebeständigen Griff und einem beleuchteten Schalter ausgestattet, was eine einfache und sichere Bedienung gewährleistet.
- Der Wasserstandsanzeiger aus transparentem Material ermöglicht es, die Wassermenge schnell zu überprüfen.
- Er verfügt über einen metallischen Anti-Kalk-Filter, der verhindert, dass Kalk in das Getränk gelangt. Der Filter kann leicht gereinigt oder ausgetauscht werden, was die Langlebigkeit des Wasserkochers gewährleistet.

Image: The kettle's stainless steel interior and filter in the spout.

1. Fill the kettle with a mixture of one part white vinegar and two parts water.
2. Bring the mixture to a boil and then let it stand for at least 30 minutes, or longer if limescale is heavy.
3. Empty the kettle and rinse thoroughly with fresh water several times.
4. For stubborn deposits, a commercial descaling agent designed for kettles can be used following the product's instructions.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Kettle does not turn on.	Not plugged in; no power; kettle not properly seated on base.	Check power connection; ensure kettle is correctly placed on the base.
Water not heating.	Lid not closed; insufficient water; auto shut-off activated.	Ensure lid is closed; fill with water above MIN level; reset by lifting and replacing kettle.
Kettle switches off too soon.	Limescale buildup; dry boil protection activated.	Descale the kettle; ensure sufficient water is added.
Water has an unusual taste.	New kettle residue; limescale buildup.	Perform initial cleaning steps again; descale the kettle.

8. SPECIFICATIONS



Image: Dimensions of the Berdsen BD-706 Electric Kettle.

Feature	Detail
Brand	Berdsen
Model Name	BD-706 (Manufacturer Model: 370600)
Capacity	1.7 Liters
Power	2200 W

Feature	Detail
Material	Metal (Stainless Steel Interior)
Color	Black, Gold accents
Special Feature	Overheat Protection, Temperature Control, Keep Warm Function, Cool-Touch Exterior
Product Dimensions (L x W x H)	21.8 cm x 26 cm x 18.3 cm
Country of Origin	China

9. WARRANTY AND SUPPORT

Berdson products are manufactured to high-quality standards. For warranty information, please refer to the warranty card included with your purchase or visit the official Berdson website. If you encounter any issues or require technical assistance, please contact Berdson customer support through their official channels.

For further assistance, please visit the [Berdson Brand Store](#).