

[Manuals.plus](#) /

› [VIVOHOME](#) /

› VIVOHOME 10x10ft Pop Up Canopy Tent Instruction Manual

VIVOHOME VH1705-BL

VIVOHOME 10x10ft Pop Up Canopy Tent Instruction Manual

Model: VH1705-BL

1. INTRODUCTION

This manual provides detailed instructions for the assembly, operation, maintenance, and troubleshooting of your VIVOHOME 10x10ft Pop Up Canopy Tent. Please read this manual thoroughly before use to ensure proper setup and safe operation. This portable shelter is designed for outdoor use, providing shade and protection. It features a durable 210D Oxford fabric canopy, a sturdy steel frame, and a quick push-button setup mechanism.



Image: The VIVOHOME 10x10ft Pop Up Canopy Tent set up in an outdoor environment, demonstrating its use as a portable shade solution.

2. SAFETY INFORMATION

WARNING:

- Always ensure the canopy is properly anchored using the provided wind ropes and sandbags in windy conditions. Failure to do so may result in the canopy becoming unstable or even toppling over, causing potential injury or damage.
- Do not use the canopy in extreme weather conditions, including heavy rain, strong winds, or lightning.
- Keep all flame and heat sources away from the canopy fabric.
- Ensure all moving parts are clear of obstructions during setup and takedown to prevent pinching or damage.

3. PACKAGE CONTENTS

Verify that all components listed below are present before beginning assembly:

- 1 x Canopy Frame (Alloy Steel)
- 1 x Canopy Top (Blue 210D Oxford Fabric)
- 1 x Wheel Carry Bag
- 4 x Sandbags (empty, for filling with sand or weight)
- 8 x Spiral Ground Stakes
- 4 x Wind Ropes



Image: An exploded view showing all included components: the blue canopy tent, its frame, a wheeled carry bag, four sandbags, eight ground stakes, and four wind ropes.

4. SETUP INSTRUCTIONS

The VIVOHOME Pop Up Canopy Tent is designed for quick and easy setup by two people.

1. Step 1: Unpack and Partially Extend Frame

Remove the folded frame from the wheel carry bag. Place the frame in the desired setup location. With a person on each side, grasp two outer legs and pull the frame outwards slightly, partially extending it.

2. Step 2: Position Canopy Top

Carefully unfold the canopy top and place it over the partially extended frame. Ensure the corners of the canopy align with the frame's corners. Secure the canopy to the frame using the Velcro straps located on the underside of the canopy.

3. Step 3: Fully Extend Frame and Lock Center

Continue pulling the outer legs of the frame until it is almost fully extended. Reach underneath the canopy to the center hub. Push the center lock mechanism upwards until it clicks securely into place. This locks the frame in its open position.

4. Step 4: Adjust Height

Press the push-button on each leg to release the locking pin. Extend each leg to your desired height setting (three height positions available) and ensure the pin locks securely into place.


5. Step 5: Secure the Canopy

Fill the provided sandbags with sand or other suitable weight and attach them to the canopy legs. Use the spiral ground stakes to anchor the legs to the ground if setting up on soft surfaces. Attach the wind ropes to the canopy corners and stake them into the ground at an angle to provide additional stability against wind.




Image: Visual guide demonstrating the three simple steps for setting up the canopy: opening the frame, engaging the center lock, and adjusting leg height.

Center Lock

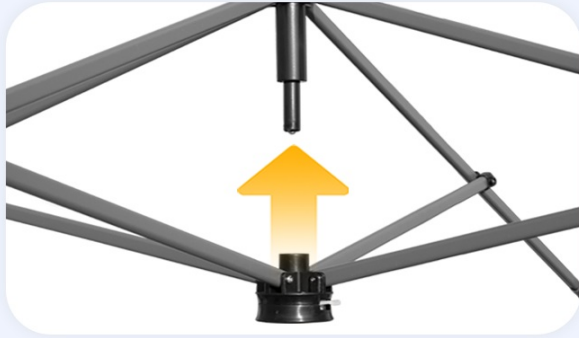

Lock it with a single push

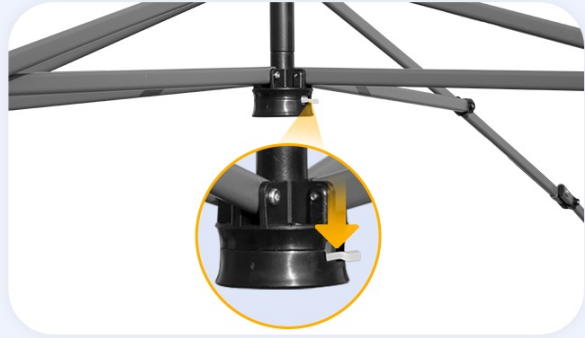

Press the button down to fold up

Image: Detailed view of the canopy's center lock, illustrating the push-up motion to lock and the button press to release for folding.

5. OPERATING INSTRUCTIONS

5.1 Height Adjustment

The canopy features a push-button mechanism on each leg for easy height adjustment. Simply press the button to release the locking pin, slide the leg to the desired height, and ensure the pin re-engages in one of the three available holes.

5.2 Wind Resistance Features

The canopy is equipped with air vents at the top to enhance airflow and reduce wind pressure, improving stability. Always utilize the provided sandbags, ground stakes, and wind ropes to secure the canopy, especially in breezy conditions.

Wind-Resistant



Image: An illustration highlighting the canopy's wind-resistant design, including air vents for pressure release, sandbags for weight, wind ropes for anchoring, and hook-and-loop fasteners for secure attachment.

5.3 Banner Hanging Hooks

Hooks are integrated along the canopy frame, allowing for easy attachment of banners, signs, or decorations for personalized events or market stalls.



Banner Hanging Hooks

Add a personalized touch for events, markets, or promotions

Image: A close-up view of the banner hanging hooks integrated into the canopy frame, demonstrating how banners can be easily attached.

6. MAINTENANCE

6.1 Cleaning

- To clean the canopy fabric, use a mild soap solution and a soft brush or cloth. Rinse thoroughly with water.
- Do not use harsh detergents, bleach, or abrasive cleaners, as these can damage the fabric's water-resistant coating.
- Clean the steel frame with a damp cloth and dry thoroughly to prevent rust.

6.2 Storage

- Before storing, ensure the canopy fabric and frame are completely dry to prevent mold, mildew, and rust.
- Fold the canopy top neatly and store it in the provided wheel carry bag along with the frame and accessories.
- Store the canopy in a cool, dry place, away from direct sunlight and extreme temperatures.

Image: The portable wheel bag designed for easy transport and storage of the canopy, featuring handles, a side pocket, and smooth wheels.

Travel-Friendly Design

Compact enough for easy trunk storage



Image: The canopy in its travel-friendly carry bag, demonstrating its compact size when stored in a car trunk.

7. TROUBLESHOOTING

- **Canopy is unstable in wind:** Ensure all sandbags are filled and attached, ground stakes are used, and wind ropes are properly secured and tensioned. Never use the canopy in strong winds.
- **Water pooling on canopy top:** The canopy is designed with a steeper slope and waterproof strips to prevent pooling. Ensure the canopy fabric is taut and evenly distributed over the frame. Adjust leg heights if necessary to create a slight incline for water runoff.
- **Difficulty extending/retracting frame:** Ensure the center lock mechanism is fully disengaged when retracting. Lubricate moving parts with a silicone-based spray if they become stiff. Always use two people for setup and takedown.
- **Canopy fabric appears to leak:** While the fabric is water-resistant, prolonged exposure to heavy rain may lead to some moisture penetration. Ensure waterproof strips are intact. For maximum protection, avoid use in heavy downpours.

UV-Resistant and Waterproof



Image: A detailed view of the canopy fabric, illustrating its UV-resistant and waterproof qualities, with rainwater effectively running off its specially angled roof.

8. SPECIFICATIONS

Feature	Specification
Brand	VIVOHOME
Model Number	VH1705-BL
Color	Blue
Size	10x10 ft (114.96"L x 114.96"W x 111.81"H)
Item Weight	34.1 Pounds
Water Resistance Level	Water Resistant

Pole Material Type	Alloy Steel
Assembly Required	Yes

Specification



Image: A detailed specification diagram illustrating the dimensions of the 10x10ft canopy and a visual list of all included accessories.

9. WARRANTY INFORMATION

VIVOHOME products typically come with a manufacturer's warranty. For specific details regarding the warranty period, coverage, and claims process for your 10x10ft Pop Up Canopy Tent (Model VH1705-BL), please refer to the official VIVOHOME website or contact their customer support directly. Keep your purchase receipt as proof of purchase.

10. CUSTOMER SUPPORT

If you have any questions, require assistance with assembly, or need to report a missing or damaged part, please

contact VIVOHOME customer support. You can typically find contact information (phone, email, or support portal) on the official VIVOHOME website or through the retailer where you purchased the product.

