

ropelux RP-IOL

ropelux 20" Ceiling Fan with Lights Instruction Manual

Model: RP-IOL

1. IMPORTANT SAFETY INSTRUCTIONS

Please read and understand all instructions before beginning installation and use. Failure to follow these instructions may result in electric shock, fire, or serious personal injury.

- Always disconnect power at the main circuit breaker before installation or maintenance.
- Ensure all electrical connections comply with local codes and ordinances, as well as the National Electrical Code (NEC).
- This fixture is designed for indoor use only.
- Do not use with dimmer light switches or fan control switches. Use only the provided remote or app for brightness and fan speed adjustments.
- Ensure the mounting structure can support the weight of the fan.

 
2. PACKAGE CONTENTS

Verify that all components are present and undamaged before installation.

- Ceiling Fan with Light Fixture (Pre-assembled)
- Remote Control
- Mounting Hardware Kit
- Instruction Manual



Metal Base

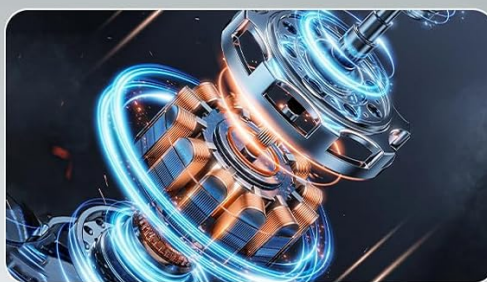

Powerful motor



Image: Overview of the ropelux ceiling fan components, including the main fan unit, remote control, and various mounting accessories.

3. SETUP & INSTALLATION

3.1 Pre-Installation Checklist

- Turn off power at the circuit breaker.
- Ensure you have all necessary tools (screwdriver, wire strippers, etc.).
- Confirm the ceiling junction box is securely mounted and rated for fan support.

3.2 Mounting the Fan

The ropelux ceiling fan is pre-assembled for quick and secure mounting. Follow these general steps:

1. Attach the mounting bracket to the ceiling junction box using the provided screws.

2. Connect the fan's electrical wires to the household wiring (live, neutral, ground) using wire nuts. Ensure US standard wires are used.
3. Secure the fan body to the mounting bracket. Utilize the safety rope to hang the low profile ceiling fan to the metal bracket during wiring.
4. Ensure all connections are tight and secure.

REVERSIBLE FAN FOR ALL SEASON ROUND

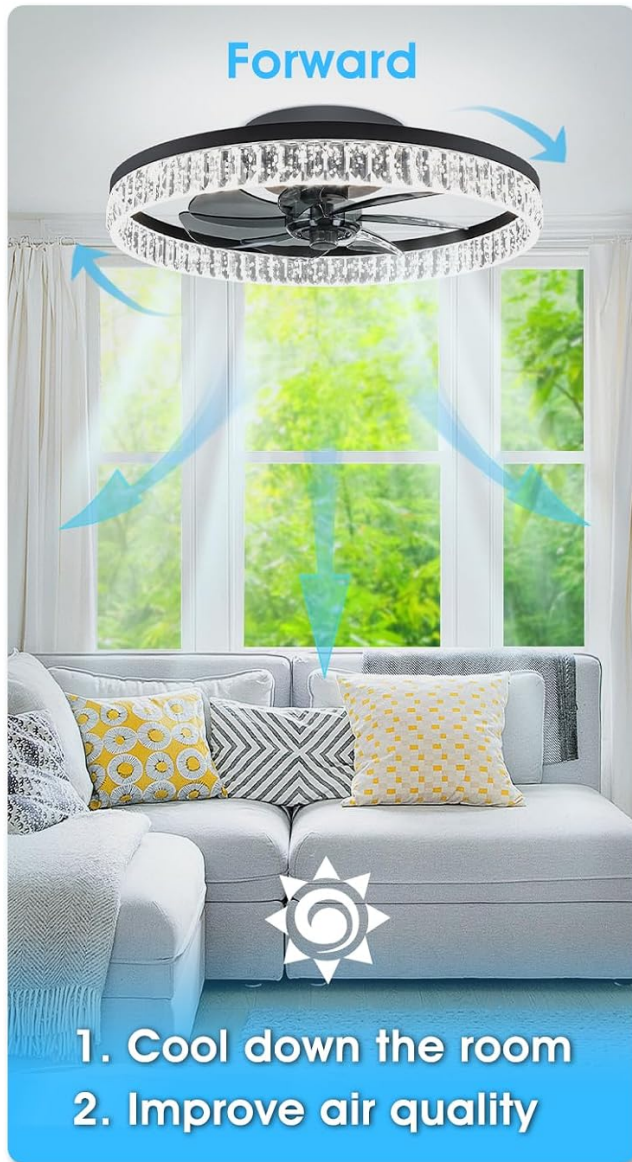 


Image: Visual guide illustrating the simplified installation process of the ceiling fan, highlighting the pre-assembled design.

3.3 Wall Switch Compatibility

This fixture's dimmable function is controlled by low voltage direct current. Most US dimmers work with 120V AC, therefore, this fixture does not work with local dimmer or fan switches. Please use the provided remote or app to adjust brightness and fan speed.

The fixture works with a regular wall switch, which can be used to turn on/off the light. Press the wall switch within 5 seconds to cycle the light color temperatures. If over 5 seconds, the current mode will be saved for the next operation.

Reversible Airflow



Image: Illustration demonstrating that only regular wall switches are compatible, while dimmer and fan control switches are not.

4. OPERATING INSTRUCTIONS

4.1 Remote Control Operation

The included remote control allows for independent adjustment of fan speed and light settings.

- **ON/OFF:** Turns the light on or off.
- **ALL OFF:** Turns both light and fan off.
- **K (Color Temperature):** Cycles through 3000K (Warm White), 4500K (Neutral White), and 6500K (Cool White).
- **Brightness +/-:** Adjusts light brightness steplessly.
- **Night Light Mode:** Activates a low-brightness setting for nighttime.
- **F/R (Forward/Reverse):** Changes fan direction for summer (downward) or winter (upward) air circulation.
- **1-6 Fan Speed:** Selects one of 6 fan speeds.
- **2H Timer:** Sets a 2-hour timer for the fan.
- **Natural Wind:** Simulates a natural breeze.
- **Sleep Wind:** Provides a gentle, quiet airflow for sleeping.

3000K-6500K STEPLESS ADJUSTABLE

Suitable Area: 160-270 Sq.ft



Bedroom (3000K)



Dinning Room (4000K)



Living Room (5000K)



Office (6500K)

Image: The ergonomic remote control for the ropelux ceiling fan, designed for easy handling.


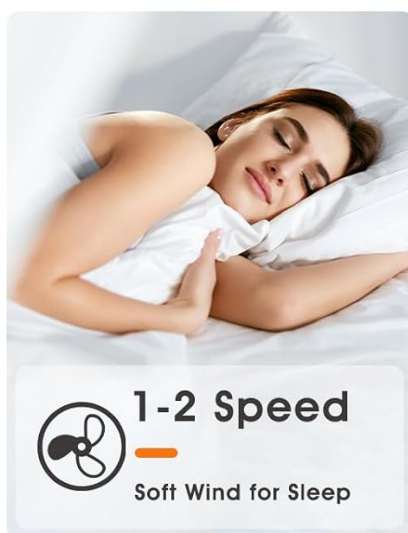 


Image: A detailed diagram of the remote control, labeling each button and its corresponding function for clear operation.

 

Regular Wall Switch



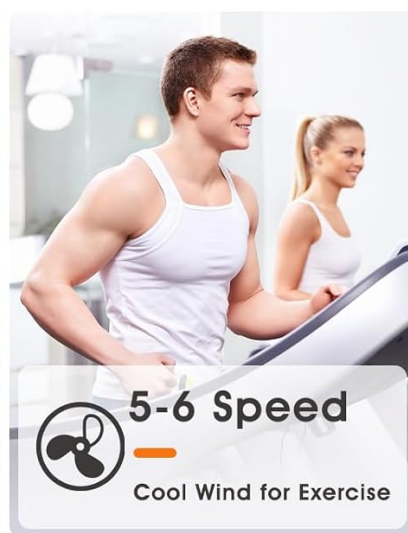


Dimmer Light Switch

Fan Control Switch

Attention:

1. The dimmable function of this fixture is controlled by low voltage direct current. Most US dimmers work with 120V AC, this fixture doesn't work with local dimmer or Fan Switch. Please use provided remote or app to adjust the brightness and fan speed.
2. The fixture work with regular wall switch, which can be used to turn on/off the light. Press the wall switch within 5 seconds can cycle the light color temperatures. If over 5 seconds the current mode will be saved for next operation.

Image: The remote control shown with its convenient wall-mountable holder for easy storage and access.

4.2 App Control Operation

The fan can also be controlled via the 'Fan Lamp Pro' application, offering comprehensive control from your smartphone.

- Download the 'Fan Lamp Pro' app from your device's app store.
- Follow the in-app instructions to pair your device with the ceiling fan.
- The app provides independent control over fan speed, light brightness, color temperature, timer settings, natural wind, and sleep wind modes.



Image: The ropelux ceiling fan shown with both its physical remote control and the digital interface of the 'Fan Lamp Pro' app on a smartphone.



Image: A user interacting with the 'Fan Lamp Pro' mobile application, demonstrating its intuitive interface for controlling the ceiling fan's functions.

4.3 Fan Speed Control

The fan offers 6 customizable speeds, operating at near-silent noise levels for optimal comfort.

- **Speeds 1-2:** Soft wind, ideal for sleep.
- **Speeds 3-4:** Natural wind, suitable for daily use.
- **Speeds 5-6:** Strong wind, perfect for exercise or rapid cooling.

STEPLESS DIMMING & COLOR TEMP



Cool 6500K

Neutral 4500K

Warm 3000K



100%

Brightness

10%

Image: A visual representation of the six fan speed settings, categorized by their suitability for different activities like sleeping, daily use, and exercise.



Image: A chart comparing the fan's quiet operation (around 30dB) to common sound levels like a quiet night or library voice.

4.4 Lighting Control (CCT & Dimmable)

The integrated LED light offers adjustable color temperature (CCT) and stepless dimming, providing versatile illumination.

- **Color Temperature:** Choose from 3000K (Warm White), 4500K (Neutral White), and 6500K (Cool White) to set the desired ambiance.
- **Dimmable:** Adjust brightness from 10% to 100% steplessly.
- **Anti-Glare Design:** Ensures even, eye-friendly light distribution with zero flicker or dizziness.



Image: A visual guide demonstrating the stepless dimming capability and the three color temperature options: Cool 6500K, Neutral 4500K, and Warm 3000K.

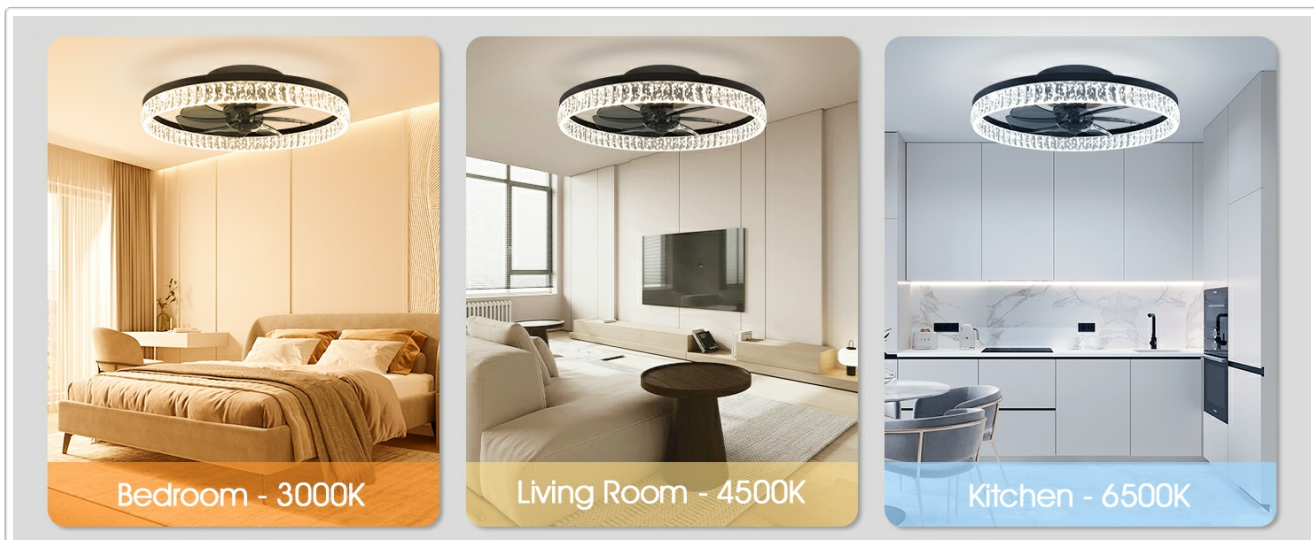 


Image: Examples of how different color temperatures (3000K, 4500K, 6500K) can be used to create various moods in a bedroom, living room, and kitchen.

4.5 Reversible Airflow

The fan features two directional modes to optimize air circulation throughout the year.

- **Downward Mode (Summer):** Creates a cooling breeze.
- **Upward Mode (Winter):** Circulates warm air trapped near the ceiling, reducing humidity and warming the room.



Image: An illustration demonstrating the reversible airflow feature, showing how the fan can cool down the room in forward mode and warm it up in reverse mode.

5. MAINTENANCE

Regular maintenance ensures optimal performance and longevity of your ceiling fan.

- **Cleaning:** Wipe the fan blades and light fixture with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- **Connections:** Periodically check all electrical connections and mounting screws to ensure they are secure.
- **Light Source:** The LED light source is integrated and not user-replaceable.

6. TROUBLESHOOTING

If you encounter issues with your ceiling fan, refer to the following table for common problems and solutions.

Problem	Possible Cause	Solution
Fan does not operate.	No power supply.	Check circuit breaker and wall switch.
Light does not turn on.	Loose wiring connection.	Ensure all electrical connections are secure.
Remote control not working.	Batteries are dead or incorrectly inserted.	Replace AAA batteries (1 required). Ensure correct polarity.
Fan makes unusual noise.	Loose mounting screws or unbalanced blades.	Tighten all mounting screws. Check for any obstructions.
App control not connecting.	Bluetooth/Wi-Fi issue or incorrect pairing.	Ensure Bluetooth/Wi-Fi is enabled on your device. Re-pair the fan in the app.

7. SPECIFICATIONS

Feature	Detail
Brand	ropelux
Model Name	Ceiling Fans with Lights
Item Model Number	RP-IOL
Color	Crystal-Black
Material	Acrylic, Aluminum, Plastic
Product Dimensions	20"L x 20"W x 4.5"H
Item Weight	5.4 Pounds
Light Source Type	LED
Wattage	40 watts
Brightness	5000 lumen
Voltage	5 Volts
Control Method	Remote Controlled, App Control
Fan Speeds	6
Color Temperature	3000-6500K (Adjustable)
Assembly Required	Yes (Pre-assembled for quick mounting)

8. WARRANTY & SUPPORT

Ropelux specializes in premium lighting solutions and offers a**3-year warranty** (1095 days of coverage) for this product.

If you encounter any problems or have questions regarding your ropelux ceiling fan, please contact our customer support. We are committed to resolving your troubles within 24 hours.

For further assistance, please refer to the contact information provided on the product packaging or the official ropelux website.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question