

pulpart#24108693

Generic Dryer Belt, Rollers, and Pulley Kit Instruction Manual

Model: pulpart#24108693 (Compatible with Maytag MGDB835DW3 Dryer)

INTRODUCTION

This instruction manual provides essential information for the installation and maintenance of your Generic replacement dryer belt, rollers, and pulley kit. This kit is designed to be compatible with Maytag MGDB835DW3 dryer models. Please read this manual thoroughly before attempting any installation or repair to ensure safe and correct operation.

IMPORTANT SAFETY INFORMATION

- **Disconnect Power:** Always disconnect the dryer from its power source (unplug it or turn off the circuit breaker) before performing any service or maintenance. Failure to do so can result in electric shock or serious injury.
- **Wear Protective Gear:** Wear appropriate personal protective equipment, such as gloves and safety glasses, to prevent injury from sharp edges or moving parts.
- **Professional Assistance:** If you are unsure about any step of the installation process, consult a qualified appliance repair technician.
- **Original Manual:** Refer to your specific Maytag MGDB835DW3 dryer's service manual for detailed disassembly and reassembly instructions. This kit provides replacement parts; the installation procedure is specific to your appliance model.
- **Part Verification:** Before installation, carefully compare the new parts with the original parts to ensure they are identical and compatible.

PACKAGE CONTENTS

Verify that all components listed below are present and undamaged upon opening the package.



Image Description: This image displays the complete replacement kit. It includes a long, dark brown ribbed dryer belt, four black dryer drum rollers with green centers and metal bearings, one white idler pulley with a metal bearing, and a small bag of clear, triangular clips.

- 1 x Dryer Belt
- 4 x Dryer Drum Rollers
- 1 x Idler Pulley
- Assorted Clips/Washers (as pictured)

COMPATIBILITY

This replacement kit is specifically designed to be compatible with the following dryer model:

Maytag MGDB835DW3

Always verify your dryer's model number before purchasing and installing replacement parts to ensure proper fit and function. Refer to your appliance's data plate, typically located inside the dryer door or on the back panel.

INSTALLATION INSTRUCTIONS

Note: These are general instructions. Always refer to your specific Maytag MGDB835DW3 dryer's service manual or a reputable online repair guide for detailed, model-specific steps. Appliance repair can be complex and requires careful attention to detail.

1. Prepare the Dryer:

- Disconnect the dryer from its electrical power supply.
- If it's a gas dryer, turn off the gas supply valve.
- Disconnect the exhaust vent from the back of the dryer.
- Pull the dryer away from the wall to allow access.

2. Access the Interior:

- Depending on your dryer model, you may need to remove the top panel, front panel, or both. This usually involves removing screws located on the back, top, or inside the door frame.
- Carefully disconnect any wiring harnesses or door switches as needed, noting their original positions for reassembly.

3. Remove the Drum:

- Locate the drive belt around the drum and the motor pulley/idler pulley assembly.
- Release the tension on the idler pulley to remove the old drive belt from the motor pulley.
- Carefully lift and remove the dryer drum from the cabinet. This will expose the drum rollers and idler pulley.

4. Replace Drum Rollers:

- Note the position and orientation of the old drum rollers.
- Remove the old rollers, typically by removing a retaining clip or screw.
- Install the new drum rollers (4 included in the kit) onto their shafts, ensuring they spin freely. Use any new clips or washers provided.

5. Replace Idler Pulley:

- Locate the idler pulley assembly.
- Remove the old idler pulley and install the new one (1 included in the kit). Ensure it is securely mounted and pivots correctly to maintain belt tension.

6. Install New Drive Belt:

- Carefully place the dryer drum back into the cabinet, ensuring it rests properly on the new drum rollers.
- Route the new drive belt (1 included in the kit) around the dryer drum.
- From the bottom or front access panel, route the belt around the motor pulley and the idler pulley, ensuring the ribbed side of the belt faces the motor pulley. The idler pulley should apply tension to the belt.
- Double-check that the belt is correctly seated on all pulleys and the drum.

7. Reassemble and Test:

- Reattach any wiring harnesses or door switches.
- Reinstall the front and top panels of the dryer.
- Reconnect the exhaust vent.
- Push the dryer back into its original position.
- Reconnect the power supply and gas (if applicable).
- Run a short cycle to ensure proper operation and check for any unusual noises or vibrations.

MAINTENANCE

Proper maintenance of your dryer can extend the life of its components, including these replacement parts.

- **Regular Cleaning:** Periodically clean the lint trap before or after every load. Annually, inspect and clean the dryer's exhaust vent to prevent lint buildup, which can strain the motor and belt.
- **Inspect Components:** During any routine maintenance or cleaning that involves opening the dryer, visually inspect the belt, rollers, and pulley for signs of wear, cracks, or damage. Replace components showing significant wear to prevent future breakdowns.
- **Avoid Overloading:** Overloading the dryer can put excessive strain on the motor, belt, and rollers, leading to premature wear. Follow your dryer's manufacturer guidelines for load capacity.

TROUBLESHOOTING COMMON ISSUES

If your dryer exhibits issues after installing these parts, consider the following:

Symptom	Possible Cause	Solution
Dryer drum not spinning	Belt not properly installed or broken; motor issue.	Check belt routing and tension. Ensure the belt is not broken. If the belt is fine, consult a technician for motor diagnosis.
Loud squealing or thumping noise	Worn or improperly installed drum rollers or idler pulley.	Inspect drum rollers and idler pulley for proper seating and lubrication (if applicable). Ensure no foreign objects are in the drum area.
Dryer runs but clothes don't dry	Vent blockage; heating element failure (not related to this kit).	Clean lint trap and exhaust vent thoroughly. If the issue persists, investigate the heating element or thermostat.

For issues not resolved by these steps, it is recommended to contact a qualified appliance repair technician.

PRODUCT SPECIFICATIONS

Product Type: Dryer Belt, Rollers, and Pulley Kit

Kit Model Number: pulpart#24108693

Compatible Dryer Model: Maytag MGDB835DW3

Manufacturer: Generic

Package Quantity: 1 Set (includes 1 belt, 4 rollers, 1 pulley, assorted clips)

WARRANTY INFORMATION

As a generic replacement part, specific warranty details may vary. Please refer to the retailer or seller from whom you purchased this kit for information regarding their return policy or any applicable warranty. Keep your proof of purchase for any warranty claims.

CUSTOMER SUPPORT

For questions regarding the compatibility or installation of this replacement kit, please contact the seller or retailer directly. For issues related to your Maytag dryer's operation, consult the original Maytag user manual or contact Maytag customer service.