

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Furmax](#) /

› [Furmax Ergonomic Dining Chairs Set of 2 Instruction Manual \(Model DC0545\)](#)

## Furmax DC0545

# Furmax Ergonomic Dining Chairs Set of 2 Instruction Manual

Model: DC0545

## INTRODUCTION

This manual provides essential instructions for the assembly, safe use, and maintenance of your Furmax Ergonomic Dining Chairs. Please read this manual thoroughly before assembly and retain it for future reference.



Image: Two Furmax Grey Fabric Dining Chairs positioned in a dining room, showcasing their design and fabric upholstery.

## SAFETY INFORMATION

### Important Safety Warnings:

- Secure adjustable legs to prevent tipping. Ensure all legs are stable and level before use.
- Keep upholstered chairs away from open flames and high heat sources to prevent fire hazards.
- Do not stand on the chairs.
- Do not exceed the maximum weight capacity (typically 250 lbs, as indicated in product dimensions image).
- Keep small parts away from children during assembly to avoid choking hazards.

## PACKAGE CONTENTS

Before beginning assembly, verify that all parts are present and undamaged. If any parts are missing or damaged, please contact customer support.

- Dining Chair Backrests (2)
- Dining Chair Seats (2)

- Chair Legs (8)
- Hardware Pack (screws, washers, Allen wrench)
- Instruction Manual (this document)

## SETUP AND ASSEMBLY

Assembly is required for these dining chairs. Follow the steps below for a quick and hassle-free setup. It is recommended to assemble the chairs on a soft, clean surface to prevent scratching.

1. **Unpack Components:** Carefully remove all parts from the packaging and lay them out. Check against the package contents list.
2. **Attach Legs to Seat:** Align each chair leg with the corresponding mounting points on the underside of the chair seat. Secure using the provided screws and washers. Do not overtighten initially.
3. **Attach Backrest:** Connect the backrest to the seat frame, ensuring proper alignment. Fasten with the remaining screws.
4. **Tighten All Fasteners:** Once all parts are loosely assembled, gradually tighten all screws until secure. Do not overtighten to avoid damaging the wood.
5. **Adjust Feet:** Each chair is equipped with adjustable feet. Place the chair on a level surface and adjust the feet as needed to eliminate any wobbling and protect your flooring.



## PRODUCT DETAIL



Ergonomic Backrest



Sturdy Wood Frame



Adjustable Feet

Image: Close-up showing the ergonomic backrest, sturdy wood frame, and adjustable feet of the dining chair, highlighting key structural features.

For visual guidance, please refer to the assembly video below:

Your browser does not support the video tag.

Video: An instructional video demonstrating the assembly process for the Furmax Upholstered Dining Chair, highlighting key features like wide and soft seating, button-tufted design, and adjustable feet.

## OPERATING AND USAGE

The Furmax Ergonomic Dining Chairs are designed for comfortable seating in various indoor environments.

- **Ergonomic Design:** The chairs feature an ergonomic backrest and a high-rebound upholstered seat for comfort during extended periods of sitting.
- **Versatile Placement:** Suitable for dining rooms, kitchens, living rooms, cafes, and restaurants.
- **Stability:** The sturdy wood frame and adjustable feet ensure stability on various floor types.

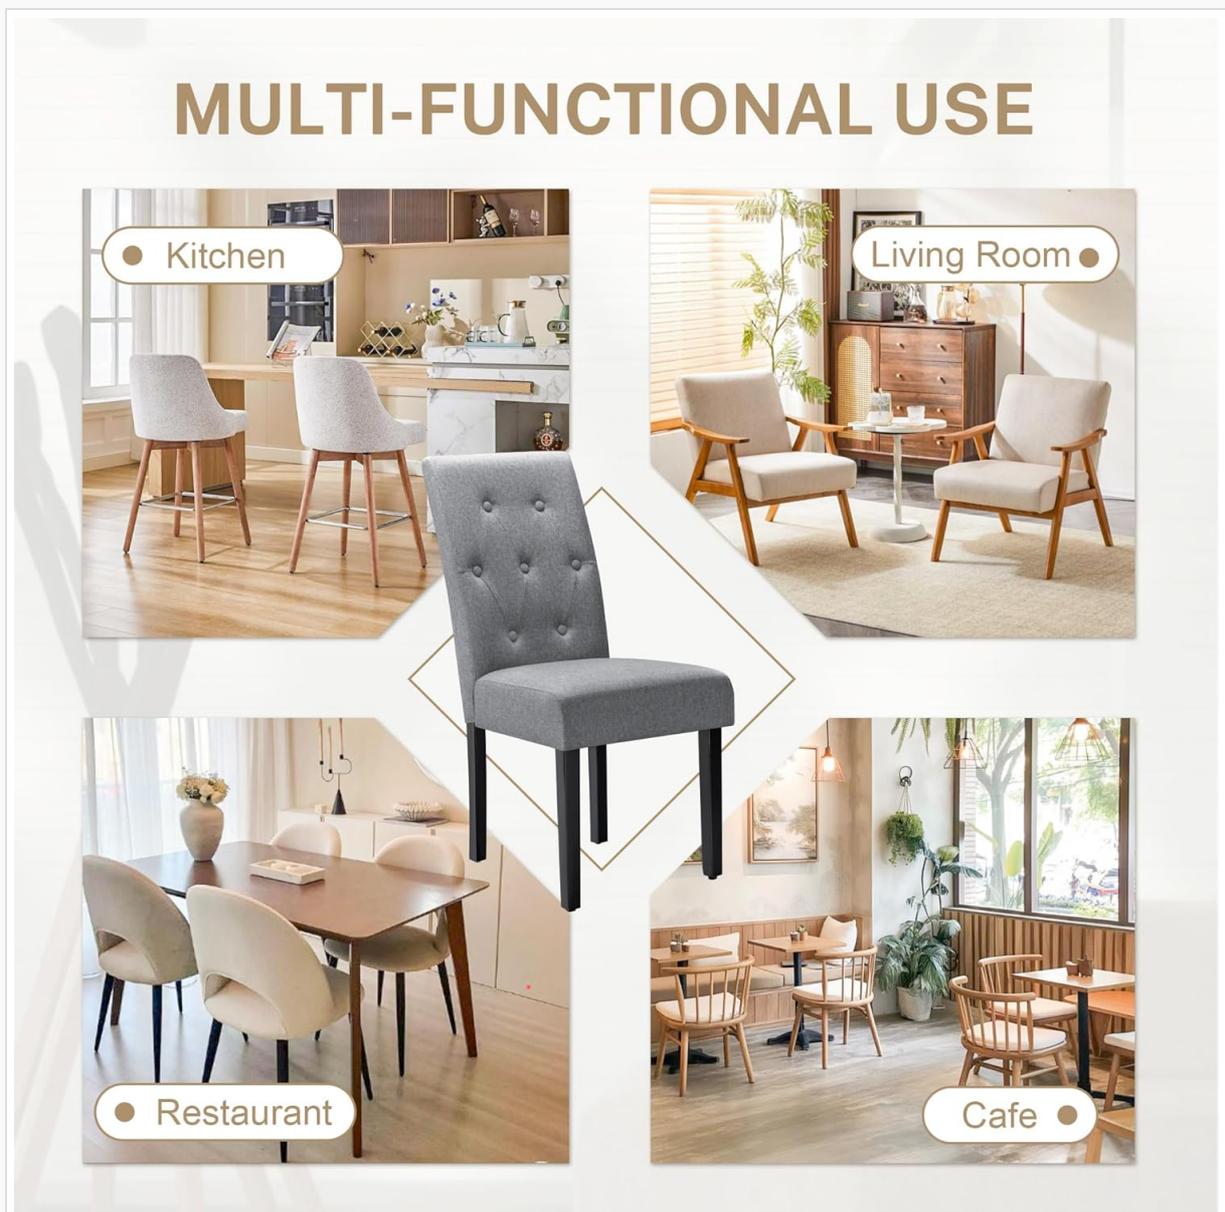


Image: A collage illustrating the multi-functional use of the Furmax dining chairs in different settings such as a kitchen, living room, restaurant, and cafe.

## MAINTENANCE

Proper care will extend the life and appearance of your chairs.

- **Regular Cleaning:** For fabric upholstery, vacuum regularly to remove dust and debris. For spills, blot immediately with a clean, dry cloth. For stubborn stains, use a mild fabric cleaner according to the product instructions, testing on an inconspicuous area first.
- **Wood Frame Care:** Wipe the wood legs with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners.
- **Check Fasteners:** Periodically check and retighten all screws to ensure the chair remains stable.
- **Avoid Direct Sunlight:** Prolonged exposure to direct sunlight can cause fabric to fade.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Chair wobbles	Uneven floor or loose leg fasteners.	Adjust the chair's feet until stable. Tighten all leg screws.
Squeaking noise	Loose connections between components.	Check and tighten all assembly screws.
Fabric stain	Spillage or dirt accumulation.	Blot fresh spills immediately. For dried stains, use a mild fabric cleaner as per instructions.

## SPECIFICATIONS

**Brand:** Furmax

**Model Name:** DC0545

**Color:** Grey Fabric

**Product Dimensions:** 19.2"D x 17.1"W x 37.4"H

**Seat Depth:** 19.2 inches

**Item Weight:** 27.1 pounds (per chair)

**Back Style:** Solid Back, Button Tufted

**Material:** Engineered Wood, Fabric Upholstery

**Assembly Required:** Yes

**Batteries Required:** No

## PRODUCT DIMENSION



Image: Product dimension diagram for the Furmax dining chair, indicating height, width, depth, and seat height, along with a 250 lbs weight capacity.

### WARRANTY AND SUPPORT

For warranty information or customer support, please refer to the contact details provided at the point of purchase or visit the official Furmax website. Please have your model number (DC0545) and purchase date available when contacting support.

#### Online Resources:

- Furmax Store: [Visit the Furmax Store on Amazon](#)