



Manuals.plus /

› onerbl /

› onerbl AC Power Cord Instruction Manual for Crock-Pot Food Warmers

onerbl CPSCLC20-N2-1AM, CPSCLC20-N3-1AM, CPSCLC20N21AM, CPSCLC20N31AM, 2143870, 2143869

onerbl AC Power Cord Instruction Manual

For Crock-Pot GO Portable Food Warmers

INTRODUCTION

This manual provides instructions for the safe and proper use of your onerbl AC Power Cord. This power cord is designed as a replacement for specific Crock-Pot GO Portable Food Warmer models, ensuring reliable power supply to your device. Please read this manual thoroughly before use.

SAFETY INFORMATION

Please observe the following safety precautions to prevent injury or damage to the product:

- **Indoor Use Only:** This power cord is intended for indoor use in dry locations. Do not expose to water or excessive moisture.
- **Inspect Before Use:** Before each use, inspect the power cord for any signs of damage, such as cuts, frayed wires, or bent prongs. Do not use a damaged cord.
- **Proper Connection:** Ensure the cord is fully and securely plugged into both the food warmer and the wall outlet. A loose connection can cause overheating or electrical hazards.
- **Voltage Compatibility:** This cord is designed for 120V AC outlets. Do not use with incompatible voltage sources.
- **Avoid Overloading:** Do not plug the cord into an outlet that is already overloaded with other appliances.
- **Keep Away from Heat:** Do not place the cord near heat sources or in direct sunlight.
- **Children and Pets:** Keep the power cord out of reach of children and pets to prevent accidental injury.
- **Unplug When Not in Use:** Always unplug the cord from the wall outlet when the food warmer is not in use or during cleaning.

PACKAGE CONTENTS

Your package should contain the following item:

- 1 x onerbl AC Power Cord

SETUP

Follow these steps to connect your onerbl AC Power Cord to your Crock-Pot GO Portable Food Warmer:

1. **Identify the Power Port:** Locate the power input port on your Crock-Pot GO Portable Food Warmer. This is typically a recessed, two-prong or three-prong receptacle.
2. **Connect to Food Warmer:** Take the female end of the onerbl AC Power Cord and align it with the power input port on your food warmer. Gently push the connector into the port until it is firmly seated. Do not force the connection.
3. **Connect to Wall Outlet:** Plug the male end (Type B plug) of the AC power cord into a standard 120V AC wall outlet. Ensure the outlet is easily accessible and not obstructed.



Image: The onerbl AC Power Cord, showing the device-side connector and the standard Type B wall plug. This cord connects your Crock-Pot food warmer to an electrical outlet.

OPERATING

Once the onerbl AC Power Cord is properly connected, your Crock-Pot GO Portable Food Warmer is ready for use. Refer to your food warmer's original instruction manual for specific operating procedures.

- Ensure all connections are secure before turning on your food warmer.
- Verify that the food warmer's power indicator (if present) illuminates, indicating it is receiving power.
- Always operate your food warmer according to its manufacturer's guidelines.

MAINTENANCE

Proper care and maintenance will extend the life of your AC power cord:

- **Cleaning:** Disconnect the power cord from both the wall outlet and the food warmer before cleaning. Wipe the cord with a dry, soft cloth. Do not use liquid cleaners or immerse the cord in water.
- **Storage:** When not in use, coil the cord loosely and store it in a cool, dry place, away from direct sunlight and extreme temperatures. Avoid tightly wrapping the cord around objects, which can cause damage.
- **Inspection:** Periodically inspect the cord for any signs of wear, damage, or discoloration. If any damage is observed, discontinue use immediately and replace the cord.

TROUBLESHOOTING

If you encounter issues with your power cord, consider the following:

- **No Power to Food Warmer:**
 - Ensure the power cord is securely plugged into both the food warmer and the wall outlet.
 - Check if the wall outlet is functional by plugging in another appliance.
 - Inspect the power cord for any visible damage. If damaged, replace the cord.
 - Verify that the food warmer itself is functioning correctly with its original power cord (if available) or another compatible cord.
- **Loose Connection:** If the cord feels loose, ensure it is fully inserted. Avoid pulling the cord by the cable; always grasp the plug when connecting or disconnecting.

SPECIFICATIONS

Brand	onerbl
Color	Black
Connector Gender	Male-to-Female
Voltage	120 Volts (AC)
Plug Type	Type B (US Standard)
Item Length	6 Feet
Compatible Models	Crock-Pot GO CPSCLC20-N2-1AM, CPSCLC20-N3-1AM, CPSCLC20N21AM, CPSCLC20N31AM, 2143870, 2143869 Portable Food Warmers

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation provided with your purchase or contact the seller directly. Keep your purchase receipt as proof of purchase.