



[Manuals.plus](#) /

> [WWEIFUS](#) /

> WWEIFUS Compatible with Hisense Air Conditioner Main Circuit Board Instruction Manual

WWEIFUS PCB05-404-V02, PCB05-410-V02, PCB05-458-V02, PCB05-470-V02

Instruction Manual

WWEIFUS COMPATIBLE WITH HISENSE AIR CONDITIONER MAIN CIRCUIT BOARD

Model Numbers: PCB05-404-V02, PCB05-410-V02, PCB05-458-V02, PCB05-470-V02

1. INTRODUCTION

This manual provides essential information for the safe and effective installation, operation, and maintenance of your WWEIFUS Compatible with Hisense Air Conditioner Main Circuit Board. This product is a replacement component designed to restore the functionality of compatible Hisense air conditioning units. Please read this manual thoroughly before proceeding with any installation or service.

2. SAFETY INFORMATION

WARNING: Electrical shock hazard. Always disconnect power to the air conditioning unit before installing, servicing, or removing the main circuit board. Failure to do so can result in serious injury or death.

- Installation should only be performed by qualified and experienced technicians.
- Wear appropriate personal protective equipment (PPE), including insulated gloves and safety glasses.
- Ensure all wiring connections are secure and correctly matched according to the air conditioner's service manual.
- Do not touch live electrical components.
- Verify that the replacement board matches the original board's specifications and model number before installation.

3. SETUP AND INSTALLATION

This main circuit board is a direct replacement for specific Hisense air conditioner models. Refer to your air conditioner's service manual for detailed, model-specific installation instructions. The general steps for replacement are as follows:

1. **Power Disconnection:** Turn off and disconnect all power to the air conditioning unit at the circuit breaker. Confirm power is off using a voltage tester.
2. **Access Panel Removal:** Carefully remove the access panel(s) to expose the existing main circuit board.
3. **Component Identification:** Take clear photos of the existing board and its wiring connections for reference. Note the position of all connectors, wires, and mounting screws.
4. **Wire Disconnection:** Disconnect all wires and connectors from the old circuit board. Label them if necessary to ensure correct re-connection.
5. **Old Board Removal:** Unscrew and carefully remove the old main circuit board from its mounting points.
6. **New Board Installation:** Position the new WWEIFUS main circuit board in the same location as the old one. Secure it with the original mounting screws.
7. **Wire Re-connection:** Reconnect all wires and connectors to the new board, ensuring they match the reference photos taken earlier. Verify all connections are firm and correct.
8. **Panel Re-installation:** Replace the access panel(s).
9. **Power Restoration:** Restore power to the air conditioning unit at the circuit breaker.
10. **Functionality Test:** Test the air conditioner's functions to ensure proper operation.

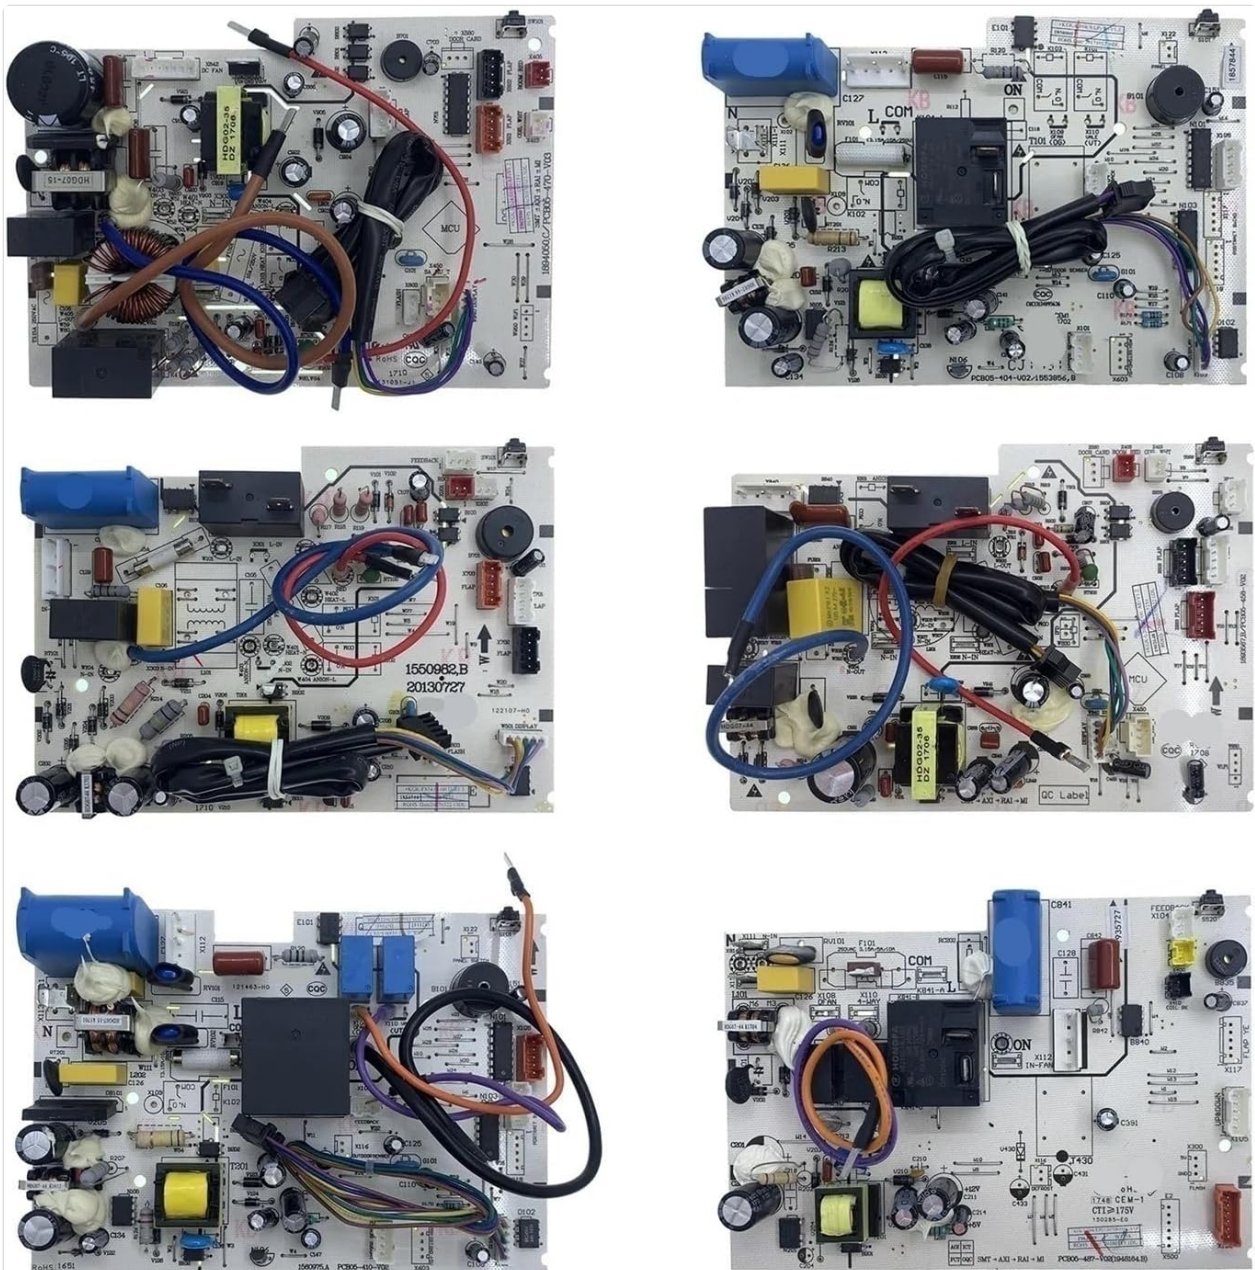


Figure 1: Overview of the WWEIFUS Compatible with Hisense Air Conditioner Main Circuit Board. The image displays various

components including capacitors (e.g., C127, C128), resistors, inductors, relays (e.g., K102, K841-A), and multiple connectors (e.g., X101, X104, X112, X117, X400, X603). Visible labels include 'MCU' (Microcontroller Unit), 'ROHS', 'QC Label', and specific PCB model numbers such as PCB05-404-V02, PCB05-410-V02, PCB05-458-V02, and PCB05-470-V02, along with the part number 1550982.B.

4. OPERATING PRINCIPLES

As a replacement main circuit board, this component is designed to integrate seamlessly with compatible Hisense air conditioning units and restore their original operating functionality. It controls various aspects of the air conditioner's operation, including fan speed, compressor cycles, temperature regulation, and communication with other system components. Once correctly installed, the air conditioner should operate according to its original manufacturer specifications.

5. MAINTENANCE

The main circuit board itself requires minimal maintenance. However, regular inspection of the air conditioning unit can help ensure its longevity and proper function.

- **Periodic Inspection:** Annually inspect the board for any signs of dust accumulation, corrosion, or loose connections.
- **Cleaning:** If dust is present, gently remove it using a soft brush or compressed air. Do not use liquids or abrasive cleaners.
- **Professional Service:** For any complex issues or suspected component failures on the board, consult a qualified HVAC technician. Do not attempt to repair individual components on the board unless you are a trained professional.

6. TROUBLESHOOTING

If the air conditioner does not function correctly after replacing the main circuit board, consider the following troubleshooting steps:

- **No Power:** Ensure the circuit breaker is on and all power connections to the unit and board are secure.
- **Incorrect Function:** Double-check all wiring connections against your reference photos and the air conditioner's service manual. Ensure no wires are swapped or loose.
- **Error Codes:** If the air conditioner displays an error code, consult your air conditioner's user manual or service manual to interpret the code and identify the underlying issue.
- **Component Failure:** If the board was installed correctly and the unit still malfunctions, there might be an issue with another component of the air conditioner, or the replacement board itself may be faulty.
- **Professional Assistance:** If troubleshooting steps do not resolve the issue, contact a qualified HVAC technician for diagnosis and repair.

7. SPECIFICATIONS

- **Product Type:** Air Conditioner Main Circuit Board
- **Brand:** WWEIFUS (Compatible with Hisense)
- **Compatible Models:** PCB05-404-V02, PCB05-410-V02, PCB05-458-V02, PCB05-470-V02
- **Part Number:** 1550982.B
- **Application:** Replacement part for Hisense air conditioning units.

8. WARRANTY INFORMATION

This product is covered by a standard manufacturer's warranty against defects in materials and workmanship. The warranty period and terms may vary. Please retain your proof of purchase for any warranty claims. Damage resulting from improper installation, misuse, or unauthorized repairs is not covered under warranty. For specific warranty details, please refer to the product packaging or contact the seller.

9. CUSTOMER SUPPORT

If you have any questions regarding the installation, operation, or troubleshooting of this product, please contact your point of purchase or the WEIFUS customer support team. Provide your product model number and a detailed description of the issue for prompt assistance.