

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [techno line](#) /

› [Technoline WT175 Mini Travel Alarm Clock User Manual](#)

techno line WT175

Technoline WT175 Mini Travel Alarm Clock User Manual

Model: WT175

INTRODUCTION

The Technoline WT175 is a compact and versatile quartz alarm clock designed for convenience and portability. It features a clear digital display and offers multiple functions including time, date, temperature, humidity, and various alarm settings. Its magnetic casing makes it suitable for travel and everyday use.



Figure 1: Front view of the Technoline WT175 Mini Travel Alarm Clock, displaying the time and control buttons.

KEY FEATURES

- 12/24 hour time display
- Date display
- Temperature display (in Celsius)

- Humidity display
- Alarm with snooze function
- Configurable alarm settings: Weekday, Weekend, or Daily
- Timer with countdown and stop function
- Low battery indicator
- Magnetic casing for versatile placement

PACKAGE CONTENTS

- Technoline WT175 Mini Travel Alarm Clock
- User Manual (this document)
- *Note: Batteries are not included and must be purchased separately.*



Figure 2: Product packaging for the Technoline WT175, detailing specifications and features.

SETUP

1. Battery Installation

1. Locate the battery compartment on the back of the alarm clock.
2. Open the battery compartment cover.
3. Insert 1x AAA Micro LR03 battery, ensuring correct polarity (+/-).
4. Close the battery compartment cover securely.

2. Initial Power-On

Upon successful battery installation, the display will activate. You may need to press the **SET** button to begin initial time and date configuration.

OPERATING INSTRUCTIONS

The Technoline WT175 features several control buttons: **SET**, **START/STOP/RESET**, **ZZ** (Snooze/Light), **AL SET ON-OFF**, **+**, and **MODE**.



Figure 3: Detailed view of the alarm clock's display and control buttons.

1. Setting Time and Date

1. Press and hold the **SET** button until the time display starts flashing.
2. Use the **+** or **-** buttons to adjust the hour.
3. Press **SET** again to confirm the hour and move to minutes.
4. Use **+** or **-** to adjust the minutes.
5. Continue pressing **SET** to cycle through and set the year, month, and day using the **+** or **-** buttons.
6. Press **SET** one last time to exit the setting mode.

2. 12/24 Hour Format Selection

While in normal time display mode, press the **MODE** button to toggle between 12-hour and 24-hour time formats.

3. Setting the Alarm

1. Press the **AL SET ON-OFF** button once to enter alarm setting mode. The alarm time will flash.
2. Use the **+** or **-** buttons to adjust the alarm hour.

3. Press **AL SET ON-OFF** again to confirm the hour and move to alarm minutes.
4. Use **+** or **-** to adjust the alarm minutes.
5. Press **AL SET ON-OFF** again to confirm and exit alarm setting mode.

4. Activating/Deactivating Alarm and Snooze

- To turn the alarm **ON** or **OFF**, press the **AL SET ON-OFF** button while in normal time display mode. An alarm icon will appear/disappear on the display.
- When the alarm sounds, press the **ZZ** (Snooze) button to activate the snooze function. The alarm will temporarily stop and sound again after a few minutes.
- To stop the alarm completely, press any other button (e.g., **SET** or **MODE**).

5. Weekday/Weekend/Daily Alarm Settings

The WT175 allows for flexible alarm scheduling. While in alarm setting mode (after pressing **AL SET ON-OFF**), you can cycle through alarm types by pressing the **+** or **-** buttons after setting the alarm time. Look for indicators on the display for:

- **Daily Alarm:** Alarm sounds every day.
- **Weekday Alarm:** Alarm sounds Monday to Friday.
- **Weekend Alarm:** Alarm sounds Saturday and Sunday.

6. Timer and Countdown Function

1. Press the **MODE** button repeatedly until the timer display appears (often indicated by a stopwatch icon).
2. To set the countdown timer, press and hold **SET**. Use **+** or **-** to set the desired hours, minutes, and seconds. Press **SET** to confirm each segment.
3. Press **START/STOP/RESET** to begin the countdown.
4. Press **START/STOP/RESET** again to pause/resume the countdown.
5. To reset the timer, press and hold **START/STOP/RESET**.

7. Temperature and Humidity Display

The Technoline WT175 continuously displays the current indoor temperature (in Celsius) and humidity levels. These readings are typically shown alongside the time and date on the main display.



Figure 4: The WT175 alarm clock displaying time, temperature, and humidity in a bedroom setting.

MAINTENANCE

1. Battery Replacement

When the low battery indicator appears on the display, it is time to replace the battery. Follow the battery installation steps outlined in the **Setup** section. Ensure to dispose of old batteries responsibly according to local regulations.

2. Cleaning

To clean the alarm clock, use a soft, dry cloth. Do not use abrasive cleaners, solvents, or immerse the device in water. Avoid spraying cleaning solutions directly onto the unit.

TROUBLESHOOTING

- **Display is blank or dim:**
 - Check if the battery is correctly installed.
 - Replace the battery with a fresh one.

- **Alarm does not sound:**
 - Ensure the alarm is activated (alarm icon visible on display).
 - Verify the alarm time is set correctly.
 - Check the alarm type (Daily, Weekday, Weekend) matches your desired schedule.
- **Incorrect time or date:**
 - Re-enter the time and date following the instructions in the **Operating Instructions** section.
 - Ensure the 12/24 hour format is set as desired.
- **Buttons are unresponsive:**
 - Remove and reinsert the battery to perform a soft reset.
 - Ensure the device is not in a specific setting mode that locks other buttons.

SPECIFICATIONS

Feature	Detail
Model	WT175
Brand	Technoline
Dimensions (L x W x H)	8.8 x 3.81 x 3.7 cm
Weight	120 grams
Power Source	1x AAA Micro LR03 Battery (not included)
Display Type	Digital
Special Features	Alarm, Snooze, Temperature, Humidity, Date, Timer, Countdown, Magnetic Casing, Low Battery Indicator
Color	White (as per current product variant)
Indoor/Outdoor Use	Indoor



Figure 5: Dimensions of the Technoline WT175 alarm clock.

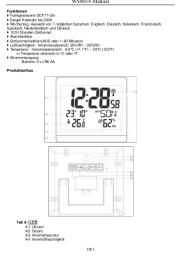



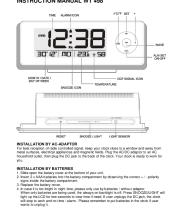

WARRANTY AND SUPPORT

For warranty information or technical support regarding your Technoline WT175 Mini Travel Alarm Clock, please refer to the warranty card included with your purchase or visit the official Technoline website.

Official Technoline Website: <http://www.technoline.de>

© 2024 Technoline. All rights reserved.

Related Documents - WT175

	<p>WS8014 Radio Controlled Clock and Weather Station User Manual</p> <p>User manual for the WS8014 radio-controlled clock and weather station, covering features, setup, operation, specifications, and safety information.</p>
	<p>Funkwecker mit Projektion WT519 User Manual</p> <p>User manual for the Technoline WT519 projection alarm clock, covering setup, function keys, display modes, time and alarm settings, and important usage notes.</p>
	<p>TechnoLine WT 755 Radio-controlled Analog Alarm Clock: Instruction Manual</p> <p>User guide for the TechnoLine WT 755 radio-controlled analog alarm clock. Learn how to set up, use automatic time synchronization, alarm functions, snooze, illumination, and proper battery disposal.</p>
	<p>Memo Alarm Clock Operating Manual: Radio Controlled Time and Features</p> <p>Comprehensive operating manual for the Memo Alarm Clock, detailing features, setup, radio-controlled time reception, manual time setting, alarm functions, maintenance, and specifications.</p>
	<p>WT 498 Radio Controlled Clock Instruction Manual</p> <p>This instruction manual provides detailed guidance on setting up, operating, and troubleshooting the WT 498 radio-controlled clock, featuring automatic time synchronization, alarm functions, and temperature display.</p>
	<p>Moon Phase Clock Instruction Manual - Radio Controlled Time, Date, Temperature</p> <p>Comprehensive instruction manual for the Moon Phase Clock, detailing setup, features, manual settings, and maintenance for the DCF-77 radio-controlled timepiece by Technoline.</p>