Manuals+

Q & A | Deep Search | Upload

manuals.plus /

- Anderic /
- > [2 Pack] Anderic TR214D for KUJCE10311 KUJCE10712 TR214B Harbor Breeze Ceiling Fan Remote Control RRTR214D

Anderic RRTR214D-2PK

Anderic RRTR214D Ceiling Fan Remote Control User Manual

Model: RRTR214D-2PK

INTRODUCTION

This user manual provides detailed instructions for the setup, operation, and maintenance of your Anderic RRTR214D Ceiling Fan Remote Control. Designed as a direct replacement for various Harbor Breeze remote models, this remote offers comprehensive control over your ceiling fan's speed and lighting functions. Please read this manual thoroughly before use to ensure proper functionality and to maximize the lifespan of your device.



Figure 1: Two Anderic RRTR214D remote controls. These remotes are designed for ease of use and reliable performance with compatible ceiling fans.

PRODUCT OVERVIEW AND FEATURES

The Anderic RRTR214D remote control is engineered to provide seamless control for your ceiling fan. Its key features include:

- **Direct Replacement:** Seamlessly replaces Harbor Breeze remote models A25-FA0138, KUJCE10311, TR214B, KUJCE10712, TR214A, and KUJCE10610.
- Effortless Pairing: Designed for easy pairing with your current receiver, ensuring a hassle-free setup.
- Comprehensive Control: Offers complete control over fan speeds (high, medium, low, and off) and light functions (on/off and dimming).
- Battery Powered: Uses a 23A 12-volt battery (not included) for long-lasting operation.
- Convenient Wall Mount: Includes a wall mount for easy installation and accessibility.

COMPLETE CONTROL Fan Speeds & Light Dimming



Figure 2: Remote control button functions. The remote features dedicated buttons for light control (on/off/dimming) and fan speeds (1 for low, 2 for medium, 3 for high, 0 for off).

Compact, Comfortable **Easy to Use** 2 INCHES 0.9 5 INCHES **INCHES** Designed to fit naturally in your hand & your space ANDERIC **ANDERIC**

Figure 3: Remote control dimensions. The compact design ensures it fits comfortably in hand and integrates well into your living space.

COMPATIBILITY

The Anderic RRTR214D remote control is specifically designed to replace the following Harbor Breeze remote models. It is crucial that your existing ceiling fan receiver was originally supplied with one of these models for proper compatibility.

- A25-FA0138
- KUJCE10311
- TR214B
- KUJCE10712
- TR214A
- KUJCE10610

This remote cannot be paired with other ceiling fan receivers not originally supplied with these specific models.



Figure 4: Compatible Harbor Breeze models. This image illustrates the range of specific Harbor Breeze fan models that are compatible with the Anderic RRTR214D remote control.

SETUP AND INSTALLATION

Battery Installation

The Anderic RRTR214D remote control requires one 23A 12-volt battery (not included). Follow these steps to install the battery:

- 1. Locate the battery compartment cover on the back of the remote control.
- 2. Slide the cover off in the direction indicated by the arrow (if present).
- 3. Insert one 23A 12-volt battery, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
- 4. Slide the battery compartment cover back into place until it clicks securely.

EFFORTLESS PAIRING Simple 3-Step Pairing



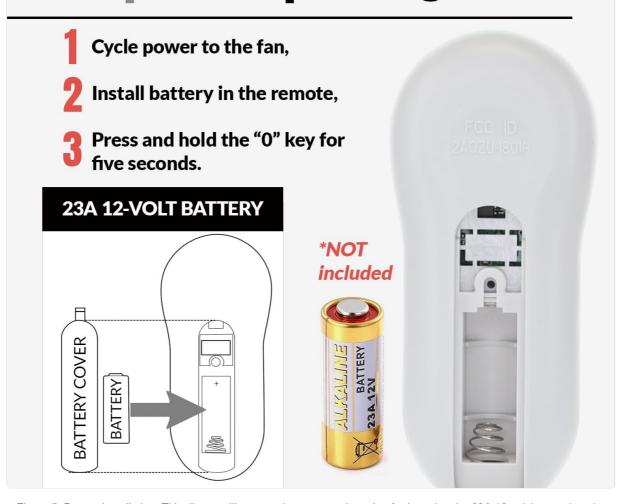


Figure 5: Battery installation. This diagram illustrates the correct orientation for inserting the 23A 12-volt battery into the remote control's battery compartment.

Pairing Instructions

To pair your new Anderic RRTR214D remote control with your ceiling fan receiver, follow these simple steps:

- 1. **Cycle power to the fan:** Turn off the power to your ceiling fan at the wall switch or circuit breaker, wait for approximately 10 seconds, and then turn the power back on.
- 2. Install battery in the remote: Ensure the 23A 12-volt battery is correctly installed in your remote control.
- 3. **Press and hold the "0" key:** Within 30 seconds of restoring power to the fan, press and hold the "0" (fan off) button on the remote control for five seconds. The fan light should blink or the fan should respond, indicating successful pairing.

Note: Only one remote can be paired to the same fan at a time. If you are replacing an old remote, ensure it is no longer in use or its pairing is cleared (if applicable) before pairing the new remote.

Wall Mount Installation

The included wall mount provides a convenient storage solution for your remote control. To install the wall mount:

- 1. Choose a suitable location on a wall, away from direct sunlight or heat sources.
- 2. Use the provided screws (or appropriate hardware for your wall type) to secure the wall mount to the desired surface. Ensure it is level and firmly attached.

3. Slide the remote control into the wall mount for easy access.



Figure 6: Wall mount installation. The wall mount helps keep your remote accessible and prevents it from being misplaced.

OPERATION

Once paired, your Anderic RRTR214D remote control allows you to operate your ceiling fan and its light with ease.

• Fan Speed Control:

- Press "1" for Low fan speed.
- Press "2" for Medium fan speed.
- Press "3" for High fan speed.
- Press "0" to turn the fan Off.

• Light Control:

- Press the Light button (bulb icon) to turn the light On or Off.
- To dim the light, press and hold the **Light button**. Release when the desired brightness is achieved.

MAINTENANCE

Proper maintenance will ensure the longevity and optimal performance of your remote control.

- Battery Replacement: When the remote's range decreases or the fan/light response becomes inconsistent, it's time to replace the 23A 12-volt battery. Follow the battery installation steps in the "Setup and Installation" section.
- **Cleaning:** Clean the remote control with a soft, dry cloth. Do not use abrasive cleaners, solvents, or harsh chemicals, as these can damage the surface or internal components.
- Storage: If the remote will not be used for an extended period, remove the battery to prevent leakage and potential damage. Store the remote in a cool, dry place.

TROUBLESHOOTING

If you encounter issues with your Anderic RRTR214D remote control, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution		
Remote not responding to fan/light.	 Dead or low battery. Remote not paired. Obstruction between remote and receiver. Incorrect remote for receiver. 	 Replace the 23A 12-volt battery. Re-attempt the pairing process as described in "Setup and Installation". Ensure clear line of sight, if possible, or reduce distance. Verify your fan's receiver is compatible with the listed models. 		
Fan operates but light does not.	Light bulb is burnt out or loose.Light function not enabled on receiver (less common).	 Check and replace the light bulb. Ensure it is screwed in tightly. Consult your ceiling fan's original manual for light receiver settings. 		
Fan speeds are incorrect or inconsistent.	Low battery.Interference.	 Replace the 23A 12-volt battery. Ensure no other devices are causing signal interference. 		

If the problem persists after trying these solutions, please contact customer support for further assistance.

SPECIFICATIONS

Model Number	RRTR214D-2PK
Product Dimensions	1.7 x 3.9 x 1.8 inches
Item Weight	2.24 ounces
Battery Type	1 x 23A 12-volt (not included)
Color	White
Manufacturer	Dan's Electronics Etc., Inc.

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation provided with your purchase or

visit the official Anderic website. You may also contact the manufacturer, Dan's Electronics Etc., Inc., for assistance.

For additional resources and product information, you can visit the Anderic Store on Amazon.

© 2024 Anderic. All rights reserved.

Related Documents - RRTR214D-2PK



Anderic RRTX012 & FD40-H02R Ceiling Fan Remote Control Instructions

Comprehensive guide for the Anderic RRTX012 and FD40-H02R ceiling fan remote controls, covering installation, setup, battery replacement, remote pairing, and detailed operation of fan speeds, lighting, timers, and special features like Home Shield and Walk Away Light Delay.



Anderic RRTX012 Remote Control Operating Instructions

Operating instructions for the Anderic RRTX012 ceiling fan remote control, covering wall bracket installation, remote setup, battery installation, pairing, and detailed operation of fan speeds, natural breeze, light functions, walk-away light delay, home shield, sleep timer, and power off memory.



ANDERIC® RRTX001R Remote Control User Manual

User manual for the ANDERIC® RRTX001R Remote Control, detailing battery installation, pairing instructions, product functions, and wall mount bracket installation.



Anderic Universal Thermostatic Ceiling Fan Remote Control Kit Installation and Use Guide

Comprehensive guide for installing and operating the Anderic HD3 Universal Thermostatic Ceiling Fan Remote Control Kit, including safety information, troubleshooting, and warranty details.



Anderic FAN9T and FAN28R/UC7067FCRX Installation Instructions

Detailed installation guide for the Anderic FAN9T and FAN28R/UC7067FCRX ceiling fan remote control system, including receiver wiring, remote pairing, and battery installation.



Anderic UC7058RY Ceiling Fan Receiver Installation Guide

Detailed installation and pairing instructions for the Anderic UC7058RY ceiling fan receiver. Includes notes on compatibility with Anderic RR7078TR and RR7083TR remotes. Provides step-by-step guidance for setup and remote synchronization.