

Daewoo MD-FA202SB-EU

Daewoo MD-FA202SB-EU 20L 700W Digital Microwave Oven Instruction Manual

Model: MD-FA202SB-EU

1. IMPORTANT SAFETY INSTRUCTIONS

Read all instructions carefully before using the appliance. Keep this manual for future reference.

- Do not attempt to operate this oven with the door open as this can result in harmful exposure to microwave energy.
- Do not place any object between the oven front face and the door or allow soil or cleaner residue to accumulate on sealing surfaces.
- Do not operate the oven if it is damaged. It is particularly important that the oven door closes properly and that there is no damage to the: (1) door (bent), (2) hinges and latches (broken or loosened), (3) door seals and sealing surfaces.
- The oven should not be adjusted or repaired by anyone except properly qualified service personnel.
- Ensure the appliance is properly grounded.
- Do not heat liquids or other foods in sealed containers since they are liable to explode.
- Only use utensils suitable for microwave ovens.
- When heating food in plastic or paper containers, keep an eye on the oven due to the possibility of ignition.
- If smoke is observed, switch off or unplug the appliance and keep the door closed in order to stifle any flames.
- Do not overcook food.
- The contents of feeding bottles and baby food jars shall be stirred or shaken and the temperature checked before consumption, in order to avoid burns.
- Eggs in their shell and whole hard-boiled eggs should not be heated in microwave ovens since they may explode, even after microwave heating has ended.

2. PRODUCT OVERVIEW

The Daewoo MD-FA202SB-EU is a compact and efficient digital microwave oven designed for everyday kitchen use. It features a 20-liter capacity and 700W power output, making it suitable for various heating and cooking tasks.

Key Features:

- **20 Liter Capacity:** Ample internal space for heating and defrosting food conveniently.
- **700W Power:** Powerful heating system for quick and efficient cooking.
- **8 Preset Programs:** A variety of cooking options to meet your needs.
- **5 Adjustable Power Levels:** Precise control over heating intensity depending on the food type.
- **Intuitive Digital Panel:** Easy management and configuration of functions with a simple touch.

Components:

The microwave oven includes a glass turntable and a turntable support ring.



Image 1: Front view of the Daewoo MD-FA202SB-EU digital microwave oven, showcasing its sleek black design and digital control panel.



Image 2: Interior view of the microwave oven with the door open, showing the spacious 20-liter cavity and the glass turntable.

3. SETUP AND INSTALLATION

The Daewoo MD-FA202SB-EU is a tabletop microwave oven. Follow these steps for proper installation:

1. **Unpacking:** Carefully remove the microwave oven and all packing materials from the carton. Check the oven for any damage, such as dents or a misaligned door. Do not operate the oven if it is damaged.
2. **Placement:** Place the microwave oven on a flat, stable surface that can support its weight and the heaviest food item likely to be cooked in it. Ensure there is adequate ventilation around the oven.
3. **Ventilation:** Allow a minimum of 20 cm (8 inches) of space above the oven, 10 cm (4 inches) at the rear, and 5 cm (2 inches) on each side for proper air circulation. Do not block any ventilation openings.
4. **Power Connection:** Plug the power cord into a standard grounded electrical outlet. Ensure the voltage matches the specifications of the oven.
5. **Turntable Assembly:** Place the turntable support ring in the center of the oven cavity. Then, place the glass turntable on top of the support ring, ensuring it sits securely in the center drive.



Image 3: The Daewoo MD-FA202SB-EU microwave oven integrated into a modern kitchen setting, demonstrating its tabletop installation.

4. OPERATING INSTRUCTIONS

The digital control panel allows for easy operation of your microwave oven. Familiarize yourself with the controls before use.

Control Panel Overview:

The digital panel typically includes a display, number buttons (0-9), power level selection, preset program buttons, a start button, and a stop/cancel button. The specific layout is visible on the product images.

Basic Microwave Cooking:

1. Place food in a microwave-safe container on the turntable.
2. Close the oven door securely.
3. Press the "Power Level" button repeatedly to select the desired power level (e.g., P100 for 100% power, P80 for 80%, etc. - refer to specific model manual for exact power level indications). This model offers 5 power levels.
4. Use the number buttons to enter the desired cooking time.
5. Press the "Start" button to begin cooking.
6. To pause cooking, open the door or press the "Stop" button once. To cancel, press "Stop" twice.

Using Preset Programs (8 Programs):

This microwave features 8 automatic programs for common food items, allowing for perfect cooking with a single touch. These programs are typically labeled on the control panel (e.g., Potato, Pasta, Pizza, Popcorn, Vegetable, Beverage, Meat, Reheat, Fish).

1. Place the food in the oven.
2. Select the desired automatic program by pressing the corresponding button or cycling through options.
3. The oven may prompt you to enter the weight or quantity of the food using the number buttons.

4. Press "Start" to begin the program.

Cocina perfecta en un solo toque

Transforma cada comida en una experiencia extraordinaria: cocina con rapidez, sabor y estilo ajustando la potencia ideal.

Con **8 programas automáticos** para patatas, pasta, pizza, palomitas, verduras, bebidas, carne y pescado, obtendrás resultados perfectos con solo un toque.



Image 4: An illustration of various dishes, such as potato, pasta, pizza, and meat, highlighting the convenience of the 8 automatic cooking programs for perfect results.

Defrost Function:

The defrost function allows for easy and precise thawing of food. The oven automatically selects the defrost time based on the weight of the item, ensuring uniform and efficient results.

1. Place the frozen food in a microwave-safe container on the turntable.
2. Press the "Defrost" button (often indicated by a snowflake icon).
3. Enter the weight of the food using the number buttons.
4. Press "Start" to begin defrosting. The oven may beep halfway through to prompt you to turn the food over for even thawing.

Función Descongelar

Descongela de manera fácil y precisa gracias a la selección automática de tiempo según el peso de cada plato, asegurando un resultado uniforme, eficiente y listo para cocinar



Image 5: An image featuring various frozen seafood items, such as shrimp, squid, and fish, demonstrating the microwave's efficient defrost function.

Setting the Clock:

To set the clock, typically you would press a "Clock" button, then use the number buttons to enter the current time, and press "Clock" again to confirm. Refer to the specific instructions on your control panel for exact steps.

5. MAINTENANCE AND CLEANING

Regular cleaning and maintenance will ensure the longevity and optimal performance of your microwave oven.

- **Interior Cleaning:** After each use, wipe the interior cavity, especially the ceramic enamelled surface, with a damp cloth to remove food splatters. For stubborn stains, use a mild detergent and water, then wipe dry.
- **Exterior Cleaning:** Clean the exterior surfaces with a soft, damp cloth. Do not use abrasive cleaners or harsh chemicals.
- **Door Seals:** Regularly clean the door seals and sealing surfaces to ensure the door closes properly and safely.
- **Turntable:** The glass turntable and turntable support ring can be removed and washed in warm, soapy water or in a dishwasher. Ensure they are completely dry before placing them back in the oven.
- **Odor Removal:** To remove odors, combine a cup of water with a few slices of lemon or a tablespoon of vinegar in a microwave-safe bowl. Heat on high for 2-3 minutes, then let it sit in the oven for 5 minutes before wiping clean.
- **Do Not Use:** Never use steam cleaners, abrasive pads, or sharp objects to clean any part of the microwave.

6. TROUBLESHOOTING

If you encounter issues with your microwave oven, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Oven does not start	Power cord not plugged in; Door not closed properly; Fuse blown or circuit breaker tripped; Incorrect operation set.	Ensure power cord is securely plugged in; Close the door firmly; Check household fuse or reset circuit breaker; Re-enter cooking instructions.
Food not heating	Incorrect cooking time or power level set; Microwave-safe dish not used.	Adjust cooking time and power level; Use only microwave-safe cookware.
Turntable not rotating	Turntable not properly seated; Obstruction under turntable; Turntable motor malfunction.	Ensure turntable and support ring are correctly positioned; Remove any obstructions; Contact service personnel if motor is faulty.
Unusual noise during operation	Food container touching oven walls; Turntable not properly seated.	Ensure food container is centered and not touching walls; Re-seat turntable and support ring.
Display shows error code	Internal malfunction.	Unplug the oven for a few minutes, then plug it back in. If the error persists, contact customer support.

7. SPECIFICATIONS

Feature	Detail
Brand	Daewoo
Model Name	MD-FA202SB-EU
Capacity	20 Liters
Microwave Power Output	700 W
Dimensions (D x W x H)	35.3 cm x 45.6 cm x 26.4 cm
Color	Black
Control Type	Digital (Touchscreen)
Power Levels	5
Preset Programs	8
Interior Material	Enamelled Ceramic
Turntable Diameter	255 mm
Installation Type	Tabletop
Frequency	50 Hz

8. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the warranty card included with your product or visit the official Daewoo website. Keep your proof of purchase for any warranty claims.

Manufacturer: Vestel

Product ASIN: B0DP1F9F47

© 2024 Daewoo. All rights reserved.

This manual is for informational purposes only. Daewoo reserves the right to make changes to product specifications without prior notice.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question