

 
manuals.plus /

- › [RadioShack](#) /
- › [RadioShack Home Projector User Manual](#)

## RadioShack Home Projector

# RadioShack Home Projector User Manual

Model: Home Projector (ASIN: B0DP1GFG9L)



## 1. INTRODUCTION

This manual provides essential instructions for the safe and efficient operation of your RadioShack Home Projector. Please read this manual thoroughly before using the device and retain it for future reference.



Image 1.1: Front view of the RadioShack Home Projector, showcasing its lens and speaker grille.

## 2. PACKAGE CONTENTS

---

Verify that all items are present in the package:

- 1 x RadioShack Home Projector
- 1 x Remote Control
- 1 x Power Cable
- 1 x User Manual (this document)

## What's in the box:

✓ 1 home projector

✓ 1 remote control

✓ 1 power cable

✓ 1 user manual

Image 2.1: Illustration of the package contents, including the projector, remote control, power cable, and user manual.

## 3. PRODUCT OVERVIEW

### 3.1. Key Features

- **High-Resolution Display:** Supports full HD resolution for clear and detailed images.
- **Bright and Long-Lasting:** Features impressive brightness and a durable light source.
- **Versatile Connectivity:** Includes Bluetooth, WiFi, Android Miracast, and iOS Cast for streaming.
- **Enhanced Viewing:** Digital focus and keystone correction for optimal image alignment.
- **Compact and Portable:** Lightweight design with a handle for easy transport.

### 3.2. Ports and Controls

Familiarize yourself with the projector's input/output ports and controls.



## Multi device connection via HDMI cable

Image 3.1: Rear view of the projector showing USB input for media playback, AV input for DVD players, and HDMI input for various devices like video game consoles, streaming sticks, cell phones, tablets, and laptops.

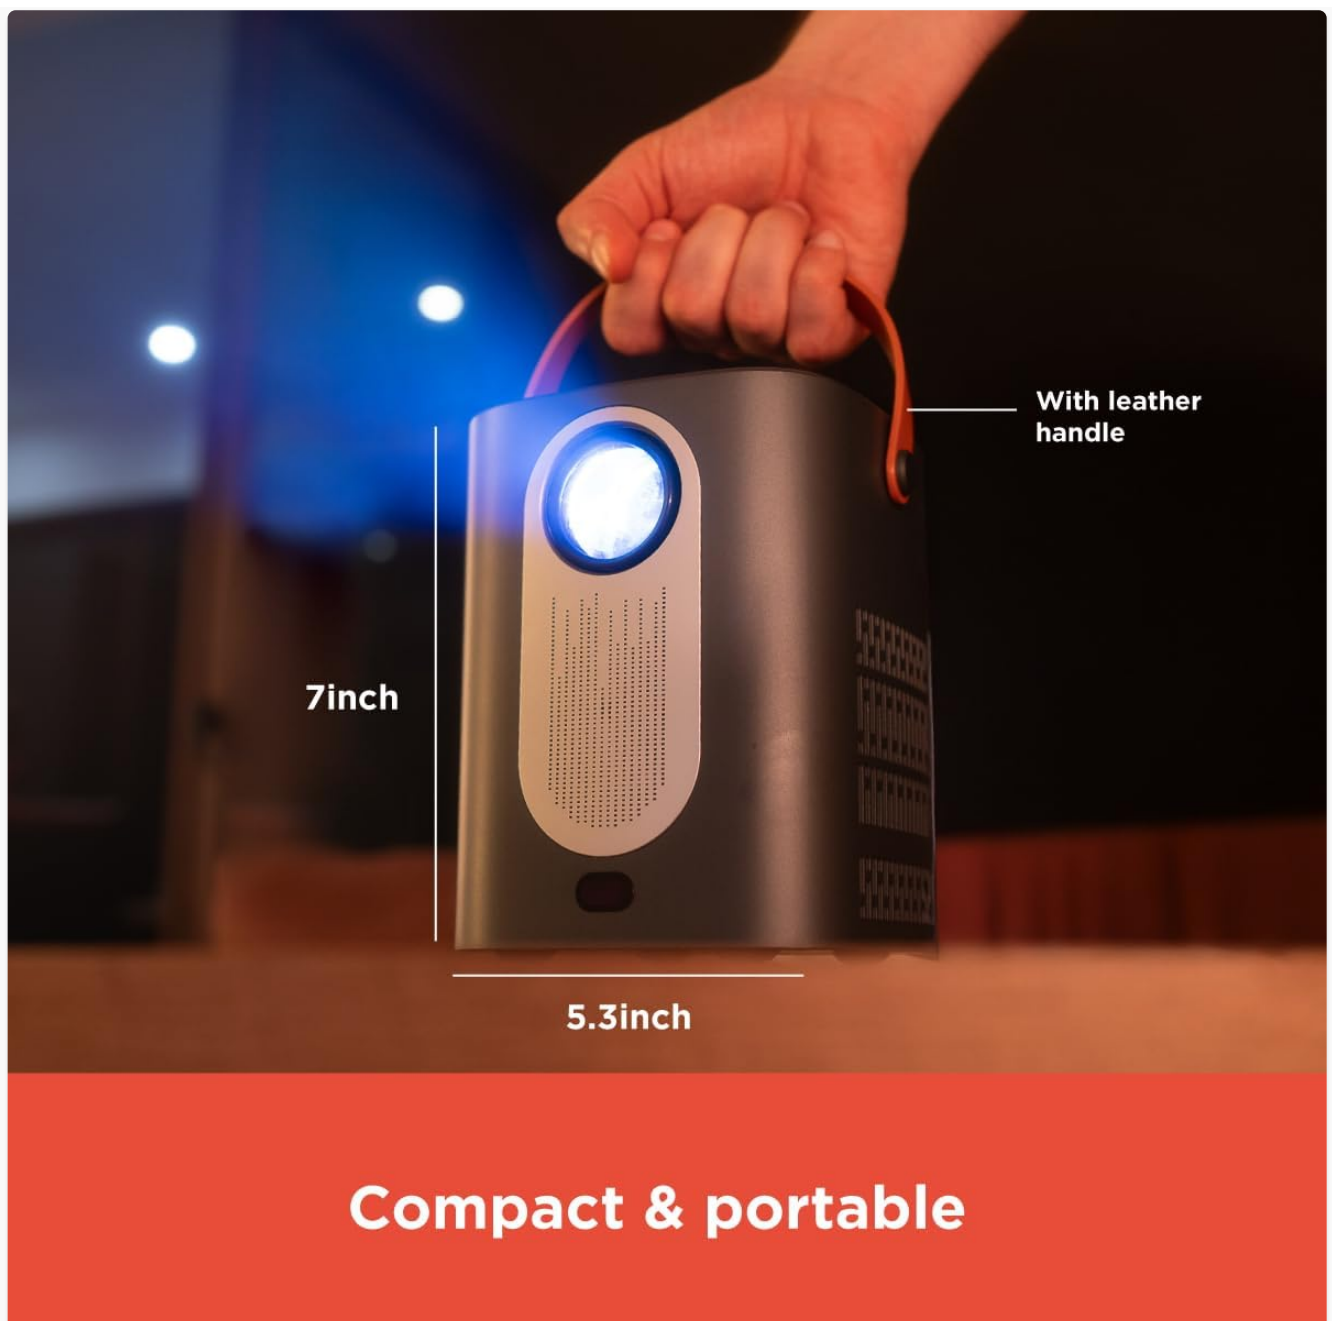 


Image 3.2: Side view illustrating the compact dimensions (approximately 7 inches tall, 5.3 inches wide) and the integrated leather handle for portability.

## 4. SETUP GUIDE

### 4.1. Initial Power On

1. Connect the power cable to the projector and a suitable power outlet.
2. Press the power button located on the top of the projector or on the remote control to turn on the device. The indicator light will illuminate.
3. The RadioShack logo will appear on the projection surface, indicating successful power-on.

Your browser does not support the video tag.

Video 4.1: A short demonstration showing the unboxing, connecting the power cable, powering on the projector, and the initial display of the RadioShack logo.

### 4.2. Placement and Focus

- Place the projector on a stable, flat surface, ensuring the lens is unobstructed.
- Adjust the distance from the projection surface (wall or screen) to achieve the desired image size.
- Use the digital focus adjustment (refer to the remote control or on-screen menu) to sharpen the image.
- Utilize keystone correction if the image appears trapezoidal, to achieve a rectangular projection.

## 5. OPERATING INSTRUCTIONS

---

### 5.1. Connecting Devices

The projector supports multiple input sources:

- **HDMI:** Connect devices such as laptops, gaming consoles, streaming boxes, or Blu-ray players using an HDMI cable. Select HDMI as the input source from the projector's menu.
- **USB:** Insert a USB drive to play compatible video or audio files. Select USB as the input source.
- **AV:** Connect older devices like DVD players using an AV cable. Select AV as the input source.
- **Bluetooth:** Pair with Bluetooth audio devices for wireless sound output.
- **WiFi / Casting:** Connect to a Wi-Fi network to enable Android Miracast or iOS Cast for screen mirroring from compatible smartphones and tablets.



## Use HDMI to enjoy streaming from your PC

Image 5.1: A couple enjoying content projected by the RadioShack Home Projector, demonstrating its use in a home cinema setting.

### 5.2. Remote Control Functions

The included remote control allows for convenient operation:

- **Power:** Turn the projector on/off.
- **Source:** Select input sources (HDMI, USB, AV, etc.).
- **Navigation:** Arrow keys to navigate menus, OK button to confirm.
- **Volume:** Adjust audio output level.
- **Focus/Keystone:** Access digital focus and keystone correction settings.





Image 5.2: The RadioShack Home Projector placed on a table next to its remote control, ready for use.

## 6. MAINTENANCE

- **Cleaning the Lens:** Use a soft, lint-free cloth specifically designed for optical lenses to gently wipe the projector lens. Avoid abrasive materials or harsh chemicals.
- **Cleaning the Exterior:** Wipe the projector's exterior with a soft, dry cloth. Do not use liquid cleaners directly on the device.
- **Ventilation:** Ensure the projector's ventilation openings are clear of dust and obstructions to prevent overheating.
- **Storage:** When not in use for extended periods, store the projector in a cool, dry place, away from direct sunlight and extreme temperatures.

## 7. TROUBLESHOOTING

Problem	Possible Cause	Solution
No image displayed	Power cable disconnected; incorrect input source selected; lens cap on.	Check power connection; select correct input source (HDMI, USB, AV); remove lens cap.
Image is blurry	Focus not adjusted; projector too close/far from screen.	Adjust digital focus; reposition projector for optimal distance.
No sound	Volume too low; external audio device not connected/paired; incorrect audio output selected.	Increase volume; ensure Bluetooth device is paired or wired audio is connected; check audio output settings.
Remote control not working	Batteries depleted; obstruction between remote and projector.	Replace remote control batteries; ensure clear line of sight to the projector's IR receiver.



## 8. SPECIFICATIONS

---

**Brand:** RadioShack

**Model:** Home Projector (ASIN: B0DP1GFG9L)

**Display Resolution:** 1280 x 720 (Supports Full HD)

**Connectivity Technology:** AV, HDMI, USB, Bluetooth, WiFi (Android Miracast, iOS Cast)

**Special Features:** Portable, Digital Focus, Keystone Correction

**Recommended Use:** Home Cinema

**Product Dimensions:** 5.31 x 5.31 x 7.09 inches

**Item Weight:** 3.91 pounds



**Supports full HD resolution & high-quality sound**

Image 8.1: The projector displaying content, highlighting its support for full HD resolution and high-quality sound.

## 9. WARRANTY AND SUPPORT

---

For warranty information and technical support, please refer to the official RadioShack website or contact their



 

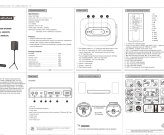 

customer service. Keep your purchase receipt as proof of purchase.

Online Support: [www.radioshack.com](http://www.radioshack.com)



© 2024 RadioShack. All rights reserved.

Related Documents - Home Projector

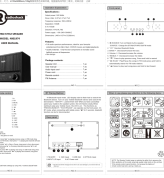	<p><a href="#">RadioShack 4001942 &amp; 4001944 Dual PA Speaker User Manual</a></p> <p>User manual for RadioShack 4001942 and 4001944 Dual 10-inch and 15-inch 2-way PA Speakers. Includes specifications, packing contents, amplifier control panel details, MP3 player functions, remote control guide, Bluetooth pairing, and important safety/FCC information.</p>
	<p><a href="#">RadioShack TCR-200 Telephone Cassette Recorder Owner's Manual</a></p> <p>Comprehensive user guide for the RadioShack TCR-200 Telephone Cassette Recorder. Learn about its features, installation, operation, maintenance, and important legal considerations for recording phone calls.</p>
	<p><a href="#">Radioshack 4001974 Retro Style Speaker User Manual</a></p> <p>Comprehensive user manual for the Radioshack 4001974 Retro Style Speaker. Learn about its specifications, features, front panel controls, remote operation, Bluetooth pairing, rear panel connections, and important usage guidelines.</p>
	<p><a href="#">RadioShack 2607147 Wireless Keyboard User Manual</a></p> <p>User manual for the RadioShack 2607147 Wireless Keyboard, detailing specifications, features, and FCC compliance information.</p>
	<p><a href="#">RadioShack 4001976 Soundbar Speaker User Manual</a></p> <p>User manual for the RadioShack 4001976 Soundbar Speaker, providing operating instructions, specifications, and connection diagrams.</p>
	<p><a href="#">Radioshack Cell Phone Stand with Wireless Charger User Manual</a></p> <p>User manual for the Radioshack Cell Phone Stand with Wireless Charger, model 2733350. Includes instructions for use, indicator descriptions, precautions, product parameters, and FCC statement in English and Spanish.</p>

