

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Rowenta](#) /

› [Rowenta Tefal XForce 13.60 RH9A TY9A Vacuum Cleaner Extension Tube Instruction Manual](#)

Rowenta XForce 13.60 RH9A TY9A

Rowenta Tefal XForce 13.60 RH9A TY9A Vacuum Cleaner Extension Tube Instruction Manual

INTRODUCTION

This document provides instructions for the proper use and maintenance of your Rowenta Tefal XForce 13.60 RH9A TY9A Rigid Extension Tube. This is an original spare part designed to enhance the reach and versatility of compatible Rowenta and Tefal vertical vacuum cleaners.

The extension tube features a durable construction in grey and black, and includes a flexible joint for improved maneuverability.

PRODUCT OVERVIEW



Figure 1: Front view of the Rowenta Tefal XForce extension tube in its straight configuration. This image shows the main body of the tube with the 'Flex' branding and the 'Push' button for activating the flexible joint.



Figure 2: Rear view of the Rowenta Tefal XForce extension tube. This perspective highlights the connection points and the overall design when the tube is straight.



Figure 3: The Rowenta Tefal XForce extension tube bent at its flexible joint. This demonstrates the tube's ability to articulate, allowing access to hard-to-reach areas under furniture.

SETUP AND INSTALLATION

- 1. Preparation:** Ensure your vacuum cleaner is turned off and unplugged from the power outlet before attempting to attach or detach any accessories.

2. Attaching the Extension Tube:

- Locate the connection point on the main body of your compatible Rowenta or Tefal vertical vacuum cleaner, or on an existing accessory.
- Align the male end of the extension tube with the female connection point on the vacuum or accessory.
- Push the tube firmly into place until you hear a click, indicating a secure connection. Gently pull on the tube to ensure it is properly seated.

3. Detaching the Extension Tube:

- Press the release button (if present on your vacuum or accessory) or the 'Push' button on the extension tube itself, while simultaneously pulling the tube away from the connection point.

OPERATING INSTRUCTIONS

Once the extension tube is securely attached, it extends the reach of your vacuum cleaner, allowing you to clean higher areas or further under furniture.

- **Extended Reach:** Use the tube in its straight configuration for cleaning ceilings, high shelves, or other elevated surfaces.
- **Flexible Cleaning:** To clean under low furniture or in tight spaces, press the 'Push' button located on the tube to activate the flexible joint. This allows the tube to bend, providing greater maneuverability without needing to bend down.
- **Accessory Attachment:** Other compatible vacuum cleaner accessories (e.g., brushes, crevice tools) can be attached to the end of the extension tube to further customize your cleaning tasks.

MAINTENANCE AND CARE

- **Cleaning:** Wipe the exterior of the extension tube with a soft, damp cloth. Do not use abrasive cleaners, solvents, or harsh chemicals, as these can damage the plastic and finish.
- **Connection Points:** Periodically check the connection points for any accumulated dust, debris, or obstructions that might prevent a secure fit or reduce suction. Clean as necessary.
- **Storage:** Store the extension tube in a clean, dry place, away from direct sunlight and extreme temperatures.

TROUBLESHOOTING

- **Tube does not attach securely:**
 - Ensure the connection points on both the tube and the vacuum/accessory are clean and free of debris.
 - Verify that the tube is correctly aligned before pushing it into place.
 - Confirm compatibility with your specific vacuum cleaner model (refer to the Specifications section).
- **Flexible joint is stiff or not bending:**
 - Check the flexible joint area for any trapped debris or foreign objects.
 - Ensure the 'Push' button is fully depressed when attempting to bend the tube.
- **Reduced suction when using the extension tube:**
 - Confirm that all connections (tube to vacuum, and any accessories to tube) are tight and secure.
 - Check the tube for any cracks or damage that could cause air leaks.

- Ensure the vacuum cleaner's dustbin is not full and filters are clean, as these can affect overall suction.

SPECIFICATIONS

Brand	Rowenta
Model	XForce 13.60 RH9A TY9A Extension Tube
Material	Plastic
Color	Grey and Black
Item Weight	570 g
Package Dimensions	70 x 6 x 6 cm
Compatible Models	XForce Flex 13.60 Rowenta: RH9A32, RH9A36, RH9A46, RH9A32WO/410, RH9A36WV/410, RH9A46WO/410 Tefal: TY9AC1, TY9AC1WO/410

WARRANTY INFORMATION

Information regarding the availability of spare parts and specific warranty details for this extension tube is not provided in the product data. For warranty claims or detailed information, please refer to the original vacuum cleaner's instruction manual or contact Rowenta/Tefal customer support directly.

CUSTOMER SUPPORT

If you encounter issues not covered in this manual, or if your product model is not listed under compatible models, please contact Rowenta or Tefal customer support for assistance.

You can typically find contact information and support resources on the official Rowenta or Tefal websites.

- **Rowenta Official Website:** www.rowenta.com
- **Tefal Official Website:** www.tefal.com