

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Casio](#) /

› [Casio G-Shock G-Steel GM700-1A User Manual](#)

## Casio GM700-1A


# Casio G-Shock G-Steel GM700-1A User Manual

Model: GM700-1A | Brand: Casio

## INTRODUCTION

This manual provides detailed instructions for the proper use and maintenance of your Casio G-Shock G-Steel GM700-1A watch. Designed for durability and performance, this timepiece combines analog and digital displays with a robust stainless-steel and resin construction. Please read this manual thoroughly to ensure optimal performance and longevity of your watch.

## PRODUCT OVERVIEW

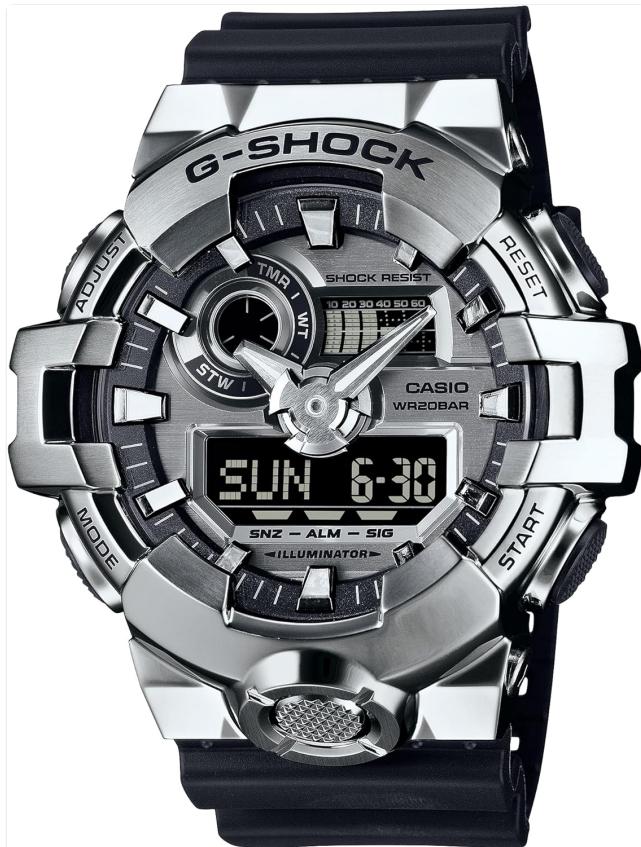

**Figure 1: Front View.** This image displays the front of the Casio G-Shock G-Steel GM700-1A watch, highlighting its silver metallic bezel, black resin band, and the combination analog and

digital display. The digital display shows the day and time, while the analog hands indicate the current time. Various function buttons are visible around the bezel.



**Figure 2: Back View.** This image shows the rear of the Casio G-Shock G-Steel GM700-1A watch. The stainless steel case back is clearly visible, featuring engravings such as "SHOCK RESIST," "WATER RESIST 20BAR," and the model number "GM700." The black resin band is also shown attached to the watch case.

## SETUP

### 1. Initial Power-On and Time Zone Setting

Upon first use or after a battery change, the watch may require initial setup. Press and hold the **ADJUST** button (top left) until the city code starts flashing. Use the **FORWARD** (top right) and **REVERSE** (bottom right) buttons to select your home city code. This will automatically set the time zone.

### 2. Setting Time and Date

1. In Timekeeping Mode, hold down the **ADJUST** button until the seconds start flashing.
2. Press the **MODE** button (bottom left) to cycle through the settings: Seconds → DST → Hour → Minute → Year → Month → Day → 12/24-hour format.
3. Use the **FORWARD** and **REVERSE** buttons to change the flashing value.
4. Once all settings are correct, press the **ADJUST** button to exit the setting mode.

## OPERATING INSTRUCTIONS

### 1. Mode Navigation

Press the **MODE** button (bottom left) to cycle through the different modes: Timekeeping Mode → Stopwatch Mode → Countdown Timer Mode → Alarm Mode → World Time Mode.

### 2. Stopwatch Function

- Enter Stopwatch Mode by pressing the **MODE** button.
- Press the **START** button (bottom right) to start and stop the stopwatch.
- Press the **RESET** button (top right) to reset the stopwatch to zero.

### 3. Alarm Setting

- Navigate to Alarm Mode using the **MODE** button.
- Hold the **ADJUST** button until the alarm time starts flashing.
- Use the **MODE** button to select hour or minute, and **FORWARD/REVERSE** buttons to change the value.
- Press **ADJUST** to save the alarm setting.
- Press the **START** button to toggle the alarm on/off.

### 4. Backlight (Illuminator)

Press the **ILLUMINATOR** button (front bottom center) to illuminate the digital display for easy viewing in low light conditions.

## MAINTENANCE

### 1. Cleaning Your Watch

Wipe the watch with a soft, dry cloth to remove dirt and moisture. For stubborn dirt, use a soft cloth dampened with water and a mild neutral detergent, then wipe dry. Avoid using volatile agents like thinner or benzine, as they may damage the resin components.

### 2. Water Resistance

The GM700-1A is water resistant to 20 BAR (200 meters). This means it is suitable for everyday use, showering, swimming, and diving. Do not operate buttons while the watch is wet or submerged in water to prevent water ingress.

### 3. Battery Replacement

The watch uses one LR44 battery. When the display becomes dim or functions become erratic, it may be time to replace the battery. Battery replacement should ideally be performed by a qualified technician to ensure proper sealing and water resistance is maintained.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Digital display is blank or dim.	Low battery.	Replace the battery.
Analog hands do not match digital time.	Hands are misaligned.	In Timekeeping Mode, hold <b>FORWARD</b> button for 3 seconds to enter hand alignment mode. Use <b>FORWARD/REVERSE</b> to adjust hands, then <b>ADJUST</b> to save.
Watch buttons are unresponsive.	Watch is in a frozen state or low battery.	Try resetting the watch by holding all four buttons simultaneously for a few seconds. If problem persists, replace battery.
Water condensation inside the watch.	Seal integrity compromised or extreme temperature change.	Seek professional service immediately to prevent damage.

## SPECIFICATIONS

- Model Number:** GM700-1A
- Case Dimensions:** Approximately 58mm x 53mm
- Weight:** Approximately 9.95 ounces
- Water Resistance:** 20 BAR (200 meters)
- Battery Type:** 1 x LR44
- Clasp Type:** Buckle
- Display:** Analog and Digital
- Features:** Stopwatch, Countdown Timer, Alarm, World Time, LED Backlight (Illuminator)

## WARRANTY AND SUPPORT

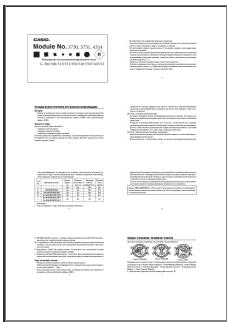
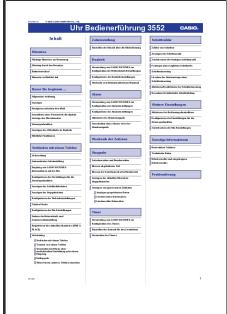
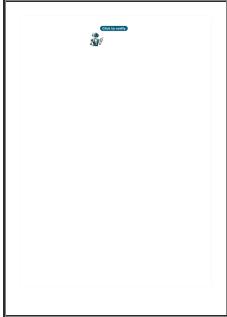
For detailed warranty information and customer support, please refer to the warranty card included with your purchase or visit the official Casio website. Casio provides support for product inquiries, repairs, and spare parts.

You can often find additional support and FAQs on the manufacturer's website: [www.casio.com](http://www.casio.com)

© 2024 Casio. All rights reserved.

## Related Documents - GM700-1A

	<p><a href="#">Casio G-Shock Watch Module 3031 User Manual (G-800/9000/9025)</a></p> <p>Comprehensive user manual for Casio G-Shock watches, Module 3031, covering models G-800, G-9000, and G-9025. Details include international warranty information, water resistance guidelines, operating modes (Current Time, Stopwatch, Countdown Timer, Alarm, World Time), care instructions, technical specifications, and product information.</p>
	<p><a href="#">Casio G-Shock G-7500/7510 Watch User Manual</a></p> <p>Comprehensive user manual for Casio G-Shock watches, module 2943, models G-7500 and G-7510. Covers setup, modes, features, and international warranty information.</p>
	<p><a href="#">Инструкция к часам Casio G-SHOCK (Модуль 5623) и международная гарантия</a></p> <p>Полное руководство пользователя и информация о международной гарантии для часов Casio G-SHOCK (Модуль 5623) от i-Watch.Ru, включая инструкции по эксплуатации, настройке функций, Bluetooth-подключению и устранению неполадок.</p>

	<p><b><a href="#">CASIO G-Series Watch User Manual (Modules 3750, 3751, 4314)</a></b></p> <p>User manual for CASIO G-Series watches with modules 3750, 3751, 4314. Covers features, operation, water resistance, care, and technical specifications for models G-300, G-306, G-313, G-353, G-350, G-540, G-550, G-740, G-741.</p>
	<p><b><a href="#">Casio G-Shock Database: Durability and Specifications</a></b></p> <p>Explore the Casio G-Shock Database for comprehensive details on shock-resistant and water-resistant watches. Find specifications, features, and heritage of the iconic G-Shock line.</p>
	<p><b><a href="#">Casio G-Shock Watch Guide: History, Models, and Time Setting</a></b></p> <p>Explore the history and evolution of Casio G-Shock watches, discover key models like the Gravitymaster and Rangeman, and learn how to set the time on your digital or analog G-Shock timepiece.</p>