

- Manuals.plus /
- > [ECONTROLLY](#) /
  - > ECONTROLLY MR20GA Magic Remote Control Instruction Manual for LG 4K UHD Smart TVs

ECONTROLLY MR20GA

# ECONTROLLY MR20GA Magic Remote Control Instruction Manual

For LG 4K UHD Smart TVs

## INTRODUCTION

This manual provides detailed instructions for the setup, operation, and maintenance of your ECONTROLLY MR20GA Magic Remote. Please read this manual thoroughly before using the remote control to ensure proper functionality and to avoid any issues.

The ECONTROLLY MR20GA is a voice-enabled replacement remote control compatible with various LG 4K UHD Smart TV models. It offers intuitive control and voice command capabilities for an enhanced television viewing experience.

## PRODUCT OVERVIEW

The ECONTROLLY MR20GA Magic Remote is designed to replace original LG Magic Remotes for compatible TV models. It features a full set of buttons for navigation, volume control, channel selection, and direct access to streaming services, along with an integrated microphone for voice commands.





**Figure 1:** Front view of the ECONTROLLY MR20GA Magic Remote Control. This image displays the full layout of buttons, including the power button, number pad, volume and channel controls, navigation wheel, voice command button, and dedicated streaming service buttons.



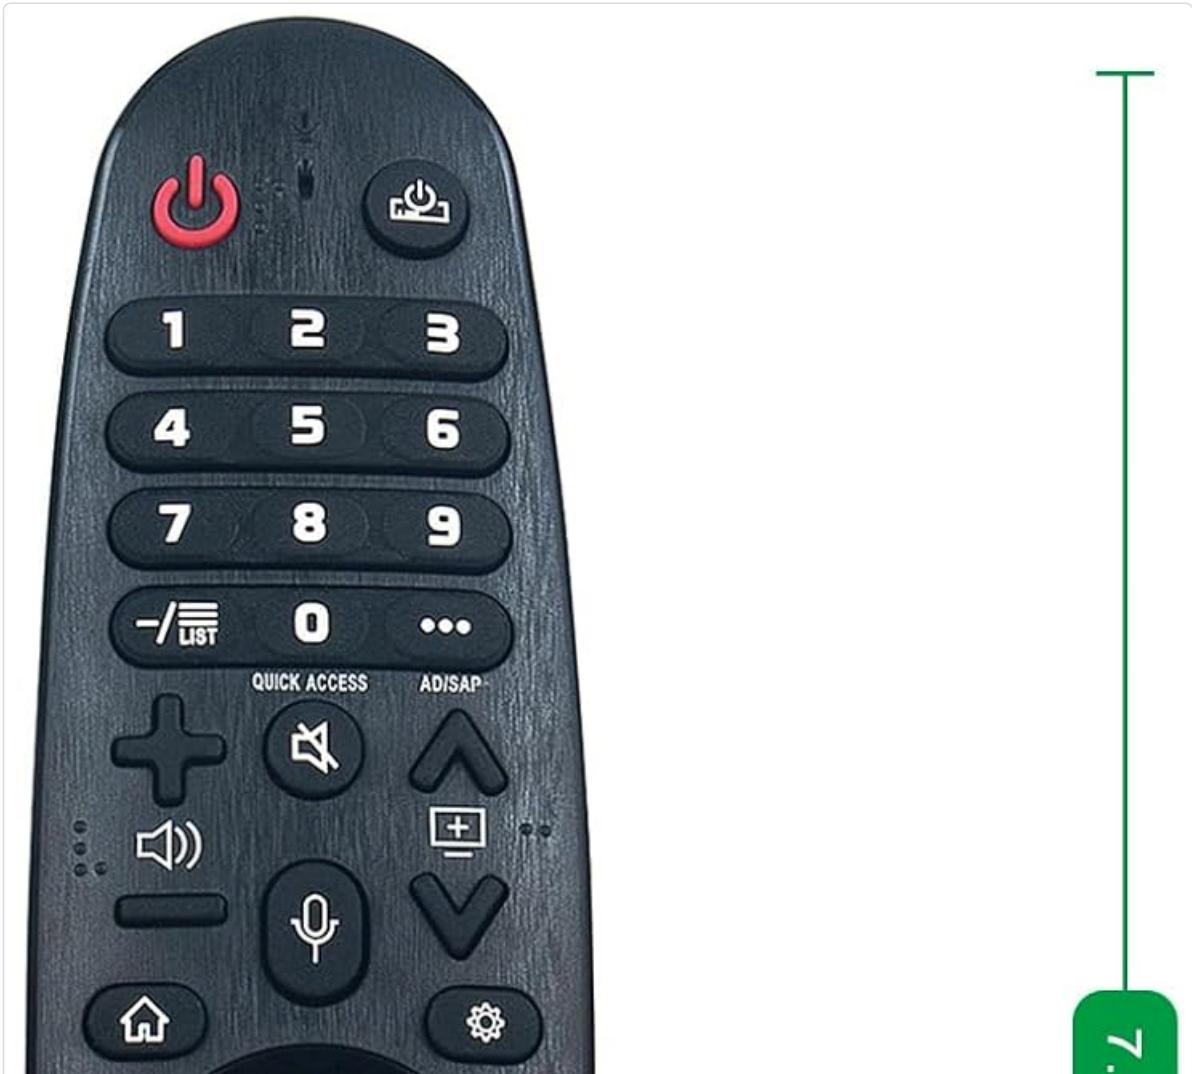




Figure 2: ECONTROLLY MR20GA Magic Remote Control with an arrow pointing to the voice command button. This highlights the microphone button, indicating its function for voice input.

SPECIFICATIONS

| Attribute          | Detail                                                                                                                                                                                                                           |
|--------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Model              | MR20GA                                                                                                                                                                                                                           |
| Brand              | ECONTROLLY                                                                                                                                                                                                                       |
| Compatible Devices | LG 4K UHD Smart TVs (W9, E9, C9, B9, SM81, UN85, UN81, ZX, WX, GX, CX, BX, NANO80, SM99, SM95, NANO95, NANO91, NANO90, NANO99, UN73, UN71, UM80, NANO97, NANO86, NANO81, SM90, SM86, UN80 UN74, UM75, UM73, UM71, UM6970 series) |
| Special Feature    | Voice Search                                                                                                                                                                                                                     |
| Power Source       | 2 x AA ALKALINE batteries (not included)                                                                                                                                                                                         |
| Dimensions         | 7.34 x 2 x 0.56 inches                                                                                                                                                                                                           |
| Weight             | 1.76 ounces                                                                                                                                                                                                                      |



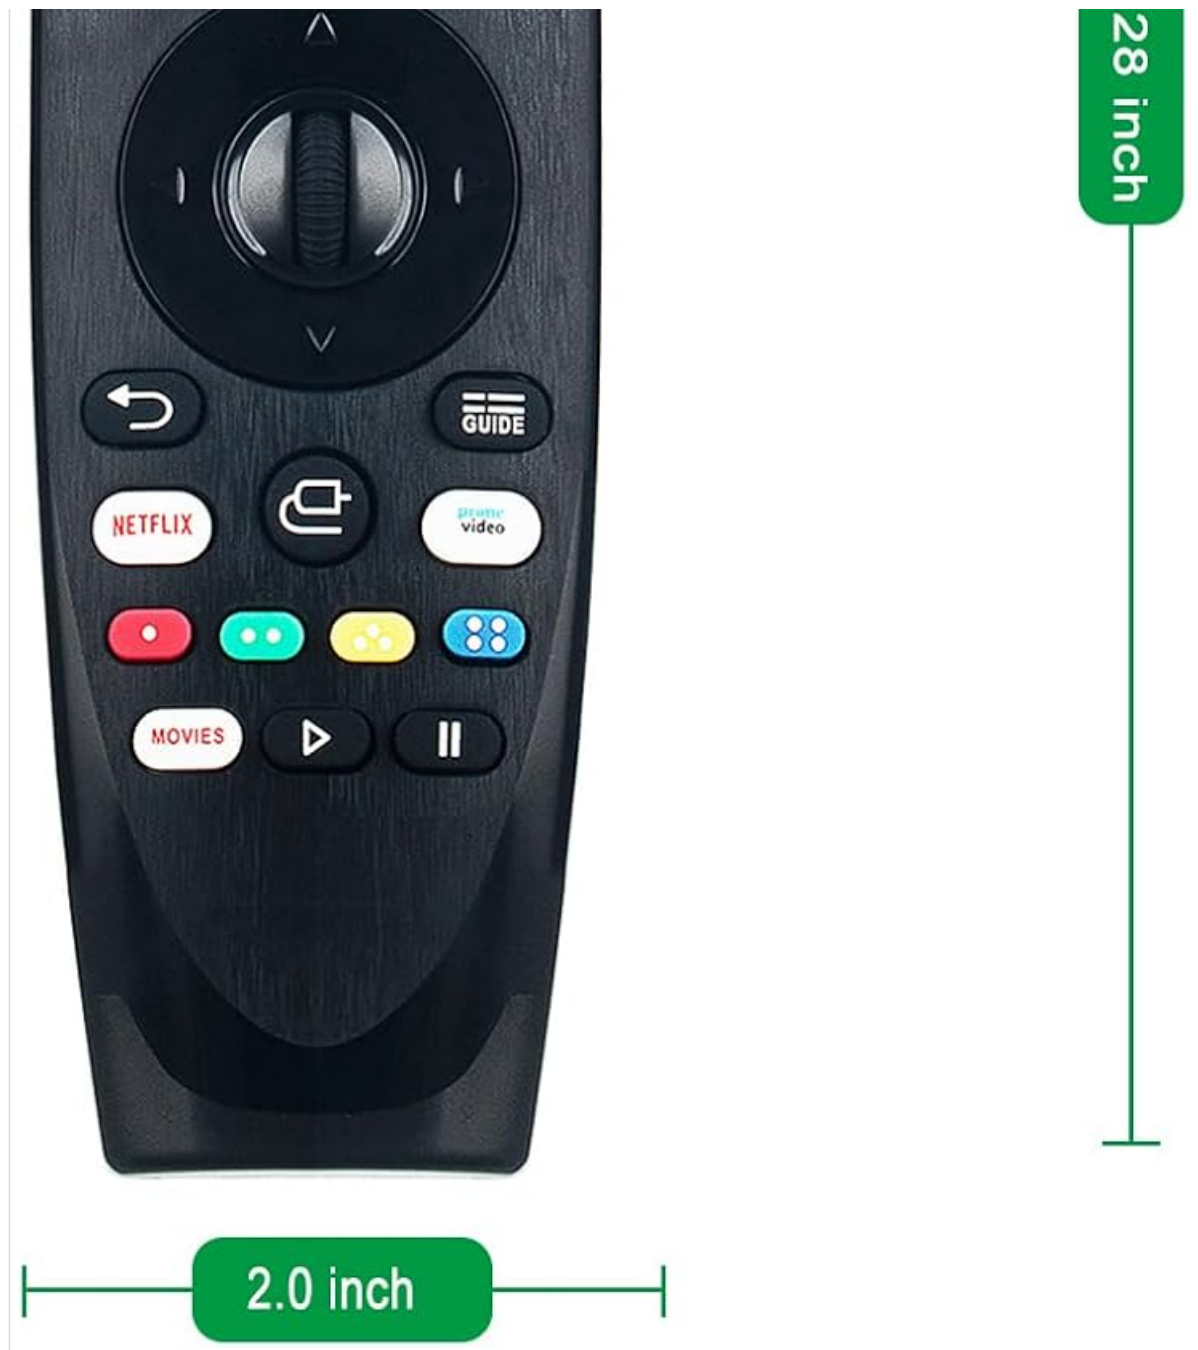


**Figure 3:** ECONTROLLY MR20GA Magic Remote Control displaying its physical dimensions. The image shows the remote's length as 7.28 inches and width as 2.0 inches.

## SETUP INSTRUCTIONS

### 1. Battery Installation

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards or press the latch to open it.
3. Insert two (2) AA ALKALINE batteries, ensuring correct polarity (+ and -) as indicated inside the compartment.
4. Close the battery compartment cover securely.

**Important:** Do not use rechargeable batteries. Only use AA ALKALINE batteries.

### 2. Pairing the Remote Control with Your TV

The MR20GA Magic Remote requires pairing with your LG Smart TV before use to enable full functionality, including voice control and pointer features.

1. Ensure your LG Smart TV is powered on.
2. Point the remote control towards your TV.
3. Press the **Wheel (OK)** button (the center button of the navigation wheel) on the remote control.
4. A message indicating successful pairing should appear on your TV screen. If pairing fails, try pressing the **Back** button and the **Home** button simultaneously for 5 seconds to unpair, then repeat step 3.

Once paired, the remote's pointer should appear on the TV screen, and voice control will be active.

## OPERATING INSTRUCTIONS

### Basic Functions

- **Power Button** (⏻): Turns the TV on or off.
- **Number Buttons (0-9)**: Directly input channel numbers or other numerical data.
- **Volume Up/Down** (⏮): Adjusts the TV volume.
- **Channel Up/Down** (⏮): Changes TV channels.
- **Mute Button** (🔇): Mutes or unmutes the TV audio.
- **Home Button** (🏠): Accesses the TV's Home screen or Smart Hub.
- **Back Button** (⏮): Returns to the previous screen or menu.
- **Navigation Wheel (OK)**: Used to scroll through menus and confirm selections.

### Voice Control

To use the voice control feature:

1. Press and hold the **Microphone Button** (🎤) located below the navigation wheel.
2. Speak clearly into the remote control.
3. Release the button when you have finished speaking.

*Examples of voice commands:* "Open Netflix," "Search for action movies," "Change to channel 5," "Volume up."

### Quick Access and Streaming Buttons

- **Quick Access**: Customizable shortcut button.
- **Netflix, Prime Video, Movies**: Dedicated buttons for direct access to these streaming services.

## MAINTENANCE AND CARE

- **Cleaning**: Wipe the remote control with a soft, dry cloth. Do not use liquid cleaners or abrasive materials.
- **Battery Replacement**: Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new AA ALKALINE batteries.
- **Storage**: Store the remote in a cool, dry place away from direct sunlight and extreme temperatures.
- **Avoid Drops**: Protect the remote from physical impact, as drops can damage internal components.

## TROUBLESHOOTING

| Problem | Possible Cause | Solution |
|---------|----------------|----------|
|---------|----------------|----------|

| Problem                         | Possible Cause                                                                                   | Solution                                                                                                                               |
|---------------------------------|--------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------|
| Remote not responding           | Dead or incorrectly inserted batteries.<br>Remote not paired. Obstruction between remote and TV. | Replace batteries with new AA ALKALINE batteries. Re-pair the remote (see Setup Instructions). Ensure a clear line of sight to the TV. |
| Voice control not working       | Remote not paired correctly. Microphone blocked. TV settings.                                    | Re-pair the remote. Ensure nothing is covering the microphone. Check TV's voice recognition settings.                                  |
| Pointer not appearing on screen | Remote not paired. Interference.                                                                 | Re-pair the remote. Move closer to the TV. Ensure no strong electromagnetic interference.                                              |

## WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation provided with your purchase or contact the seller directly. Keep your purchase receipt as proof of purchase.

For further assistance, you may visit the ECONTROLLY brand page on Amazon:[ECONTROLLY Store](#)

© 2024 ECONTROLLY. All rights reserved.

### ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

**Name**

Anonymous

**Email**

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

**Question**

Example: How do I reset this device or fix this error?

**Details**

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

---

Open the live page

<https://manuals.plus/asin/B0DP229XYL>

More documents and user manuals: <https://manuals.plus/>