

[Manuals.plus](#) /

> [cupsync](#) /

> cupsync 7-Quart Oval Ceramic Replacement Pot Instruction Manual for Crock-Pot SCV700 Series Slow Cookers

cupsync CP10XXCD

cupsync 7-Quart Oval Ceramic Replacement Pot Instruction Manual

Brand: cupsync | **Model:** CP10XXCD

1. INTRODUCTION

This manual provides essential information for the proper use and care of your cupsync 7-Quart Oval Ceramic Replacement Pot. Designed for compatibility with specific Crock-Pot 7-quart slow cooker models, this ceramic pot offers a durable and versatile solution for your slow cooking needs. Please read these instructions carefully before first use.



Image 1.1: The cupsync 7-Quart Oval Ceramic Replacement Pot. This image displays the black oval ceramic pot, highlighting its design and capacity.

2. COMPATIBILITY

This replacement pot is specifically designed for use with the following Crock-Pot 7-Quart Slow Cooker models:

- SCV700-S-BR
- SCV700-KC
- SCV700-B3-WM1-BR

Important: Verify your slow cooker model number to ensure proper fit and function. Using this pot with incompatible models may result in improper operation or damage.



Only Compatible with
Crockpot 7-Quart SCV700 Series Slow Cooker



SCV700-S-BR



SCV700-KC



SCV700-B3-WM1-BR

If your Brand & Model not mentioned here, DO NOT BUY IT !

Image 2.1: Visual guide to compatible Crock-Pot 7-Quart Slow Cooker models (SCV700-S-BR, SCV700-KC, SCV700-B3-WM1-BR).

This pot is NOT compatible with the following models:

- SCCPVL710-S
- CPSVCVC70LL-S
- CPSVCVC70LL
- CPSVCVC70LLEC



Do not purchase this pot replacement if your machine is below model

NOT Compatible with
Crock pot CPSCVC70LLEC



Image 2.2: Visual guide to incompatible Crock-Pot Slow Cooker models, showing examples that will not fit.

3. FEATURES

- **Durable Ceramic Construction:** Made from high-quality ceramic material for long-lasting performance.
- **7-Quart Capacity:** Ideal for preparing meals for families or entertaining guests.
- **Food-Safe Material:** Constructed with materials safe for food preparation.
- **Oven-Safe:** Can be safely transferred from the slow cooker base to the oven for additional cooking or browning.
- **Dishwasher-Safe:** Designed for easy cleanup.



7 Quart Slow Cooker Pot Replacement Compatible with Crock Pot Brand cookers



Image 3.1: Overview of key features including 7-quart capacity, dishwasher-safe, and food-safe properties.

4. SETUP

1. **Unpack:** Carefully remove the ceramic pot from its packaging.
2. **Inspect:** Check the pot for any signs of damage during transit. Do not use if cracked or chipped.
3. **Initial Cleaning:** Before first use, wash the ceramic pot with warm, soapy water, then rinse thoroughly and dry.
4. **Placement:** Gently place the clean ceramic pot into the heating base of your compatible Crock-Pot 7-Quart Slow Cooker. Ensure it sits securely and evenly.

5. OPERATING INSTRUCTIONS

5.1. Slow Cooking

1. Prepare your ingredients and place them into the ceramic pot.
2. Place the lid onto the ceramic pot.
3. Insert the ceramic pot with ingredients and lid into the slow cooker heating base.
4. Follow your slow cooker's specific instructions for setting temperature and cooking time.



Image 5.1: The ceramic pot filled with ingredients, ready for slow cooking, demonstrating its food-safe nature.

5.2. Oven Use

The ceramic pot is oven-safe. This allows for versatility in cooking, such as browning dishes after slow cooking or baking certain recipes directly in the pot.

- Ensure the pot is at room temperature before placing it in a preheated oven to prevent thermal shock.
- Always use oven mitts when handling the hot ceramic pot.
- Do not place the slow cooker heating base in the oven. Only the ceramic pot is oven-safe.



Image 5.2: The ceramic pot inside an oven, illustrating its oven-safe capability for browning or baking.

6. MAINTENANCE AND CLEANING

6.1. Cleaning

- **Dishwasher Safe:** The ceramic pot is dishwasher safe for convenient cleaning. Place it on the bottom rack for best results.
- **Hand Washing:** For hand washing, use warm, soapy water and a non-abrasive sponge or cloth. Rinse thoroughly and dry completely before storage.

- **Stubborn Food Residue:** For baked-on food, soak the pot in warm, soapy water for a period before cleaning. Avoid using harsh scouring pads or abrasive cleaners, which can damage the ceramic surface.



Image 6.1: The ceramic pot and its lid placed in a dishwasher, demonstrating its dishwasher-safe feature.

7. TROUBLESHOOTING

7.1. Pot Does Not Fit

- **Verify Model Number:** Double-check that your slow cooker model number matches one of the compatible models listed in Section 2.
- **Orientation:** Ensure the pot is correctly oriented within the heating base. Oval pots typically have a specific way they fit.
- **Obstructions:** Check for any debris or obstructions in the heating base that might prevent the pot from seating properly.

If the pot still does not fit, it is likely incompatible with your specific slow cooker model. Refer to the compatibility section for guidance.

8. SPECIFICATIONS

Attribute	Detail
Brand	cupsync
Model Number	CP10XXCD
Material	Ceramic
Color	Black
Capacity	7 Quarts
Product Dimensions	10"D x 10"W x 8"H
Item Weight	4 Pounds
Dishwasher Safe	Yes
Shape	Oval

9. WARRANTY AND SUPPORT

For warranty information or product support, please refer to the original documentation provided with your purchase or contact cupsync customer service directly. Contact details can typically be found on the product packaging or the manufacturer's official website.