

- Manuals.plus /
- > [ECONTROLLY](#) /
 - > ECONTROLLY MR24GA Voice Replace Remote Control User Manual for LG Smart TVs

ECONTROLLY MR24GA

ECONTROLLY MR24GA Voice Replace Remote Control User Manual

Model: MR24GA

INTRODUCTION

This manual provides comprehensive instructions for the ECONTROLLY MR24GA Voice Replace Remote Control. It is designed to be compatible with a range of LG Smart TV models, offering voice control functionality. Please read this manual carefully before using your new remote control to ensure proper setup and operation.

PRODUCT OVERVIEW

The ECONTROLLY MR24GA remote control features a standard layout with dedicated buttons for navigation, volume, channel control, and quick access to streaming services. It also includes a voice control button for enhanced interaction with your LG Smart TV.





Figure 1: Front view of the ECONTROLLY MR24GA Voice Replace Remote Control, showing all buttons including number pad, navigation, volume, channel, and dedicated streaming service buttons.



Figure 2: The ECONTROLLY MR24GA remote control, emphasizing the microphone button for voice commands.



Figure 3: Dimensions of the ECONTROLLY MR24GA remote control, measuring approximately 7.62 inches in length and 1.75 inches in width.



Figure 4: The ECONTROLLY MR24GA remote control being used to operate an LG Smart TV.

SETUP AND PAIRING

1. Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide open the battery cover.
3. Insert two (2) AA ALKALINE batteries, ensuring correct polarity (+/-).
4. Close the battery cover securely.
5. **Important:** Do not use rechargeable batteries. Only use AA ALKALINE batteries.

2. Pairing with Your LG Smart TV

The MR24GA remote control requires pairing with your LG Smart TV to enable full functionality, including voice control. Follow these steps to pair the remote:

1. Ensure your LG Smart TV is powered on.
2. Point the remote control towards your LG Smart TV.
3. Press and hold the **Home** button (usually depicted as a house icon) and the **Back** button (usually depicted as an arrow pointing left) simultaneously for approximately 5-10 seconds.
4. A pairing message should appear on your TV screen, indicating that the remote is being paired.
5. Once the pairing is successful, a confirmation message will be displayed.
6. If pairing fails, remove the batteries, wait 30 seconds, reinsert them, and repeat the pairing process.

OPERATING INSTRUCTIONS

Basic Functions

- **Power Button ():** Turns the TV on or off.
- **Number Buttons (0-9):** Directly input channel numbers.
- **Volume Up/Down:** Adjusts the TV volume.
- **Channel Up/Down:** Changes TV channels.
- **Navigation Pad (Up/Down/Left/Right/OK):** Navigates menus and selects items.
- **Home Button:** Accesses the TV's Smart Home dashboard.
- **Back Button:** Returns to the previous screen or menu.
- **Quick Access Buttons:** Dedicated buttons for streaming services like Netflix, Prime Video, Disney+, and others.

Voice Control Function

To use the voice control feature:

1. Press and hold the **Microphone Button** (usually depicted as a microphone icon) on the remote control.
2. Speak clearly into the remote's microphone.
3. Release the button when you have finished speaking.
4. Your TV will process the voice command. Examples include "Search for movies," "Open Netflix," or "Switch to HDMI 1."

MAINTENANCE

- Keep the remote control clean by wiping it with a soft, dry cloth.
- Avoid exposing the remote to extreme temperatures, direct sunlight, or moisture.
- If the remote will not be used for an extended period, remove the batteries to prevent leakage.
- Do not attempt to disassemble the remote control.

TROUBLESHOOTING

Remote Not Responding

- **Check Batteries:** Ensure batteries are correctly inserted and are not depleted. Replace with new AA ALKALINE batteries if necessary.
- **Line of Sight:** Ensure there are no obstructions between the remote and the TV's IR receiver.
- **Re-pair Remote:** If the remote was previously working but stopped, try re-pairing it with your TV as described in the "Setup and Pairing" section.

Voice Control Not Working

- **Pairing Status:** Voice control requires successful pairing. Confirm the remote is paired with your TV.
- **Microphone Button:** Ensure you are pressing and holding the microphone button while speaking.
- **Speak Clearly:** Speak clearly and at a normal volume.
- **TV Settings:** Check your LG Smart TV's settings to ensure voice recognition is enabled.

SPECIFICATIONS

Feature	Detail
Model	MR24GA
Brand	ECONTROLLY
Compatible Devices	LG Smart Televisions
Special Feature	Voice Search
Power Source	2 x AA ALKALINE Batteries (not included)
Product Dimensions	7.62 x 1.75 x 0.56 inches
Item Weight	1.76 ounces
Color	Black

COMPATIBLE LG SMART TV MODELS

The ECONTROLLY MR24GA Voice Replace Remote Control is compatible with the following LG Smart TV models:

- 65UT7550AUA
- 48OLEDC4AUA
- 65QNED90TAA

- 86UT7550AUA
- 83OLEDC4AUA
- OLED97G4WUA
- 43UT7590PUA
- 75QNED99TUA
- 65QNED85TAA
- OLED55G4SUB
- 86QNED90TAA
- OLED55B4AUA
- OLED83B4AUA
- 86QNED80TUC
- OLED65B4AUA
- 77OLEDC4AUA
- 55QNED85TAA
- 2OLEDC4AUA
- 55OLEDC4AUA
- 65OLEDC4AUA
- 43UT7550AUA
- 50UT7550AUA
- 55UT7550AUA
- 70UT7550AUA
- 75UT7550AUA
- 75QNED90TAA
- OLED48B4AUA
- OLED77B4AUA
- 43QNED80TUC
- 55QNED80TUC
- 65QNED80TUC
- 75QNED80TUC
- 50QNED80TUC
- OLED65G4SUB
- OLED77G4WUA
- OLED83G4WUA
- 86UT7590PUA
- 75UT7590PUA
- 86QNED99TUA
- 75QNED85TAA
- 75QNED85TAA.AUS
- 65QNED85TAA.AUS
- 55QNED85TAA.AUS
- 65QNED90TAA.AUS
- 75QNED90TAA.AUS
- 86QNED90TAA.AUS
- OLED42C4AUA.AUS

- OLED48C4AUA.AUS
- OLED55C4AUA.AUS
- OLED65C4AUA.AUS
- OLED77C4AUA.AUS
- OLED83C4AUA.AUS

WARRANTY AND SUPPORT

Specific warranty information for this product is not provided in this manual. For warranty details or technical support, please refer to the product packaging or contact the retailer where the product was purchased. You may also visit the ECONTROLLY official website for further assistance.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Details

Submit question

Open the live page

<https://manuals.plus/asin/B0DP22FB9L>

More documents and user manuals: <https://manuals.plus/>