

[Manuals.plus](#) /

› [BesLowe](#) /

› BesLowe 10.6in Motion Sensor Outdoor Wall Lights Instruction Manual

BesLowe 1030MR

BesLowe 10.6in Motion Sensor Outdoor Wall Lights Instruction Manual

Model: 1030MR

INTRODUCTION

Thank you for choosing BesLowe Motion Sensor Outdoor Wall Lights. This manual provides essential information for the safe installation, operation, and maintenance of your new lighting fixtures. Please read these instructions thoroughly before installation and retain them for future reference.

SAFETY INFORMATION

- Always turn off the power at the circuit breaker before beginning installation.
- Consult a qualified electrician if you are unsure about the installation process.
- Ensure all wiring connections are secure and comply with local electrical codes.
- Do not exceed the maximum wattage specified for the bulb (100W Max).
- Handle glass components with care to prevent breakage.

PACKAGE CONTENTS

- Motion Sensor Outdoor Wall Light(s)
- Mounting Hardware
- Instruction Manual

Note: Bulbs are not included and must be purchased separately.

PRODUCT OVERVIEW

The BesLowe Motion Sensor Outdoor Wall Light features a modern design with durable metal construction and sturdy clear glass. It incorporates an upgraded PIR motion sensor and a photocell sensor for intelligent operation. The fixture is designed for outdoor use and is hard-wired.



Image: Product dimensions and key components. The light measures 10.6 inches in height, 4.13 inches in width, and 5.9 inches in depth. It features an E26 bulb base (100W Max) and an upgraded PIR motion sensor.

INSTALLATION

This outdoor wall light is designed for easy installation and comes pre-assembled with all necessary mounting accessories. It is a hard-wired fixture.

Steps:

1. Turn off power at the main circuit breaker.
2. Attach the mounting bracket to the junction box using the provided screws.
3. Connect the electrical wires (live, neutral, ground) from the fixture to the corresponding wires in the junction box, securing them with wire nuts.
4. Carefully tuck the wires into the junction box and secure the light fixture to the mounting bracket.
5. Install an E26 base bulb (not included) into the socket. Dimmable LED or incandescent bulbs are recommended for optimal performance, especially for the Dual-bright mode.

6. Restore power at the circuit breaker.

OPERATING MODES

Your BesLowe outdoor wall light features three distinct lighting modes: Dual-bright, ON/OFF, and Manual Override. These modes can be easily switched with a single click on the integrated sensor button.

Your browser does not support the video tag.

Video: Demonstrates the features and operating modes of the BesLowe Motion Sensor Outdoor Lights, including mode switching and brightness adjustment.

1. Dual-bright Mode (Ideal for Security)

- **Daytime:** Light remains off.
- **Night (No Motion):** Light turns on at 40% brightness.
- **Night (Motion Detected):** Brightness increases to 100%.
- **Night (No Motion After Detection):** Light returns to 40% brightness after a set delay.

To adjust the 40% brightness level (between 15-50%) in Dual-bright mode, long-press the sensor button.



Image: Visual representation of the Dual-bright mode's behavior throughout the day and with motion detection.

2. ON/OFF Mode (Save Electricity Bill)

- **Daytime:** Light remains off.
- **Night (No Motion):** Light stays off.
- **Night (Motion Detected):** Light turns on at 100% brightness.
- **Night (No Motion After Detection):** Light automatically turns off after a set delay.



Image: Visual representation of the ON/OFF mode's behavior, emphasizing energy saving by only activating with motion at night.

3. Manual Override Mode (For Gatherings)

- To activate: Turn the wall switch connected to the light fixture 'on-off-on' within 2 seconds.
- The light will stay on at 100% brightness for 6-8 hours, regardless of motion.
- Automatically turns off at dawn and reverts to the previously selected Dual-bright or ON/OFF mode.

Manual Override Mode

Perfect for family reunions and outdoor parties



Stay on with 100% brightness for 8 hours



Automatically turn off at dawn and back to "Dual-bright" mode or "ON/OFF" mode



Turn the wall switch "on-off-on" within 2 secs to set this mode.

Image: The Manual Override mode provides continuous 100% brightness for 6-8 hours, suitable for outdoor events.

BULB REQUIREMENTS

This fixture is compatible with E26 base bulbs, up to a maximum of 100W. For optimal performance, especially when utilizing the Dual-bright mode, dimmable LED bulbs or incandescent bulbs are recommended.



Image: The light fixture supports E26 base bulbs up to 100W. Dimmable LED or incandescent bulbs are recommended for full functionality.

MAINTENANCE

The open-bottom design of the fixture allows for convenient bulb replacement and easy cleaning. To maintain the appearance and functionality of your light:

- Ensure power is off before cleaning or replacing bulbs.
- Wipe the metal and glass surfaces with a soft, damp cloth. Avoid abrasive cleaners.
- Regularly check for any loose connections or damage to the wiring.

The fixture is crafted from durable metal and sturdy glass, designed to withstand various weather conditions including sun, snow, rain, and ice, ensuring lasting durability and brightness.



Image: The light fixture is weather-resistant, built to endure various outdoor elements.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Light does not turn on at night.	Power off; faulty bulb; sensor obstruction; incorrect mode.	Check circuit breaker; replace bulb; clear sensor area; cycle through modes.
Light stays on constantly.	Manual Override mode active; sensor malfunction.	Cycle power to exit Manual Override; contact support if issue persists.
Motion sensor not detecting.	Sensor obstructed; incorrect mode; sensor range issue.	Clear obstructions; ensure correct mode; verify sensor placement.

SPECIFICATIONS

Feature	Detail
Brand	BesLowe
Model Number	1030MR
Color	Black
Material	Glass, Metal
Style	Modern
Light Fixture Form	Sconce
Indoor/Outdoor Usage	Outdoor
Power Source	Hard-wired
Special Features	Motion Sensor, Dusk to Dawn, 3 Lighting Modes
Voltage	120 Volts
Bulb Base	E26 (100W Max)
Mounting Type	Wall Mount
Item Dimensions (L x W x H)	4.53"L x 4.13"W x 10.6"H
Item Weight	2.22 Kilograms
Number of Items	2

WARRANTY & SUPPORT

This product comes with a 12-month manufacturer's warranty. For warranty claims, technical support, or any questions regarding your BesLowe Motion Sensor Outdoor Wall Lights, please contact the manufacturer directly through their official channels or the retailer where the product was purchased.

Please have your model number (1030MR) and purchase information ready when contacting support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0DP2441X3>

More documents and user manuals: <https://manuals.plus/>