

[Manuals.plus](#) /

› [RETLLAS](#) /

› RETLLAS 5.8 CuFt Heavy Duty Home Safe Box Model 70G Instruction Manual

RETLLAS 70G

RETLLAS 5.8 CuFt Heavy Duty Home Safe Box Model 70G Instruction Manual

Model: 70G | Brand: RETLLAS

1. IMPORTANT SAFETY INFORMATION

Please read this manual carefully before operating your safe box. Keep this manual for future reference.

- Do not store emergency keys inside the safe.
- Keep the safe box away from moisture and direct sunlight.
- Ensure the safe is securely mounted to prevent unauthorized removal.
- Replace batteries promptly when the low battery indicator appears.

2. PACKAGE CONTENTS

Verify that all components are present in the package:

- 1 x RETLLAS Safe Box
- 1 x English Instruction Manual
- 2 x Emergency Keys
- 4 x Foot Pads
- 4 x Plastic Mounting Screws
- 4 x Expansion Bolts (for anchoring)

FIREPROOF DESIGN WATERPROOF PROTECTION BUILT TO LAST



Image: Overview of the safe box and its included accessories, such as keys, mounting hardware, and the instruction manual.

3. PRODUCT FEATURES

- **Robust Construction:** Made from solid alloy steel with four 30mm locking bolts.
- **Dual Access Methods:** Electronic keypad with digital code or emergency key access.
- **Advanced Security:** Low battery indicator, interior sensor light, LCD display, and vibration alarm.
- **Customizable Interior:** Removable shelf for flexible storage.
- **User-Friendly Design:** Ring keypad and hidden password feature for secure entry.



Image: The RETLLAS safe box highlighting its robust construction and security features.

4. SETUP INSTRUCTIONS

4.1 Initial Opening and Battery Installation

1. Locate the emergency keyhole, usually hidden behind the keypad cover or a small plate.
2. Insert one of the emergency keys and turn it to unlock the safe.
3. Open the safe door.
4. Inside the door, locate the battery compartment. Insert 4 AA batteries (not included) according to the polarity markings.
5. Close the battery compartment.

4.2 Setting Your Passcode

The safe supports both a User Code and a Master Code. Both can be 1 to 6 digits long.

Set Your Passcode

1. Set User Code

- ① With the door unlocked, press the reset button, LCD screen will show "....." with a beep sound;
- ② Enter the new user passcode (1 to 6 digits) and press "LOCK" to confirm. It will be confirmed when the LCD screen showing "IN"

2. Set Master Code

- ① With the door unlocked, press "0" twice and press the reset button, LCD screen will show "-----" with a beep sound;
- ② Enter the new master passcode (1 to 6 digits) and press "LOCK" to confirm. It will be confirmed when the LCD screen showing "IN"

Dual Alarm System

1. **Wrong Code Alarm:** Input wrong code 3 times, it will beep for 20 seconds and the keypad will be locked for 3 minutes.

(You can use key to open the door to stop the alarm)

2. **Vibration Alarm:** When screen is off, press "CLEAR" button, if someone pry or thrill the safe, the LCD screen will show "ALERT" and beep for 20 seconds.

(You can use key to open the door or input the right code to stop the alarm)

Image: Detailed steps for setting the user and master passcodes using the digital keypad.

To Set User Code:

1. With the door unlocked, press the reset button (usually a small red button inside the door). The LCD screen will display "-----" with a beep sound.
2. Enter your new user passcode (1 to 6 digits) and press "LOCK" to confirm. The LCD screen will show "IN" upon successful confirmation.

To Set Master Code:

1. With the door unlocked, press "0" twice and then press the reset button. The LCD screen will display "-----" with a beep sound.
2. Enter your new master passcode (1 to 6 digits) and press "LOCK" to confirm. The LCD screen will show "IN" upon successful confirmation.

Note: The master code can always open the safe, even if the user code is changed or forgotten. Keep it secure.

4.3 Mounting the Safe Box

For enhanced security, it is recommended to anchor the safe box to a floor or wall.

1. Choose a suitable location, ensuring a solid surface for mounting.
2. Open the safe door and locate the pre-drilled mounting holes on the back or bottom of the safe.

3. Mark the drilling points on the wall or floor through the holes.
4. Drill pilot holes using an appropriate drill bit for your chosen surface.
5. Align the safe with the drilled holes and secure it using the provided expansion bolts.
6. Ensure the safe is firmly attached and stable.



Image: The safe box shown securely anchored to a wall, illustrating the "Anchor Ready" feature for added protection.

Leveling Feet:

If placing the safe on an uneven surface, adjust the leveling feet located at the bottom of the safe to ensure stability.

70cm/27.6"

35cm/13.8"

40cm/15.8"

DETAILED DIMENSIONS

FIND THE PERFECT FIT FOR YOUR VALUABLES WITH OUR DETAILED SIZE GUIDE.

63_{LB}

1 X English instruction manual	4 X Foot pad
4 X Plastic mounting screws	2 X Key

Image: A close-up view of the safe's leveling feet, designed to adjust for uneven surfaces and maintain stability.

5. OPERATING INSTRUCTIONS

5.1 Opening the Safe

Using the Digital Keypad:

1. Enter your User Code or Master Code on the keypad.
2. Press "LOCK" to confirm. The LCD will display "OPEN" if the code is correct.
3. Within 5 seconds, turn the handle clockwise to open the door.

Using the Emergency Key:

1. Remove the keypad cover to reveal the emergency keyhole.
2. Insert the emergency key and turn it counter-clockwise.
3. Turn the handle clockwise to open the door.

DIMENSION

63_{LB}

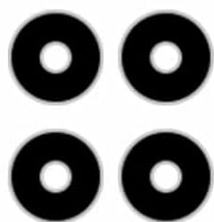 


Image: Illustration of the dual lock system, offering both digital keypad and traditional key access for opening the safe.

5.2 Closing and Locking the Safe

1. Close the safe door firmly.
2. Turn the handle counter-clockwise until the door is securely latched. The safe will automatically lock.

5.3 Interior Sensor Light

The safe is equipped with an interior sensor light that illuminates when the door is opened, providing visibility in low-light conditions.

LCD DISPLAY

ENJOY CLEAR VISIBILITY AND SECURE PASSWORD ENTRY WITH OUR HIDDEN PASSWORD FEATURE.



Image: The interior of the safe box, showing the sensor light activated to illuminate stored items.

5.4 Removable Shelf

The safe includes a removable shelf to customize the interior storage space. To adjust or remove the shelf, simply lift it and slide it out from its supports. Reinsert by aligning it with the desired supports.

VIBRATION ALARM

STAY ALERT WITH IMMEDIATE NOTIFICATIONS IF YOUR SAFE IS TAMPERED WITH.



Image: The safe's interior demonstrating the removable shelf feature, allowing for flexible organization of valuables.

6. SECURITY FEATURES

6.1 Dual Alarm System

Wrong Code Alarm:

If an incorrect code is entered 3 consecutive times, the safe will emit an audible alarm for 20 seconds, and the keypad will be locked for 3 minutes. To stop the alarm, use the emergency key to open the door or wait for the lockout period to expire.

Vibration Alarm:

If the safe detects significant vibration or tampering, an alarm will sound for 20 seconds, and the LCD screen will display "ALERT". To stop the alarm, press "CLEAR" on the keypad, use the emergency key to open the door, or enter the correct code.

 
DUAL LOCK SYSTEM



+



KEY + DIAL

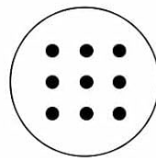

+



KEYPAD + DIAL

Image: The safe box with a visual representation of the vibration alarm being triggered, indicating a tampering attempt.

6.2 Hidden Password Feature (Privacy Protection)

The keypad features a hidden password input system. When entering your code, the numbers may not be immediately visible on the LCD, enhancing privacy and preventing others from seeing your entry.



Image: A detailed view of the safe's keypad and LCD screen, demonstrating the privacy protection feature where the password input is hidden.

7. MAINTENANCE

- **Cleaning:** Wipe the safe's exterior with a soft, damp cloth. Avoid abrasive cleaners.
- **Battery Replacement:** When the low battery indicator (red flashing light on LCD) appears, replace all 4 AA batteries promptly. Use the emergency key to open the safe if batteries are completely drained.
- **Key Storage:** Store emergency keys in a secure location away from the safe.

DIMENSION

63^{LB}

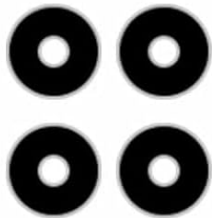 


Image: The safe's keypad displaying a low battery indicator (red flashing light), signaling the need for battery replacement.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Safe does not open with code.	Incorrect code entered; batteries are low or dead.	Re-enter the correct code. Replace batteries. Use emergency key.
Keypad is unresponsive.	Batteries are dead; keypad is locked due to multiple incorrect entries.	Replace batteries. Wait 3 minutes for lockout to clear, or use emergency key.
Alarm sounds unexpectedly.	Safe was tampered with (vibration alarm); incorrect code entered multiple times.	Press "CLEAR" or enter correct code to silence. Use emergency key if locked out.
LCD screen is blank.	Batteries are dead or incorrectly installed.	Check battery installation and replace if necessary.

9. SPECIFICATIONS

Feature	Detail
Brand	RETLLAS
Model Number	70G
Product Dimensions (D x W x H)	13.8" x 15.8" x 27.6" (35cm x 40cm x 70cm)
Capacity	5.8 Cubic Feet
Lock Type	Electronic Combination Lock, Key
Material	Alloy Steel
Color	Black
Item Weight	63 Pounds
Mounting Type	Floor Mount (Anchor Ready)
Special Features	Alarm System, Anti-Theft, Removable Shelf, Sensor Light, LCD Display

LCD DISPLAY

ENJOY CLEAR VISIBILITY AND SECURE PASSWORD ENTRY WITH OUR HIDDEN PASSWORD FEATURE.



Image: Visual representation of the safe box dimensions (27.6"H x 13.8"D x 15.8"W) and its weight (63 lbs).

10. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided with your purchase documentation or visit the official RETLLAS website. Keep your purchase receipt as proof of purchase.

© 2026 RETLLAS. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question