

Mini 3D Hologram Cube Display

GeekMagic Mini 3D Hologram Cube Display User Manual

Smart Weather Station & Digital Clock

INTRODUCTION

The GeekMagic Mini 3D Hologram Cube Display is a versatile desktop device that combines a digital clock, smart weather station, and customizable display. It features a unique transparent design and WiFi connectivity to provide real-time weather information, time, date, and indoor temperature. This manual provides essential information for setting up, operating, and maintaining your device.

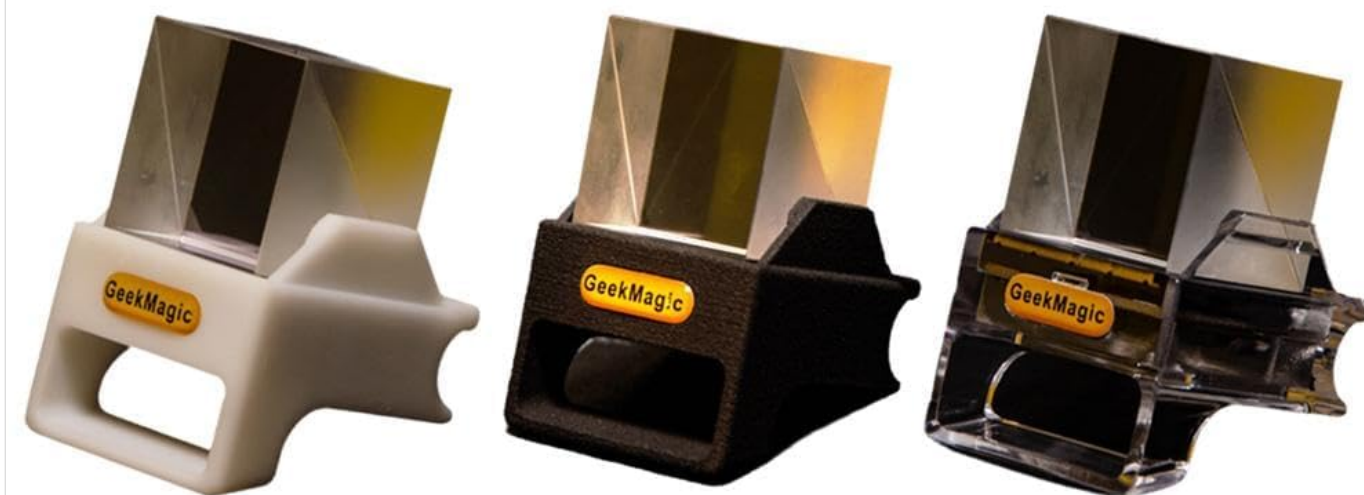 


Image: The GeekMagic Mini 3D Hologram Cube Display, showcasing its transparent, black, and white color options, presented in a lifestyle setting with individuals exchanging gifts.

PRODUCT OVERVIEW

The device is compact and designed for desktop use. It features a transparent casing (for the transparent model) allowing visibility of internal components, enhancing its aesthetic appeal. Key functions include time display, date display, indoor temperature monitoring, and real-time weather updates via WiFi.

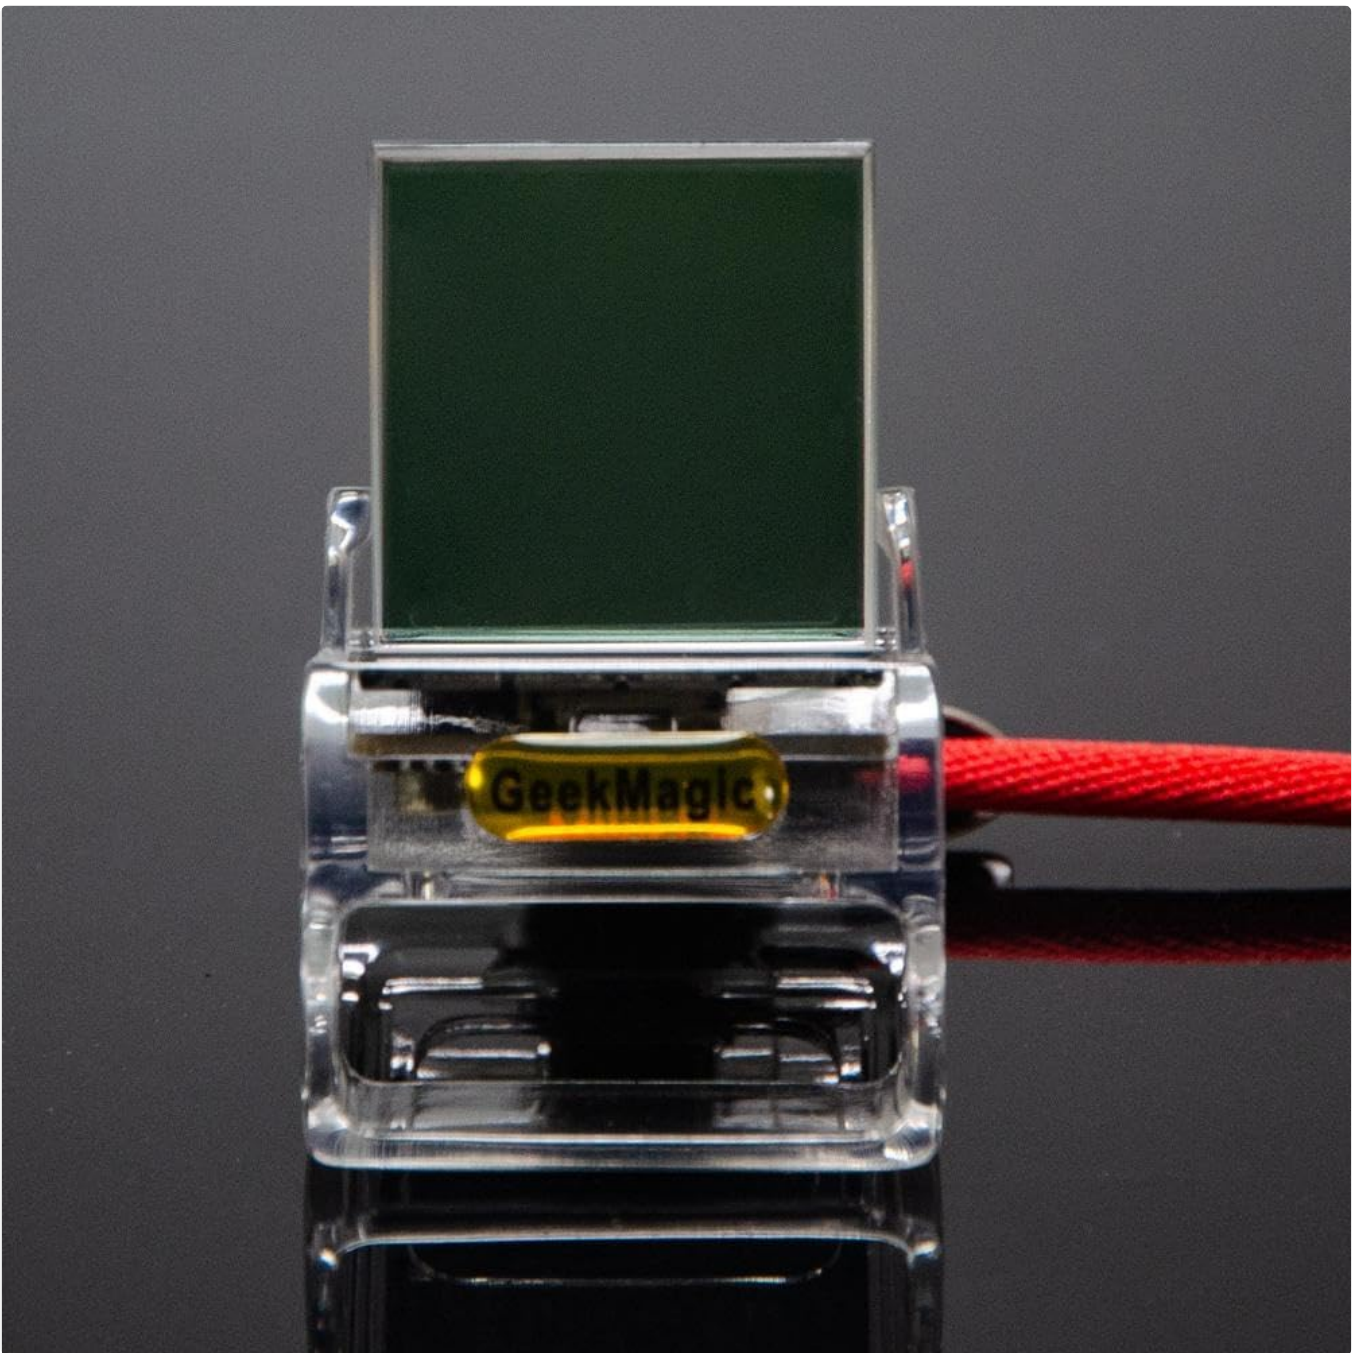 


Image: Front view of the transparent model, highlighting its display screen and "GeekMagic" branding.



Image: Front view of the black model, showing its textured finish and "GeekMagic" branding.

SETUP

1. **Unboxing:** Carefully remove the device from its packaging. Ensure all components are present: the GeekMagic Mini 3D Hologram Cube Display unit and its power cable.
2. **Power Connection:** Connect the provided power cable to the device's power input port. Plug the other end into a standard electrical outlet. The device should power on automatically.
3. **Initial Boot-up:** Allow a few moments for the device to boot up. The display will typically show a welcome screen or a prompt for WiFi setup.
4. **WiFi Configuration:**
 - Follow the on-screen instructions to connect to your local WiFi network. This usually involves selecting your network name (SSID) and entering the password using the device's controls (if any) or a companion mobile application (if applicable, check product packaging for app details).
 - A stable WiFi connection is crucial for real-time weather updates and accurate time synchronization.

5. **Placement:** Place the device on a stable, flat surface indoors, away from direct sunlight or extreme temperatures to ensure accurate temperature readings and optimal display visibility.

OPERATING INSTRUCTIONS

Once set up, the GeekMagic Mini 3D Hologram Cube Display operates largely automatically, displaying relevant information. Specific functions are detailed below:

- **Time Display:** The device automatically synchronizes with network time via WiFi, ensuring accurate time display.
- **Date Display:** The current date is displayed alongside the time.
- **Weather Information:** Real-time weather data, including temperature and conditions, is retrieved via WiFi. Ensure your location settings are correctly configured (if prompted during setup or via app) for accurate local weather.
- **Indoor Temperature:** The device features an internal sensor to display the current indoor temperature.
- **Customizable Display (Photo Album/GIF Animation):** The device supports customizable content such as photo albums or GIF animations. Refer to the specific instructions provided with your product or via the companion mobile application for details on uploading and managing custom content. This feature allows for personalization of your display.

MAINTENANCE

Proper maintenance ensures the longevity and optimal performance of your GeekMagic Mini 3D Hologram Cube Display.

- **Cleaning:** Use a soft, dry, lint-free cloth to gently wipe the display screen and the device's exterior. Avoid using abrasive cleaners, solvents, or aerosol sprays, as these can damage the plastic material and display.
- **Dust Removal:** Regularly dust the device to prevent accumulation, especially around vents or openings, to ensure proper airflow if applicable.
- **Environmental Conditions:** Keep the device in a dry environment. Avoid exposure to excessive humidity, direct water, or extreme temperatures.
- **Power Off:** If storing the device for an extended period, disconnect it from the power source.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Device does not power on.	No power supply; faulty cable.	Ensure the power cable is securely connected to both the device and the power outlet. Try a different outlet.
No weather information or incorrect time.	No WiFi connection; incorrect location settings.	Check WiFi connection status. Reconfigure WiFi if necessary. Verify location settings in the device's settings or companion app. Ensure your router is functioning correctly.
Display is dim or unreadable.	Ambient light too bright; display settings.	Move the device away from direct bright light. Check if there are brightness settings that can be adjusted (refer to product-specific controls or app).
Custom content (photos/GIFs) not displaying.	Incorrect file format; upload error; storage full.	Ensure content is in the supported format and resolution. Re-attempt upload. Check available storage on the device if applicable. Consult the companion app for specific content management instructions.

SPECIFICATIONS

- **Product Name:** GeekMagic Mini 3D Hologram Cube Display
- **Model:** Mini 3D Hologram Cube Display (Transparent variant: B0DP289TFY)
- **Product Size:** Approximately 3.5 x 3.1 x 3.8 cm (1.4 x 1.2 x 1.5 inches)
- **Material:** Plastic
- **Color:** Transparent (other variants available: Black, White)
- **Display Type:** Digital
- **Connectivity:** WiFi
- **Usage:** Indoor
- **Operation Mode:** Manual (for initial setup/configuration)
- **Mounting Type:** Tabletop
- **Power Source:** Wired (No batteries included for operation)
- **Country of Origin:** China
- **First Available:** November 26, 2024

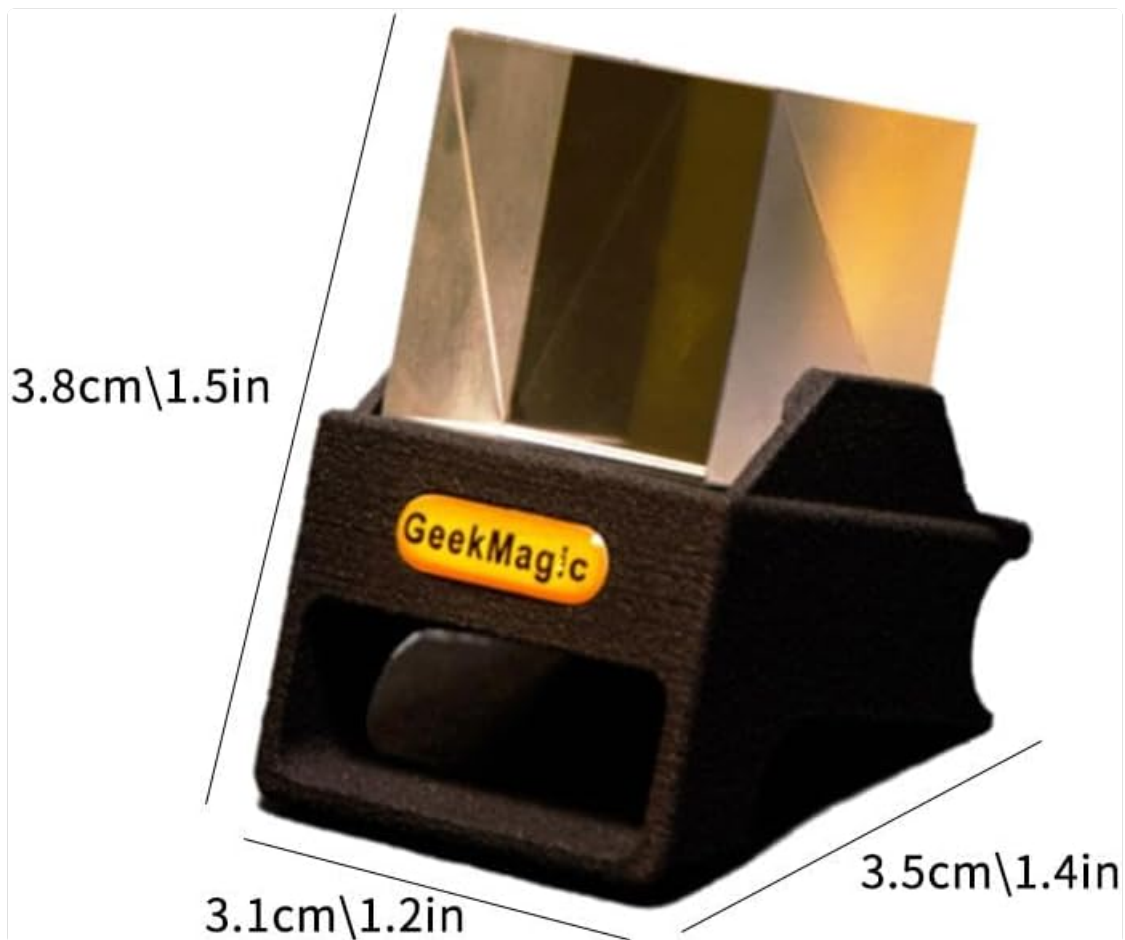 


Image: Dimensional diagram of the device, illustrating its compact size.

WARRANTY INFORMATION

This product is typically covered by a standard manufacturer's warranty against defects in materials and workmanship. The specific duration and terms of the warranty may vary. Please retain your proof of purchase for warranty claims. For detailed warranty information, refer to the documentation included with your product or contact the seller directly.

Note: Warranty terms are subject to the policies of the seller and manufacturer.

CUSTOMER SUPPORT

If you encounter any issues or have questions regarding your GeekMagic Mini 3D Hologram Cube Display that are not covered in this manual, please contact the seller or manufacturer for assistance. When contacting support, please have your product model and purchase information ready.

For general inquiries or to report a problem, you may refer to the contact information provided on the product packaging or the online retailer's support page where the product was purchased.

© 2024 GeekMagic. All rights reserved.

This manual is for informational purposes only and may be updated without notice.