

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Thomson](#) /

› [THOMSON 8-inch Digital Photo Frame User Manual \(TRDF-8001C\)](#)

Thomson TRDF-8001C

THOMSON 8-inch Digital Photo Frame User Manual

Model: TRDF-8001C

IPS HD 1280x800 Screen, Remote Control, Photo, Music, and Video Playback

1. INTRODUCTION

This manual provides detailed instructions for the setup, operation, and maintenance of your THOMSON 8-inch Digital Photo Frame (Model: TRDF-8001C). Please read this manual thoroughly before using the device to ensure proper functionality and to maximize your enjoyment of its features. This digital photo frame is designed to display your cherished photos and videos with an 8-inch IPS HD screen, offering a clear and vibrant viewing experience.

2. WHAT'S IN THE BOX

Upon unpacking, please ensure all items listed below are present and in good condition:

- THOMSON 8-inch Digital Photo Frame
- Remote Control
- Power Adapter
- Photo Frame Stand
- User Manual



Figure 3.1: Rear view of the frame with power input and physical controls.

3.3 Installing the Stand

The digital photo frame can be placed on a flat surface using the included stand. Insert the stand into the designated slot on the back of the frame. The frame also supports wall mounting using the integrated mounting holes.

4. OPERATING INSTRUCTIONS

4.1 Display Features

- **8-inch IPS HD Screen:** Enjoy clear and vibrant images with a 1280x800 resolution from various viewing angles.
- **Automatic Rotation:** The built-in gravity sensor automatically adjusts the photo orientation (landscape or portrait) for optimal viewing.

Scree IPS da 8 pollici

1280 x 800

Risoluzione a alta definizione

16: 10

Schermo in rapporto aureo

IPS extra-a livello extra

Amplio angolo di visione



Figure 4.1: The 8-inch IPS HD screen provides a high-quality display for your memories.

4.2 Media Playback

The frame supports playback of photos, music, and videos. You can navigate through your media using the remote control or the physical buttons.

- **Photo Slideshow:** Configure slideshow intervals and transition effects in the settings.
- **Music Playback:** Play background music while viewing photos.
- **Video Playback:** Enjoy your favorite video clips directly on the frame.

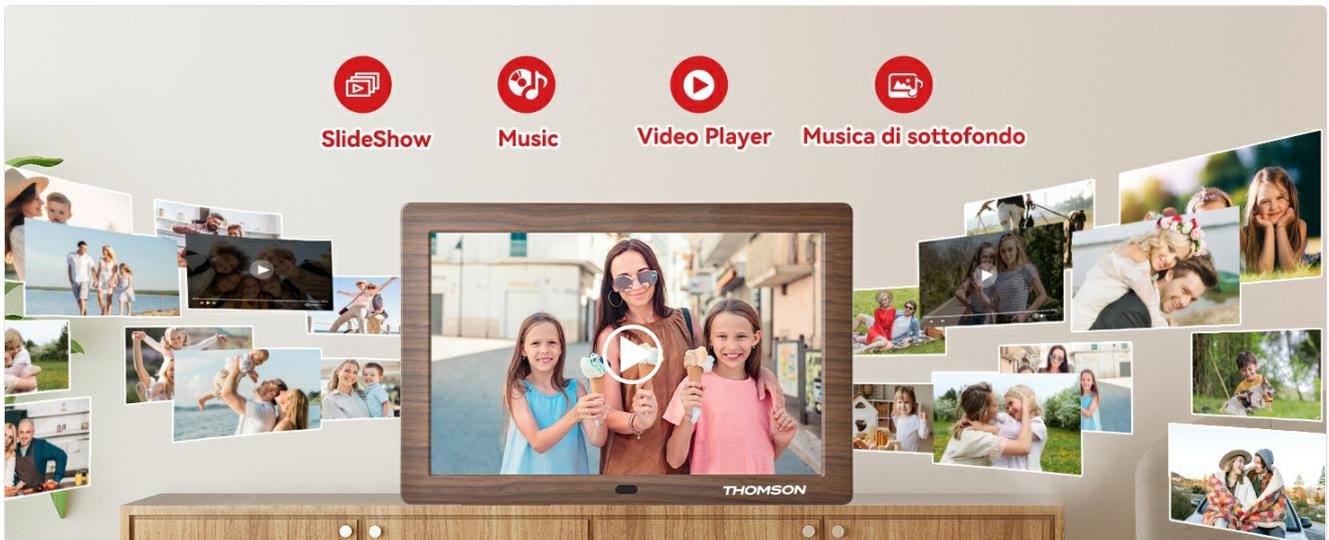


Figure 4.2: User interface for media selection and playback options.

4.3 Remote Control and Physical Buttons

Control your digital photo frame conveniently using the included remote control or the physical buttons located on the back of the frame.

- **Remote Control Functions:** Power on/off, adjust volume, navigate images, control background music, and access menus.
- **Physical Buttons:** Provide direct control for essential functions, useful for elderly users.

I pulsanti fisici offrono un'operazione più lineare.



Figure 4.3: Remote control for convenient operation of the frame.

4.4 Expansion Modes

The frame supports various expansion options for storing your media:

- **SD/SDHC/MMC Card:** Expand storage up to 32 GB.
- **USB-A/Type-C/U-disk:** Connect USB drives for additional media.
- **Note:** This frame does not have built-in storage. An external memory card or USB drive is required for media storage.



Figure 4.4: Memory expansion slots on the back of the frame.

4.5 Automatic Power On/Off

You can set a customized automatic start and stop time for the frame to conserve energy and manage display times.

È comodo operare utilizzando un telecomando per il controllo a distanza.



Figure 4.5: Setting automatic power on/off times for convenience.

5. MAINTENANCE

- **Cleaning the Screen:** Use a soft, dry, lint-free cloth to gently wipe the screen. For stubborn marks, slightly dampen the cloth with water or a screen-cleaning solution. Avoid harsh chemicals.
- **Cleaning the Frame:** Wipe the frame with a soft, dry cloth.
- **Storage:** When not in use for extended periods, disconnect the power adapter and store the frame in a cool, dry place away from direct sunlight.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Frame does not power on.	Power adapter not connected or faulty.	Ensure the power adapter is securely connected to the frame and a working power outlet. Try a different outlet.
No images/videos displayed.	No memory card/USB drive inserted or media files are corrupted/unsupported.	Insert a memory card or USB drive with supported media files. Check file formats (JPEG for photos, MP4 for videos). Ensure the memory card/USB drive is properly inserted.
Remote control not working.	Low battery or obstruction.	Replace the remote control battery. Ensure there are no obstructions between the remote and the frame's IR receiver.
Images are distorted or incorrect orientation.	Incorrect display settings or disabled auto-rotation.	Check display settings in the menu. Ensure the auto-rotation feature is enabled if desired.

7. SPECIFICATIONS

- **Model Number:** TRDF-8001C
- **Screen Size:** 8 Inches
- **Resolution:** 1280x800 (WXGA)
- **Aspect Ratio:** 16:10
- **Display Technology:** IPS HD

- **Connectivity:** DC-4.0, USB-A, Type-C, SD Card, 3.5MM earphone jack
- **Memory Expansion:** SD/SDHC/MMC card up to 32GB, U-disk
- **Power Source:** Corded Electric
- **User Interface Input:** Buttons, Remote Control
- **Frame Material:** Plastic
- **Product Dimensions:** 24.4 x 18 x 2.51 cm
- **Product Weight:** 240 grams

8. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation included in your product packaging or visit the official Thomson website. Keep your purchase receipt as proof of purchase for any warranty claims.