

Manuals.plus /

- › Oxawo /
- › Oxawo Interactive Cat Toy Instruction Manual

Oxawo LP43



Oxawo Interactive Cat Toy Instruction Manual

Model: LP43

INTRODUCTION

Thank you for purchasing the Oxawo Interactive Cat Toy. This device is designed to engage your cat's natural hunting instincts through a hide-and-seek game with a concealed feather wand, motion activation, and realistic chirping sounds. Please read this manual carefully to ensure proper setup, operation, and maintenance of your new interactive cat toy.



The Oxawo Interactive Cat Toy, featuring a blue mat with white stars, a central light-up unit, and a hidden feather wand, designed to stimulate play in cats.

SETUP GUIDE

Before first use, please follow these steps to set up your Oxawo Interactive Cat Toy:

1. **Charge the Device:** The toy comes with a Type-C charging cable. Connect the cable to the charging port, which is located under the power button. Charge the device for approximately 2 hours before its initial use.

HOW TO USE IT?



1

**Charge before use
Charging 2 hours**

2

**Install the feather
replacement stick**



3

**Press the button to
power it on**



Image illustrating the three setup steps: 1. Charging the device via USB-C, 2. Installing the feather replacement stick, and 3. Pressing the power button to turn it on.

2. **Install the Feather Wand:** Insert the feather replacement stick into its designated slot within the toy's mechanism. Ensure it is securely in place.
3. **Power On:** Press the power button located on the central unit to turn on the toy.

A detailed guide book is included in the product box for further reference.

OPERATING INSTRUCTIONS

The Oxawo Interactive Cat Toy offers multiple modes and features to keep your cat engaged:

- **Working Modes:** The toy features three distinct working modes:
 - **Normal Mode:** Standard feather movement.
 - **Active Mode:** More vigorous feather movement.
 - **Interactive Mode:** Dynamic and varied feather movement.

You can easily switch between these modes by short pressing the power button. The mode is indicated by

different LED light colors. Choose the mode that best suits your cat's energy level and play style.



Illustration of the three operation modes: Normal (blue light), Active (pink light), and Interactive (yellow light), adapting to different cat play styles.

- **Motion Activation and Standby:** The toy is designed to work for 5 minutes and then enter a standby mode to conserve energy. When in standby, the toy can be re-activated automatically by your cat's paw touching it. This smart feature ensures continuous engagement without constant manual intervention.

TOUCH ACTIVATION SMART STANDBY

Pat it to active game



Works 5 mins enter
standby mode



Touch Activated



The toy's smart standby feature, activating after 5 minutes of play and re-activating upon touch, indicated by a 'Touch Activated' chip icon.

- **Hide and Seek Game:** The feather wand moves quickly, appearing and disappearing from under the double cloth cover. This lifelike movement, combined with a realistic mouse squeaky sound, is designed to captivate your cat's attention and stimulate their natural hunting instincts.

LIFELIKE MOUSE SOUND

Attracts the cat to find and stay active
fullfill your cat's natural hunting instincts

OFF

Quickly press twice
turn off the sound



The hide-and-seek game in action, with the feather stimulating the cat's curiosity. Also shown are the thickened double pad and replacement feather sticks.

- **Chirping Sound:** The toy has a built-in real mouse squeaky voice. This sound, along with flashing LED lights at night, further attracts your cat to play. To turn off the sound, quickly press the power button twice.

ULTRA LONG PLAYING TIME



Rechargeable Battery

Charging Time: 2 hours

Low Battery: Blink red



A cat engaging with the toy, which produces lifelike mouse sounds to attract attention. The image also indicates how to turn off the sound by pressing the button twice.

MAINTENANCE

To ensure the longevity and optimal performance of your Oxawo Interactive Cat Toy, please follow these maintenance guidelines:

- **Charging:** Recharge the toy using the provided Type-C cable when the battery is low. A blinking red light indicates a low battery. A full charge typically takes 2-3 hours.

HIDE AND SEEK GAME PLAY

The prey keeps hiding and exposing stimulating the cat's curiosity to chase the feather



The toy's rechargeable battery, indicating a charging time of 2 hours and a blinking red light for low battery status.

- **Cleaning:** Gently wipe the surface of the toy with a soft, damp cloth. Do not immerse the toy in water.
- **Feather Replacement:** The feather wands are designed to be replaceable. If the feather becomes worn or damaged, replace it with a new one to maintain your cat's interest. Replacement feather sticks are available separately.
- **Storage:** When not in use for extended periods, store the toy in a cool, dry place away from direct sunlight.

TROUBLESHOOTING

If you encounter any issues with your Oxawo Interactive Cat Toy, please refer to the following common solutions:

Problem	Possible Cause / Solution
Toy does not turn on.	Ensure the toy is fully charged. Connect it to the Type-C charger for 2-3 hours. Press and hold the power button for 2 seconds to turn it on.
Feather wand is not moving.	Check if the toy is powered on and not in standby mode. If in standby, ensure your cat's paw touches the toy to re-activate it. Verify the feather stick is correctly installed. Battery might be low; recharge the device.
No chirping sound.	The sound might be turned off. Quickly press the power button twice to toggle the sound on/off. Ensure the toy is powered on.
Toy enters standby too quickly.	The toy is designed to enter standby after 5 minutes of operation to conserve battery and prevent overstimulation. It will re-activate upon touch. This is normal operation.

If the problem persists, please contact customer support for assistance.

PRODUCT SPECIFICATIONS

Feature	Detail
Brand	Oxawo
Model Name	LP43 CAT TOY
Item Model Number	LP43
Color	BLUE
Item Weight	9.3 ounces (265 Grams)
Product Dimensions (LxWxH)	2.3 x 5 x 5 inches
Battery Capacity	1200 mAh (Rechargeable)
Charging Time	2-3 hours
Working Modes	Normal, Active, Interactive
Included Components	Cat toy x1, Type-C charging cable
Manufacturer	LEPLE

HIDE-AND-SEEK BLANKET CAT TOYS



Key features of the Oxawo Hide-and-Seek Blanket Cat Toy, including 1200 mAh battery, auto on/off, mouse sound, USB charging, touch activation, and 3 working modes.

WARRANTY INFORMATION

The Oxawo Interactive Cat Toy comes with a **1-year guarantee** from the manufacturer. This warranty covers defects in materials and workmanship under normal use. Please retain your proof of purchase for warranty claims.

For any warranty-related inquiries or claims, please contact our customer support team.

CUSTOMER SUPPORT

At Oxawo, we are committed to providing excellent customer service. If you have any questions, concerns, or require technical assistance, our support team is ready to help.

- **Professional Support:** We offer 7*24H professional customer support.
- **Hassle-Free:** Enjoy hassle-free replacement or return processes.
- **Faster Response:** For quicker assistance, please provide your order number when contacting us.

The Oxawo care team is waiting for you.



We care for you

- **Hassle-free replace/return.**
- **7*24H professional customer support.**
- **Send order number response faster**
- **Oxawo care team is waiting for you.**

Oxawo customer support representatives ready to assist with inquiries.