

## OMAIC NS-RCFNA-21

# OMAIC NS-RCFNA-21 Replacement Voice Remote Control User Manual

FOR INSIGNIA, TOSHIBA, AND PIONEER SMART TVs

## 1. SETUP

---

### 1.1 Battery Installation

The OMAIC NS-RCFNA-21 remote control requires two AAA batteries (not included) for operation. Follow these steps to install them:

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards to open the compartment.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the indicators inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.



*Image showing the battery compartment of the remote control. The back cover slides off to reveal slots for two AAA batteries. Arrows indicate the direction to insert and remove batteries.*

## 1.2 Pairing the Remote with Your Smart TV

To enable full functionality, including voice control, the remote must be paired with your compatible Smart TV. Follow the on-screen instructions or these general steps:

1. Ensure your TV is powered on.
2. Insert two AAA batteries into the remote control as described above.
3. Press and hold the **Home** button on the remote for approximately 10-15 seconds, or until the indicator light on the remote begins to flash.
4. On your TV, navigate to the **Settings** menu.
5. Select **Controllers & Bluetooth Devices**.
6. Choose **TV Remotes**, then **Add New Remote**.
7. Your TV will begin searching for the new remote. Select the OMAIC remote from the list when it appears.
8. A confirmation message will appear on your TV screen once pairing is successful.

**Battery Installation, please insert 2\***AAA** batteries (not included)**



*Diagram illustrating the steps to pair the remote control with a Smart TV. Step 1 shows inserting batteries and pressing specific buttons to initiate pairing. Step 2 shows navigating TV settings to 'Controllers & Bluetooth Devices' and 'Add New Remote'. Step 3 shows the TV searching for the new remote.*

Your browser does not support the video tag.

*Video demonstrating the setup process for the OMAIC Replacement Remote Control, highlighting key steps for successful pairing with a compatible Smart TV.*

## 2. OPERATING THE REMOTE

---

### 2.1 Button Functions

The OMAIC NS-RCFNA-21 remote control features a user-friendly layout with dedicated buttons for various functions:

# Not compatible with the following remote controls and devices



NOT for insignia remote



NOT for toshiba remote



NOT for Pioneer remote



NOT for TV Cube



NOT for TV Stick

Detailed diagram of the remote control with each button labeled and its corresponding function described, including Power, Voice Button, Navigation, Enter, Return, Home, Menu, Play/Pause, Rewind, Fast Forward, Channel (+/-), Volume (+/-), Guide Button, Mute, Recents, Settings, and Preset App Buttons.

- **Power Button:** Turns the TV on or off.
- **Microphone/Voice Button:** Activates voice control for commands and searches.
- **Navigation Ring (Up/Down/Left/Right):** Navigates through menus and content.
- **Enter/Select Button:** Confirms selections.
- **Return Button:** Goes back to the previous screen.
- **Home Button:** Returns to the TV's home screen.
- **Menu Button:** Accesses additional menu options.
- **Play/Pause, Rewind, Fast Forward:** Controls media playback.
- **Volume Up/Down:** Adjusts the TV volume.
- **Channel Up/Down:** Changes TV channels.
- **Mute Button:** Mutes or unmutes the TV audio.
- **Settings Button:** Opens the TV settings menu.
- **Recents Button:** Displays recently used apps or content.
- **Preset App Buttons (Video, Netflix, Disney+, Hulu):** Provides direct access to these streaming applications.

## 2.2 Voice Control Functionality

The remote features integrated voice control for convenient operation:

1. Press and hold the **Microphone/Voice Button** located near the top of the remote.
2. Speak your command clearly into the microphone. Examples include: "Play [movie title]", "Open Netflix", "Search for [genre] movies", or "Go to channel [number]".
3. Release the button when you are finished speaking. The TV will process your command.



*Image depicting the remote control with the voice button highlighted, showing sound waves emanating from it, and text bubbles with example voice commands like 'Play the music' and 'Find action movies'.*

## 2.3 Dedicated Shortcut Buttons

Quickly access your favorite streaming services with the four dedicated shortcut buttons at the bottom of the remote:

- Press the **Video** button to launch the Video app.
- Press the **Netflix** button to launch the Netflix app.
- Press the **Disney+** button to launch the Disney+ app.
- Press the **Hulu** button to launch the Hulu app.



# Easy your life

4 app shortcut program buttons



*Image highlighting the four dedicated shortcut buttons on the remote control for quick access to popular streaming services: Video, Netflix, Disney+, and Hulu.*

## 3. COMPATIBILITY

---

### 3.1 Compatible TV Models

This replacement voice remote control is compatible with a wide range of Smart TV models, including:

- Insignia F30 / F20 / F50 / DF710 / DF711 / DF310 / DF510 / DF311 / DF620 TV Series
- Toshiba LF711 / LF621U / LF421U / LF221U / C350 / A810U / A710U / M550 / V35 TV Series
- Omni Series, 2-Series, 4-Series Smart TVs
- Pioneer PN450 / PN651 / PN851 / PN951 TV Series
- TCL Q691F, S551F, Q651F, Q570F, S450F, S350F, S35F, Q650F TV Series
- Hisense U6HF, QD6 TV Series

# Remote for **Insignia** / **Toshiba** / **Pioneer** Voice Smart TVs



Insignia

Toshiba

Pioneer

Voice Smarts TVs



Omni Series

4-Series

2-Series

Voice Smarts TVs



*Image displaying the remote control alongside a list of compatible TV brands and series, including Insignia, Toshiba, Pioneer, Omni Series, 2-Series, 4-Series Smart TVs, TCL, and Hisense.*

## 3.2 Incompatible Devices

This remote control is specifically designed for the listed Smart TV models and is **NOT** compatible with the following:

- Older Insignia remotes (e.g., NS-RCFNA-19)
- Older Toshiba remotes (e.g., CT-95018, CT-RC1US-19)
- Older Pioneer remotes
- Amazon Fire TV Cube
- Amazon Fire TV Stick



Image showing various remote controls and devices that are not compatible with this replacement remote, including older Insignia/Toshiba/Pioneer remotes, TV Cube, and TV Stick.

## 4. SPECIFICATIONS

Feature	Detail
Product Dimensions	6.2 x 1.5 x 0.69 inches
Item Weight	1.41 ounces
Model Number	NS-RCFNA-21
Power Source	2 AAA batteries (required)
Special Feature	Voice Search
Operating Distance	Up to 40 feet (tested)
Button Durability	Supports over 150,000 total clicks



## 5. TROUBLESHOOTING

---

### 5.1 Remote Not Responding

- **Check Batteries:** Ensure batteries are correctly inserted and have sufficient charge. Replace with fresh AAA batteries if needed.
- **Re-pair Remote:** If the remote becomes unresponsive, try re-pairing it with your TV using the steps outlined in Section 1.2.
- **Remove Obstructions:** Ensure there are no physical obstructions between the remote control and your TV's infrared receiver.

### 5.2 Voice Control Not Working

- **Verify Pairing:** Voice control requires successful Bluetooth pairing. Confirm the remote is paired correctly (refer to Section 1.2).
- **Check TV Settings:** Ensure that the voice assistant feature is enabled in your TV's settings.
- **Speak Clearly:** Speak directly into the microphone on the remote, holding the voice button down while speaking.

### 5.3 Buttons Lagging or Delayed Response

- **Replace Batteries:** Low battery power can cause delayed responses. Replace batteries with new ones.
- **Reduce Interference:** Ensure other electronic devices are not causing interference. Try moving closer to the TV.

## 6. WARRANTY AND SUPPORT

---

### 6.1 After-Sale Service

OMAIC offers a 150-day after-sale service for this product. If you encounter any questions or issues with your order, please do not hesitate to contact our customer support directly. We are committed to responding to your inquiries within 12 hours.

Your browser does not support the video tag.

*Video demonstrating the functionality of the OMAIC Replacement Voice Remote Control, showcasing its responsiveness and ease of use with a compatible Smart TV.*

Your browser does not support the video tag.

*Short video clip highlighting the 'Perfect!' performance of the OMAIC Replacement Voice Remote Control, demonstrating its seamless integration and operation with a Smart TV.*

#### PAIRING REMOTE STEP

Press the Home button and Hold about 10-15seconds. Until the LED Starts to rapidly flash then release, waiting about 60 seconds (Entering Pairing mode. LED Flash), then the remote should automatically Pair with your TV, the TV will display remote, connecting success. When the light goes out if the remote still not Pair success, Please **Firstly Remember:**

1. Unplug the power cord and then plug back the power cord of amazon Fire device.
2. Remove the battery and insert back the battery of remote.
3. Then please Repeat the above pairing step.

Press the Home button and Hold about 10-15 seconds. Until the LED Starts to rapidly flash then release, waiting about 60 seconds (Entering Pair mode), then the remote should automatically pair with your TV.



#### [Quick Setup Guide: Pairing Your Insignia/Toshiba Fire TV Remote](#)

Step-by-step instructions for pairing your Insignia or Toshiba Fire TV Edition remote control, including FCC compliance information and troubleshooting tips.

#### PAIRING REMOTE STEP

Press the Home button and Hold about 10-15seconds. Until the LED Starts to rapidly flash then release, waiting about 60 seconds (Entering Pairing mode. LED Flash), then the remote should automatically Pair with your TV, the TV will display remote, connecting success. When the light goes out if the remote still not Pair success, Please **Firstly Remember:**

1. Unplug the power cord and then plug back the power cord of amazon Fire device.
2. Remove the battery and insert back the battery of remote.
3. Then please Repeat the above pairing step.

Press the Home button and Hold about 10-15 seconds. Until the LED Starts to rapidly flash then release, waiting about 60 seconds (Entering Pair mode), then the remote should automatically pair with your TV.



#### [Pairing Guide for Insignia and Toshiba Fire TV Edition Remotes](#)

Step-by-step instructions for pairing your Insignia or Toshiba Fire TV Edition remote control, including troubleshooting tips and FCC compliance information.

#### PAIRING REMOTE STEP

Press the Home button and Hold about 10-15seconds. Until the LED Starts to rapidly flash then release, waiting about 60 seconds (Entering Pairing mode. LED Flash), then the remote should automatically Pair with your TV, the TV will display remote, connecting success. When the light goes out if the remote still not Pair success, Please **Firstly Remember:**

1. Unplug the power cord and then plug back the power cord of amazon Fire device.
2. Remove the battery and insert back the battery of remote.
3. Then please Repeat the above pairing step.

Press the Home button and Hold about 10-15 seconds. Until the LED Starts to rapidly flash then release, waiting about 60 seconds (Entering Pair mode), then the remote should automatically pair with your TV.



#### [Pairing Guide for Insignia and Toshiba Fire TV Edition Remotes](#)

Step-by-step instructions for pairing your Insignia or Toshiba Fire TV Edition remote control with your TV. Includes troubleshooting tips and FCC compliance information.

#### PAIRING REMOTE STEP

Press the Home button and Hold about 10-15seconds. Until the LED Starts to rapidly flash then release, waiting about 60 seconds (Entering Pairing mode, LED Flash), then the remote should automatically Pair with your TV, the TV will display remote, connecting success. When the light goes out if the remote still not Pair success, Please **Firstly Remember:**

1. Unplug the power cord and then plug back the power cord of amazon Fire device.
2. Remove the battery and insert back the battery of remote.
3. Then please Repeat the above pairing step.

Press the Home button and Hold about 10-15 seconds. Until the LED Starts to rapidly flash then release, waiting about 60 seconds (Entering Pair mode), then the remote should automatically pair with your TV.



### [Pairing Guide & FCC Information for BLUEVOICERC Replacement Remote \(Insignia/Toshiba Fire TV\)](#)

A concise guide for pairing your BLUEVOICERC replacement remote control with Insignia and Toshiba Fire TV Edition TVs, including troubleshooting and regulatory details. Model numbers: NS-RCFNA-19, NS-RCFNA-21, CT-RC1US-21.

#### PAIRING REMOTE STEP

Press the Home button and Hold about 10-15seconds. Until the LED Starts to rapidly flash then release, waiting about 60 seconds (Entering Pairing mode, LED Flash), then the remote should automatically Pair with your TV, the TV will display remote, connecting success. When the light goes out if the remote still not Pair success, Please **Firstly Remember:**

1. Unplug the power cord and then plug back the power cord of amazon Fire device.
2. Remove the battery and insert back the battery of remote.
3. Then please Repeat the above pairing step.

Press the Home button and Hold about 10-15 seconds. Until the LED Starts to rapidly flash then release, waiting about 60 seconds (Entering Pair mode), then the remote should automatically pair with your TV.



### [Quick Setup Guide: VOICE-RC Replacement Remote for Insignia & Toshiba Fire TV Edition](#)

Step-by-step instructions for pairing the VOICE-RC replacement remote control with Insignia and Toshiba Fire TV Edition TVs. Includes troubleshooting tips and FCC compliance information.

#### PAIRING REMOTE STEP

Press the Home button and Hold about 10-15seconds. Until the LED Starts to rapidly flash then release, waiting about 60 seconds (Entering Pairing mode, LED Flash), then the remote should automatically Pair with your TV, the TV will display remote, connecting success. When the light goes out if the remote still not Pair success, Please **Firstly Remember:**

1. Unplug the power cord and then plug back the power cord of amazon Fire device.
2. Remove the battery and insert back the battery of remote.
3. Then please Repeat the above pairing step.

Press the Home button and Hold about 10-15 seconds. Until the LED Starts to rapidly flash then release, waiting about 60 seconds (Entering Pair mode), then the remote should automatically pair with your TV.



### [Pairing Guide for Insignia and Toshiba Fire TV Edition Remotes](#)

Step-by-step instructions for pairing your Insignia or Toshiba Fire TV Edition remote control, including troubleshooting tips and FCC compliance information.