

Huuger B0DP2SJPWD

Huuger 70-Inch 12-Drawer Dresser & TV Stand User Manual

Model: B0DP2SJPWD | Brand: Huuger

IMPORTANT SAFETY INFORMATION

Please read and understand all instructions before assembly and use. Keep this manual for future reference.

- **Anti-Tip Kit:** Always install the included anti-tip kit to prevent serious injury from furniture tip-over. Children can be seriously injured or die from furniture tip-over.
- **Weight Limits:** Do not exceed the weight capacity of the dresser top or drawers. Refer to specifications for details.
- **Assembly:** Ensure all parts are securely fastened before use. Do not use power tools for assembly unless specified, as overtightening may damage components.
- **Placement:** Place the dresser on a level surface. Use the adjustable feet to ensure stability and prevent wobbling.
- **Children:** Do not allow children to climb on or play with the dresser or drawers. Keep small parts away from children during assembly.
- **Maintenance:** Regularly check all connections and fasteners to ensure they remain tight.



This image illustrates the anti-tipping kit for wall attachment, the internal supporting bars for structural integrity, and the adjustable feet for leveling the dresser on uneven surfaces.

PACKAGE CONTENTS

Verify all components are present before beginning assembly. If any parts are missing or damaged, please contact customer support.

Parts List

(Refer to the assembly material images for detailed part identification.)



This image displays all the individual components and hardware included in the package, laid out for easy identification prior to assembly.

Hardware List

(Refer to the hardware list images for detailed hardware identification.)



This image provides a close-up view of all the screws, dowels, and other small hardware items, organized and labeled for easy reference during assembly.

ASSEMBLY INSTRUCTIONS

Follow these steps carefully for proper assembly. It is recommended to assemble the unit on a soft, clean surface to prevent scratches.

Step 1: Assemble the Frame Base

Attach the adjustable feet to the bottom frame pieces. Connect the side frames using the designated crossbars and screws. Ensure all connections are snug but do not overtighten until the entire frame is assembled.

Your browser does not support the video tag.

This video demonstrates the initial steps of assembling the dresser's metal frame, including attaching the adjustable feet and connecting the main support bars.

Step 2: Install Drawer Slides

Secure the drawer slides to the designated slots on the frame. Pay attention to the orientation of the slides (left and right) to ensure smooth drawer operation.

12 SPACIOUS DRAWERS

Sort out many clothes, toys, and so on



This image shows the process of attaching the drawer slides to the metal frame, highlighting the correct alignment and fastening points.

Step 3: Attach Top Panels

Carefully place the wooden top panels onto the assembled frame. Secure them with the provided screws. Ensure the panels are aligned evenly.



Reference TV size: 75"

This image illustrates the placement and securing of the wooden top panels onto the dresser frame, ensuring a flush and stable surface.

Step 4: Prepare Fabric Drawers


Unfold each fabric drawer and insert the bottom panel to create a sturdy box. Attach the handles to the front of each drawer using the provided screws.



This image details the assembly of a fabric drawer, including unfolding, inserting the base, and attaching the handle.

Step 5: Insert Drawers

Slide the assembled fabric drawers into their respective slots on the dresser frame. Ensure they glide smoothly.

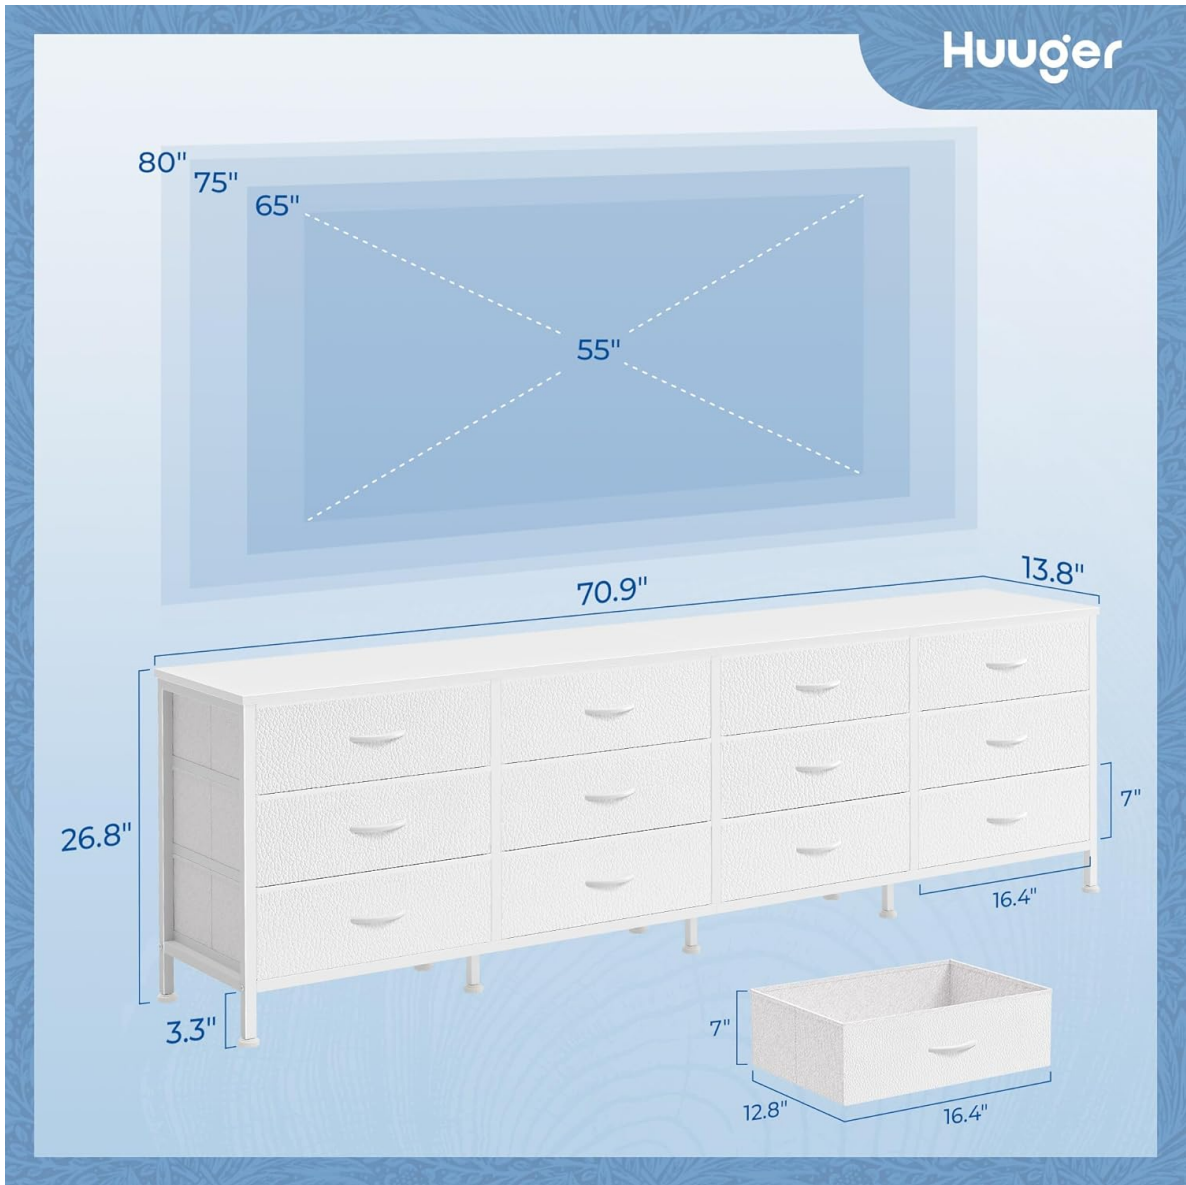

This image displays the fabric drawers being slid into their designated compartments within the dresser frame.

Step 6: Install Anti-Tip Kit

For safety, attach the anti-tip kit to the back of the dresser and secure it to a wall stud. Follow the instructions provided with the kit.



This image highlights the anti-tipping kit, demonstrating its attachment to the dresser and the wall for enhanced stability and safety.

OPERATING INSTRUCTIONS

Using the Drawers

The 12 fabric drawers are designed for smooth operation. Pull gently on the handles to open and push firmly to close. Avoid overloading drawers to maintain their shape and functionality.



This image displays several open drawers, demonstrating the generous storage capacity for clothes, toys, books, and other sundries.

Adjustable Feet

The dresser features 8 adjustable feet. Rotate the feet clockwise or counter-clockwise to adjust the height and level the dresser on uneven floors. This ensures stability and protects your floor from scratches.



This image provides a detailed view of the adjustable feet, illustrating how they can be rotated to stabilize the dresser on uneven surfaces.

TV Stand Functionality

The sturdy wooden top can accommodate TVs up to 80 inches. Ensure the TV's base fits within the dresser's dimensions (70.9"W x 13.8"D) and that the weight does not exceed the top's capacity.



This image shows the dresser functioning as a TV stand, with a large television placed securely on its wooden top.

MAINTENANCE AND CARE

- **Cleaning:** Wipe the wooden top and metal frame with a damp cloth. For fabric drawers, spot clean with a mild detergent and allow to air dry. Do not machine wash.
- **Avoid Harsh Chemicals:** Do not use abrasive cleaners or harsh chemicals, as they may damage the finish or fabric.
- **Regular Checks:** Periodically check all screws and connections to ensure they are tight. Retighten if necessary.
- **Sunlight Exposure:** Avoid prolonged direct sunlight exposure to prevent fading of the fabric drawers.



This image presents the dresser in a bedroom, emphasizing its neat and functional design, which can be maintained with proper care.

TROUBLESHOOTING

Dresser is Wobbly

Ensure the dresser is on a level surface. Adjust the 8 leveling feet on the bottom of the frame until the unit is stable. Check that all assembly screws are tightened.

Drawers Do Not Slide Smoothly

Verify that the drawer slides are installed correctly and are not obstructed. Ensure the fabric drawers are not overloaded or misshapen.

Missing Parts

If any parts are missing upon arrival, please contact Huuger customer support with your product model number and a description of the missing part.

SPECIFICATIONS

- **Brand:** Huuger
- **Model:** B0DP2SJPWD
- **Product Dimensions:** 70.9"W x 13.8"D x 26.8"H
- **Drawer Dimensions (approx.):** 16.4"W x 13.8"D x 7"H (deep drawers)
- **Number of Drawers:** 12
- **Material:** Fabric, Metal, Wooden Top (MDF)

- **Color:** White
- **Assembly Required:** Yes (approx. 30 minutes)
- **Item Weight:** 47.2 pounds (21.43 kg)
- **Target Audience:** Adult



This diagram provides precise measurements for the overall dresser and its individual drawers, aiding in planning and placement.

WARRANTY AND SUPPORT

Huuger products are designed for quality and durability. For any questions, concerns, or warranty claims, please contact Huuger customer support directly. Keep your purchase receipt for proof of purchase.

Contact Information: Refer to your product packaging or the Huuger official website for the most up-to-date customer service contact details.

ADDITIONAL RESOURCES

Product Overview Video

Your browser does not support the video tag.

This video provides a general overview of the Huuger Long Dresser for Bedroom, showcasing its features and design.

Assembly Tips Video

Your browser does not support the video tag.

This video offers helpful tips and a visual guide on how to install the 12-drawer dresser, focusing on the assembly process.